
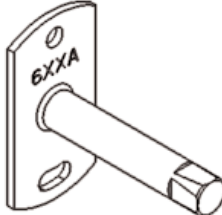



ITEMS INCLUDED		TOOLS REQUIRED	
DRY WALL ANCHOR		X 4	
TILE ANCHOR		X 4	
#8 SCREW		X 4	
MOUNTING BRACKET		X 2	
M5 X 3.5 SET SCREW		X 2	
2.5 MM HEX KEY		X 1	
DOUBLE POST TT HOLDER		X 1	
			PHILLIPS SCREW DRIVER
			PEN / PENCIL
			1/4" (6 mm) DRILL
			LEVEL SET
			HAMMER

INSTALLATION INSTRUCTIONS DOUBLE POST TT HOLDER

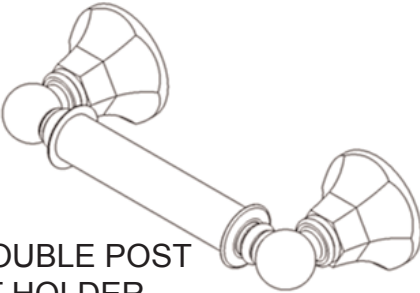


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
WWW.GINGERCO.COM
WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKETS

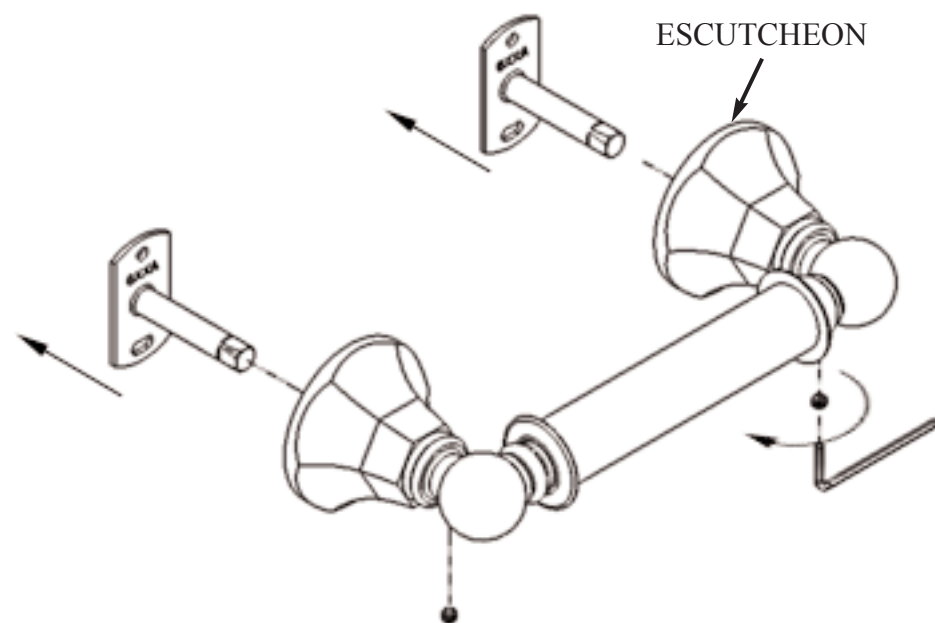


② ALIGN MOUNTING BRACKETS AND MARK LOCATION

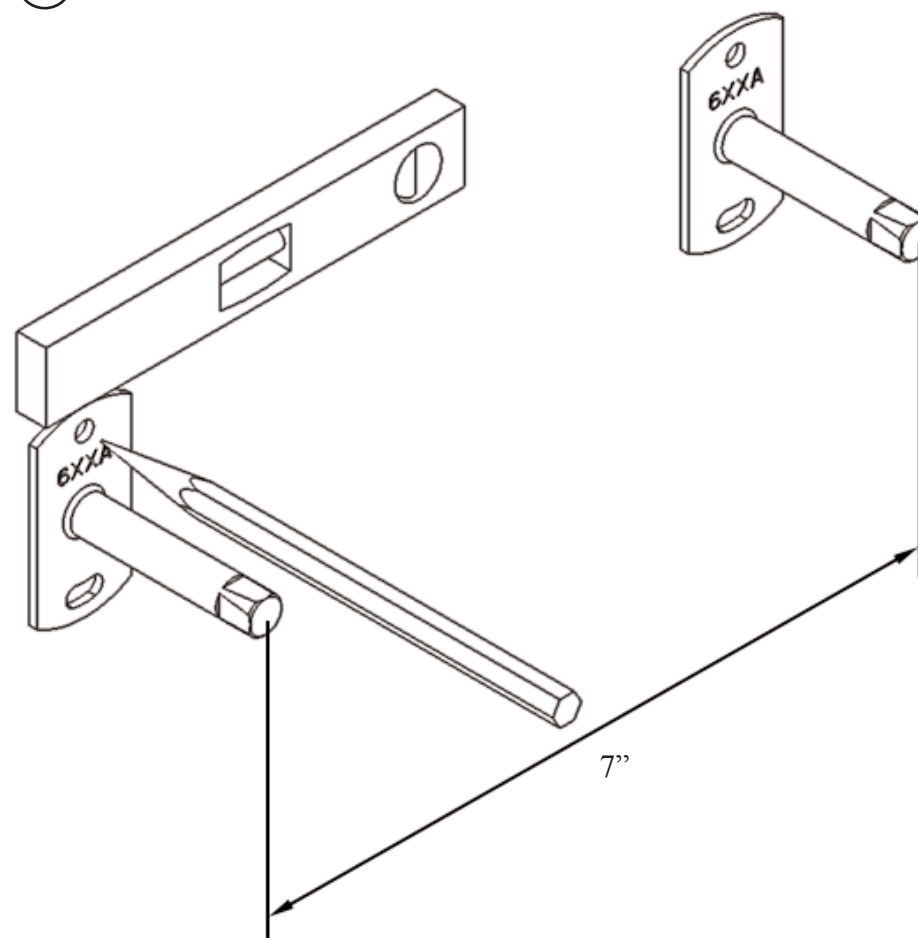


③ DRY WALL INSTALLATION

DO NOT DRILL

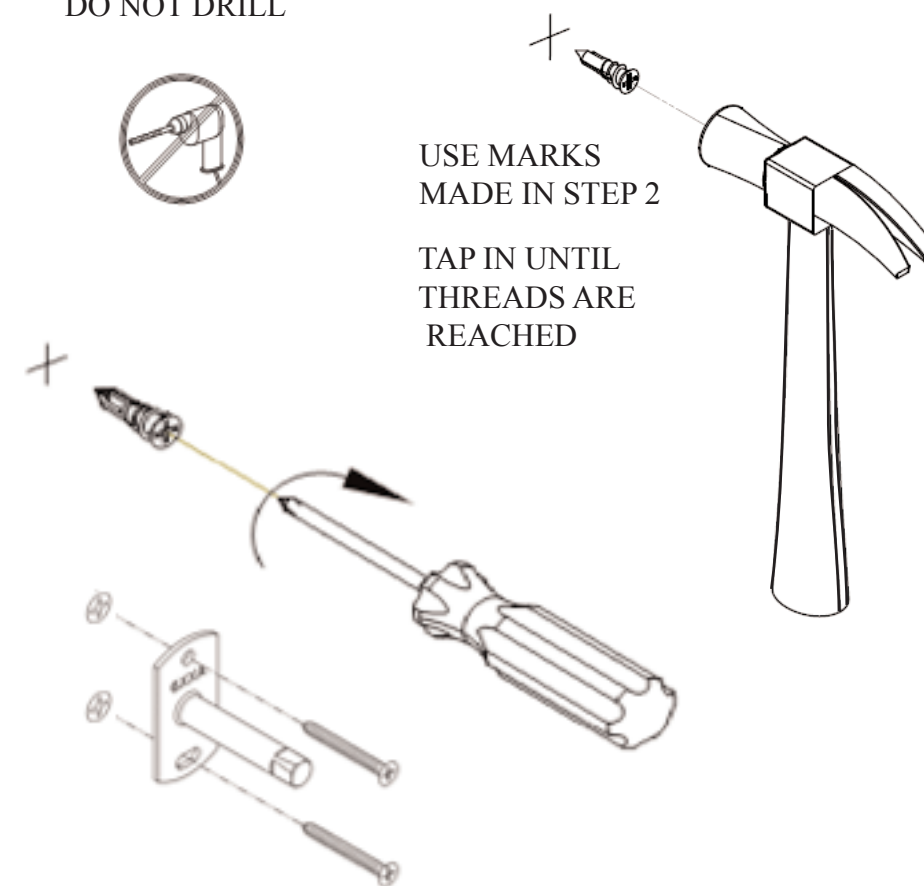

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

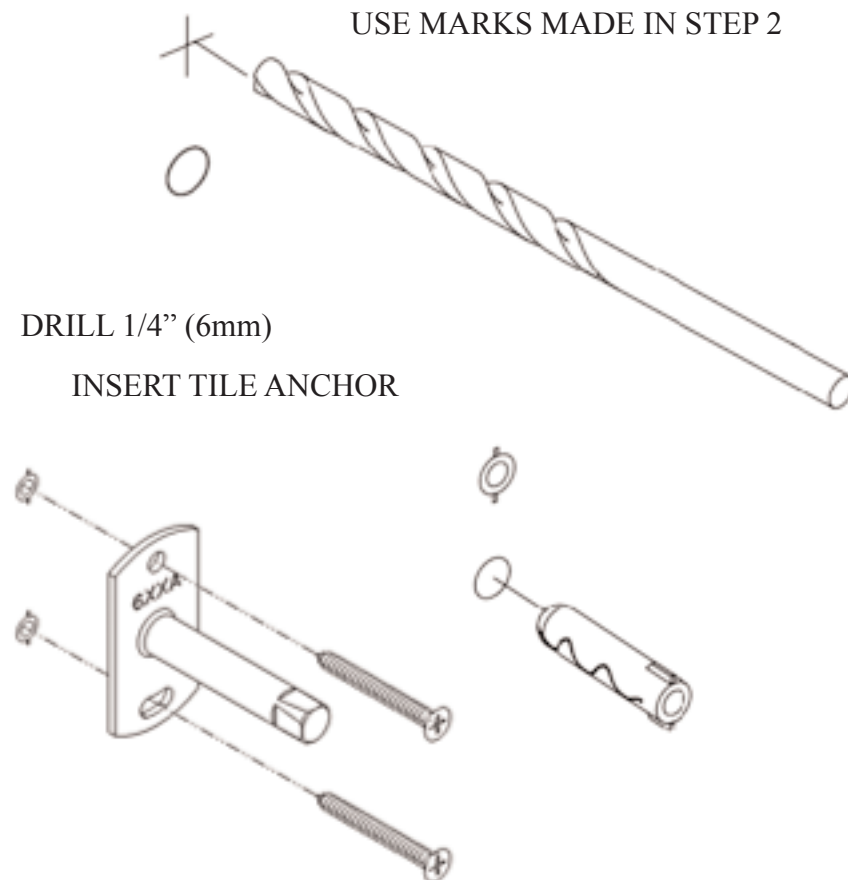

⑤ INSTALL PRODUCT ONTO BRACKETS

