
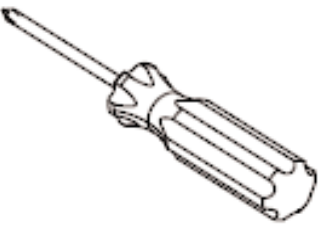
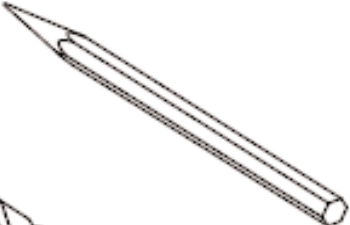
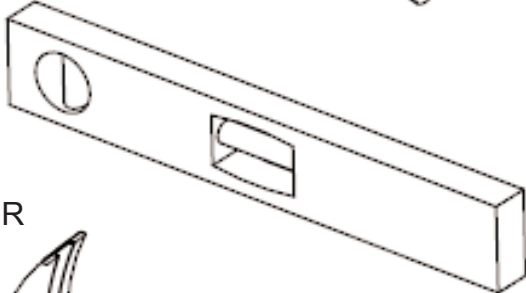
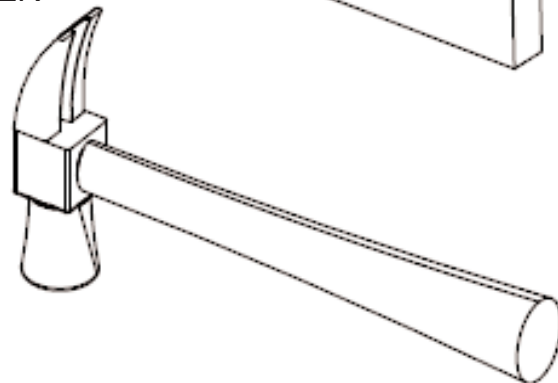



ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 2	PEN / PENCIL	
#8 SCREW		X 2	1/4" (6 mm) DRILL	
MOUNTING BRACKET		X 1	LEVEL SET	
M5 X 5 SET SCREW		X 1	HAMMER	
2.5 MM HEX KEY		X 1		
DOUBLE ROBE HOOK		X 1		

INSTALLATION INSTRUCTIONS DOUBLE ROBE HOOK

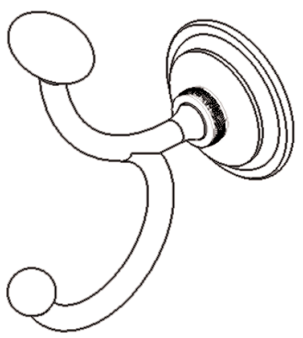


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
WWW.GINGERCO.COM
WWW.NEWPORTBRASS.COM

- ① REMOVE MOUNTING BRACKET AFTER LOOSENING THE ESCUTCHEON

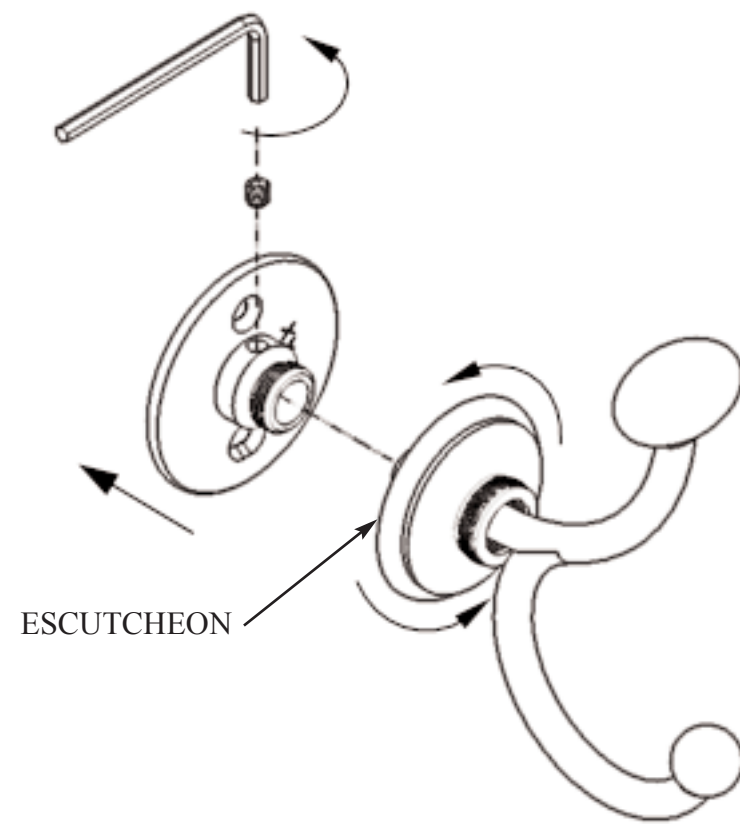


- ② ALIGN MOUNTING BRACKET AND MARK LOCATION

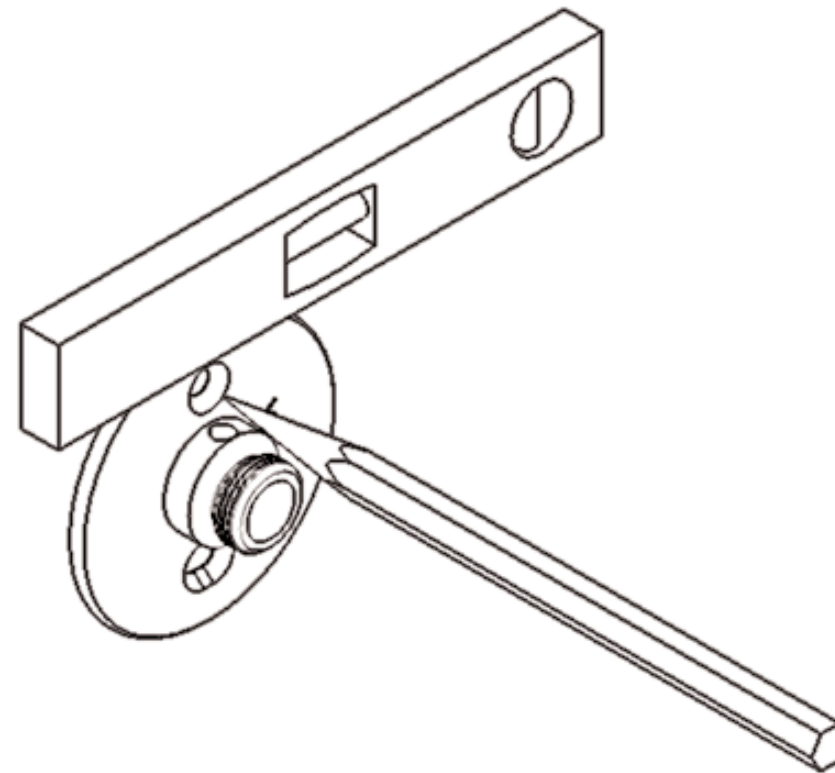


- ③ DRY WALL INSTALLATION

DO NOT DRILL

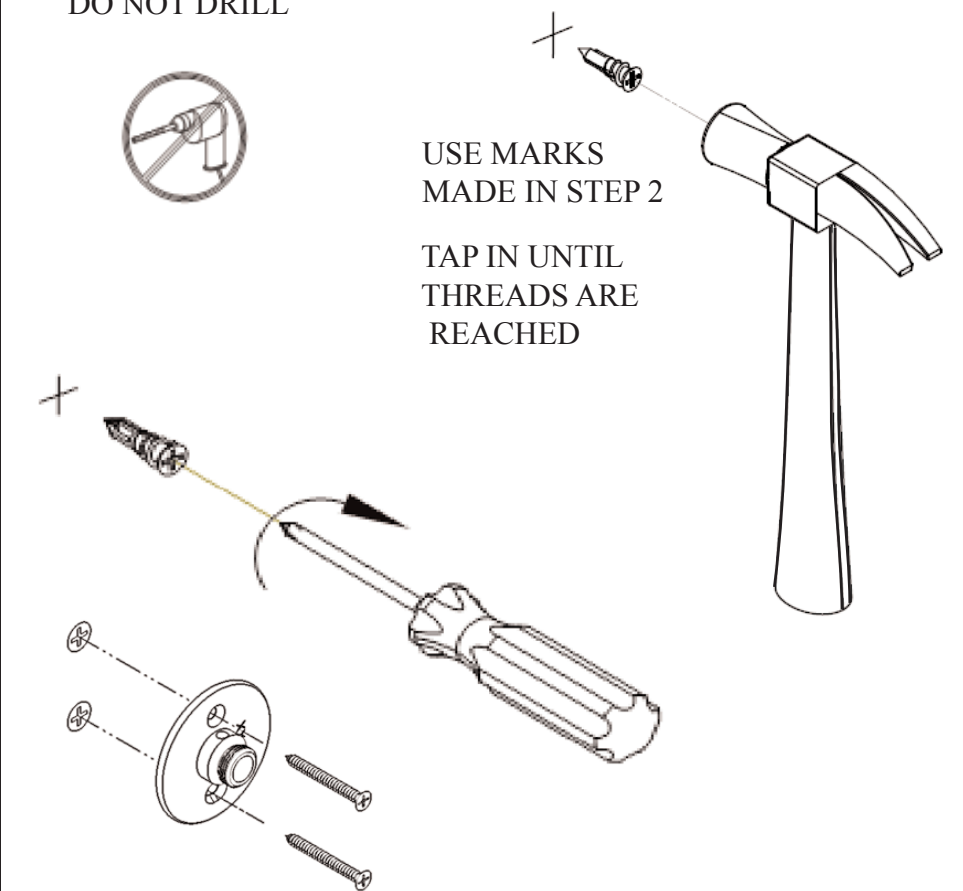

- ④ TILE OR SOLID WALL INSTALLATION

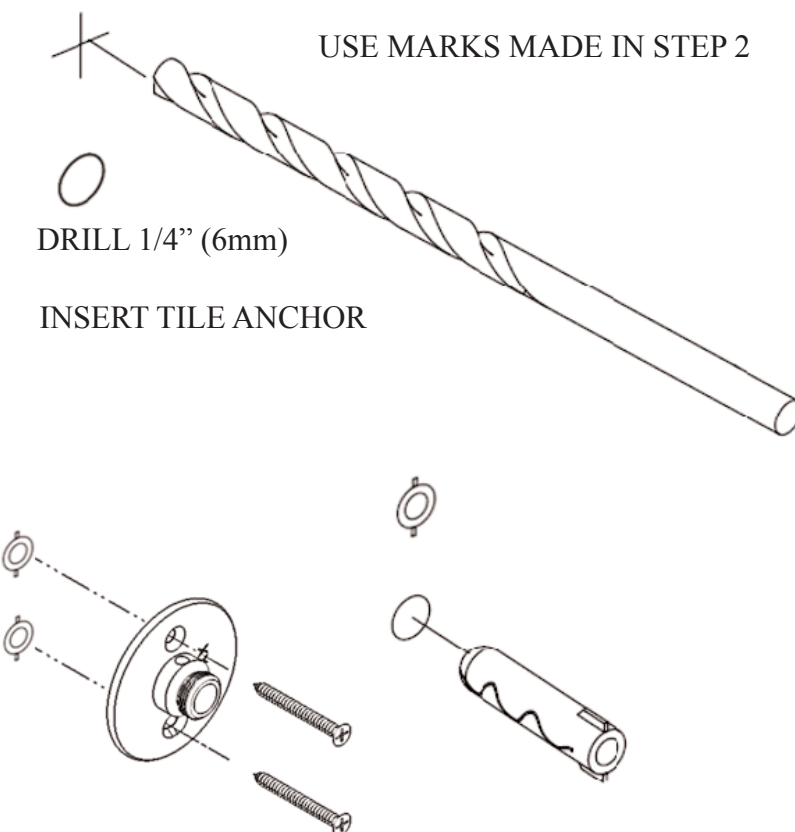

- ⑤ INSTALL PRODUCT ONTO BRACKET AND TIGHTEN THE ESCUTCHEON

