
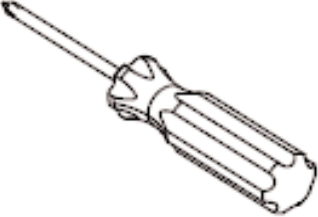
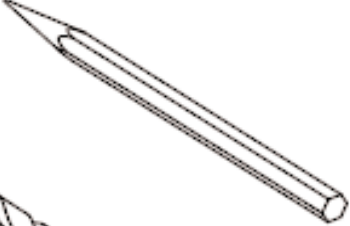
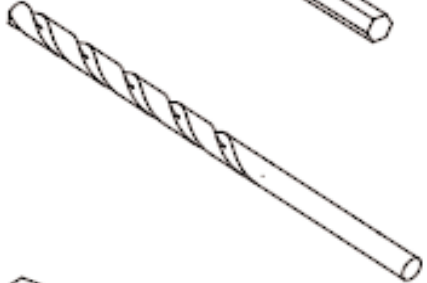
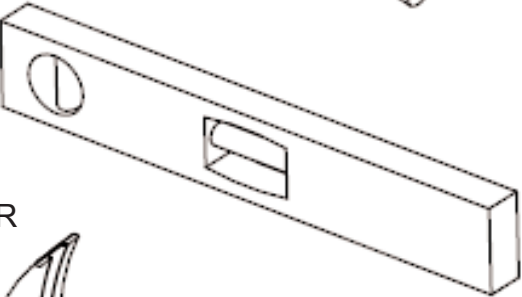
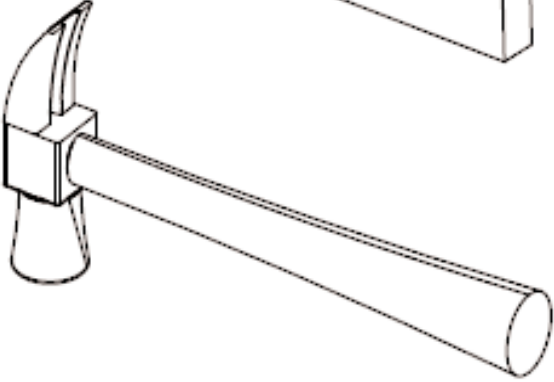


ITEMS INCLUDED	TOOLS REQUIRED
DRY WALL ANCHOR X 4 	PHILLIPS SCREW DRIVER 
TILE ANCHOR X 4 	PEN / PENCIL 
#8 SCREW X 4 	1/4" (6 mm) DRILL 
MOUNTING BRACKET X 2 	LEVEL SET 
M6 X 6 SET SCREW X 2 	HAMMER 
3 MM HEX KEY X 1 	
TOWEL BAR X 1 	


INSTALLATION INSTRUCTIONS

TOWEL BAR

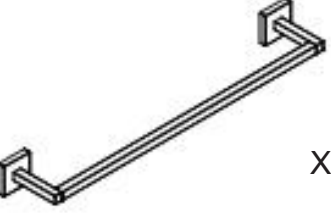


2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKETS

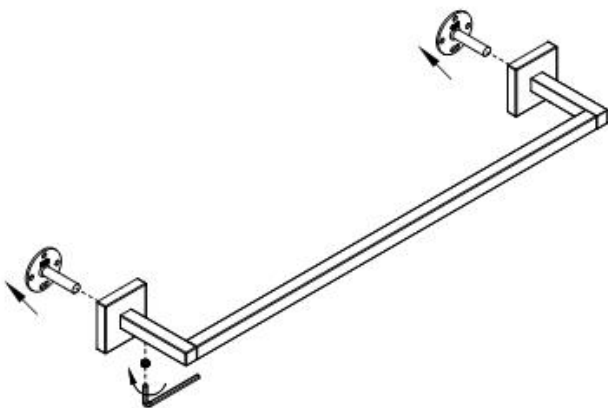


② ALIGN MOUNTING BRACKETS AND MARK LOCATION


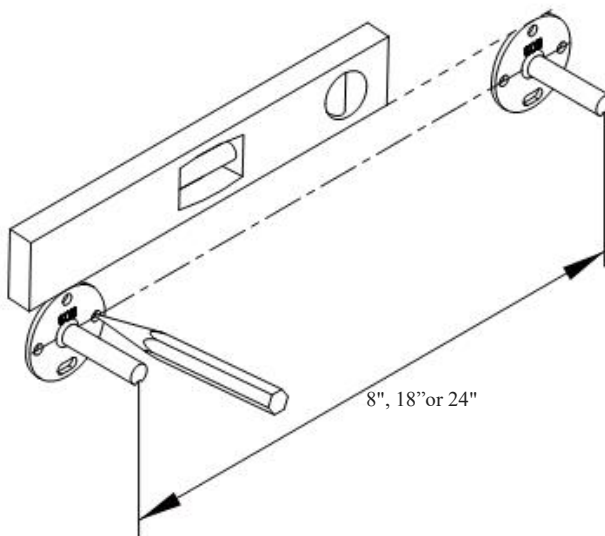


③ DRY WALL INSTALLATION

DO NOT DRILL

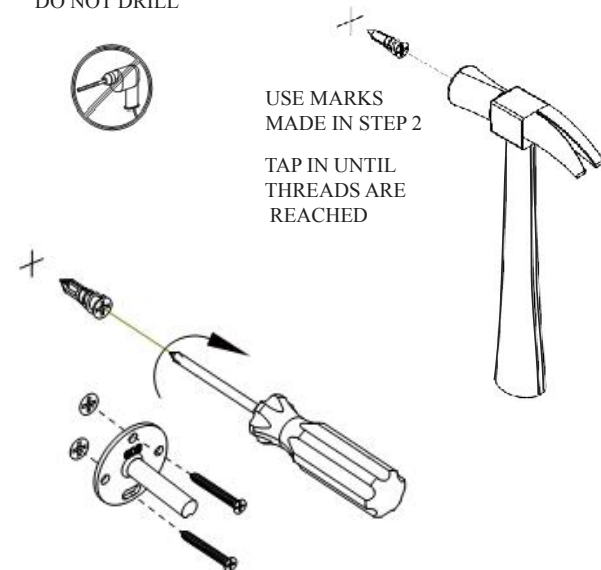

④ TILE OR SOLID WALL INSTALLATION

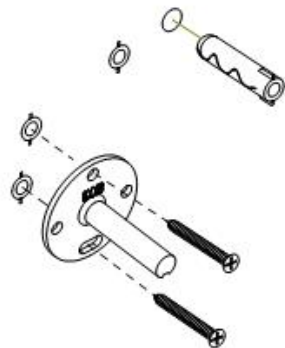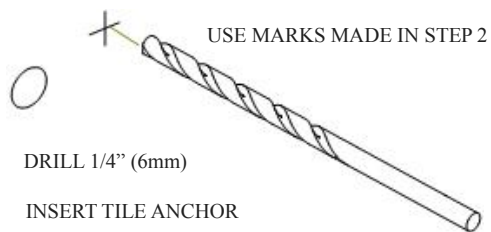

⑤ INSTALL PRODUCT ONTO BRACKETS

