
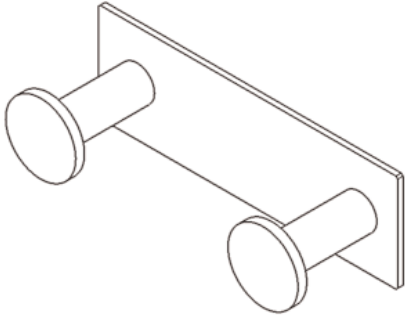
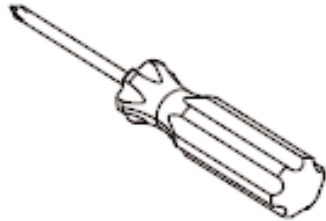
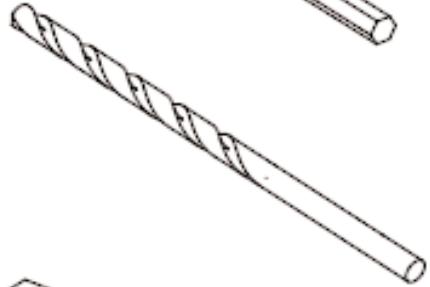
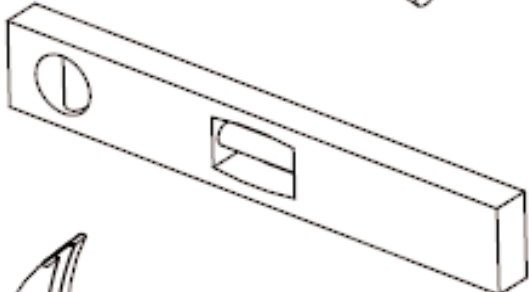



ITEMS INCLUDED		TOOLS REQUIRED	
DRY WALL ANCHOR		X 4	
TILE ANCHOR		X 4	
#8 SCREW		X 4	
MOUNTING BRACKET		X 2	
DOUBLE ROBE HOOK		X 1	
			PHILLIPS SCREW DRIVER
			
			PEN / PENCIL
			
			1/4" (6 mm) DRILL
			
			LEVEL SET
			
			HAMMER
			

INSTALLATION INSTRUCTIONS DOUBLE ROBE HOOK

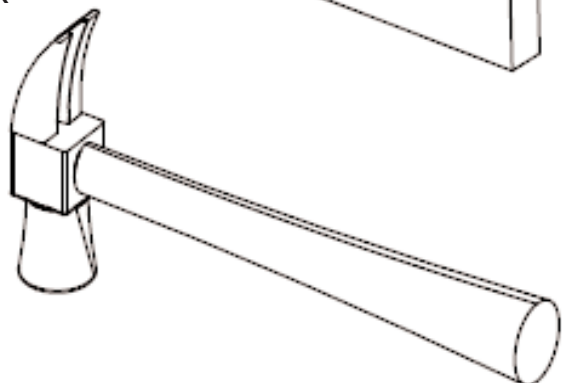


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
WWW.GINGERCO.COM
WWW.NEWPORTBRASS.COM

- ① REMOVE MOUNTING BRACKETS AFTER LOOSENING THE HOOK POST

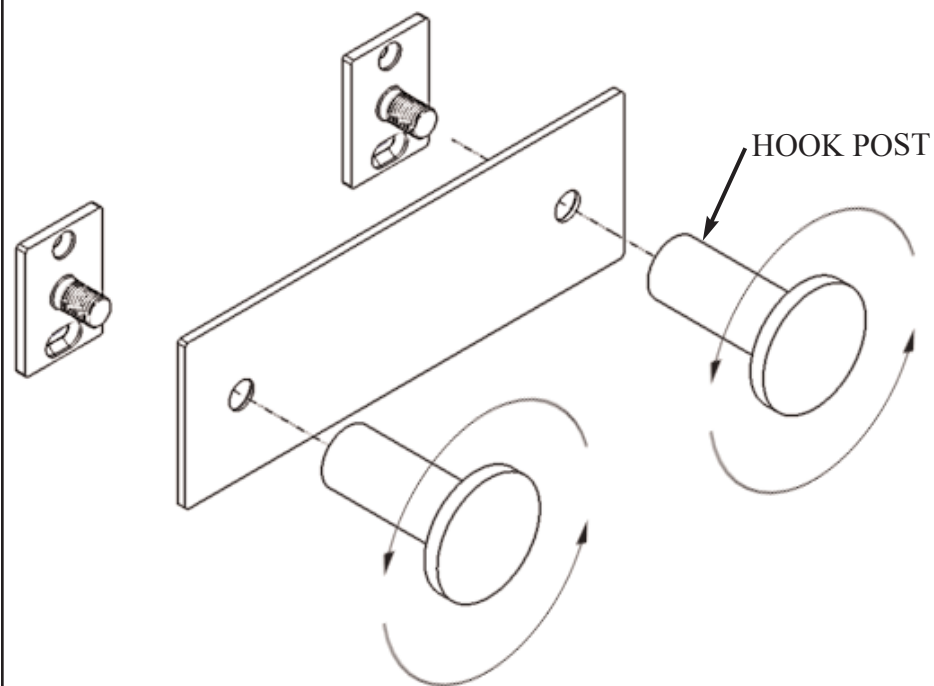


- ② ALIGN MOUNTING BRACKETS AND MARK LOCATION

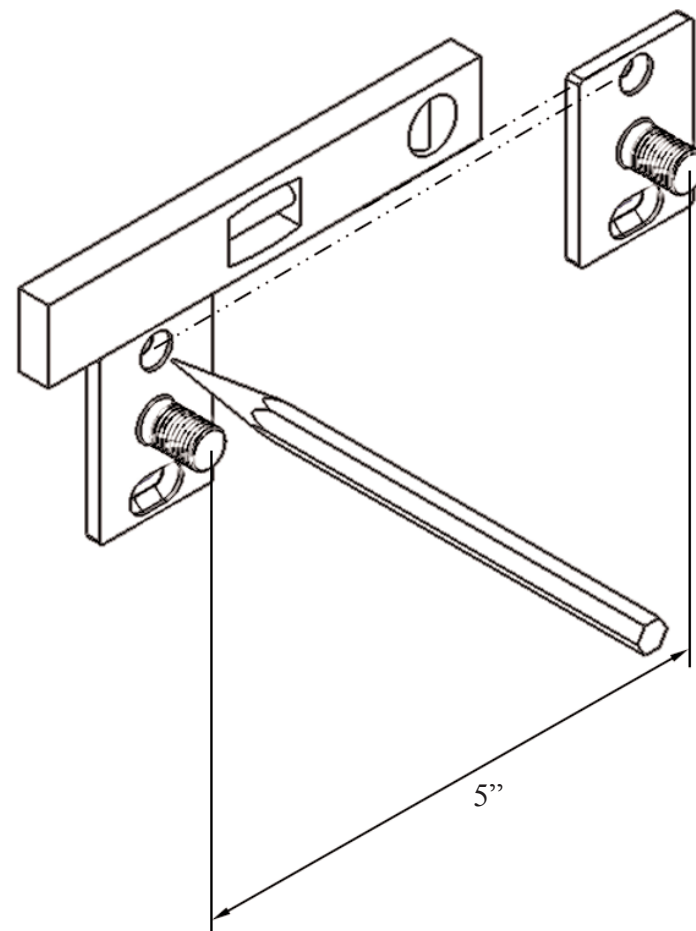



- ③ DRY WALL INSTALLATION

DO NOT DRILL

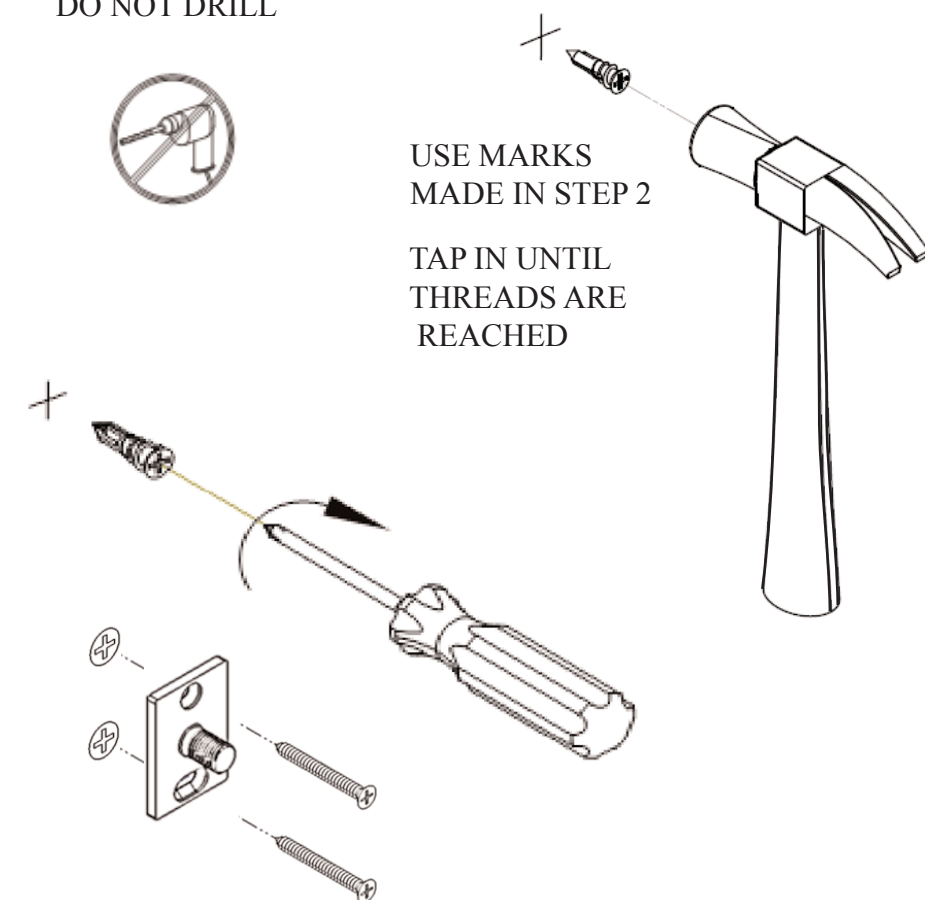

- ④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

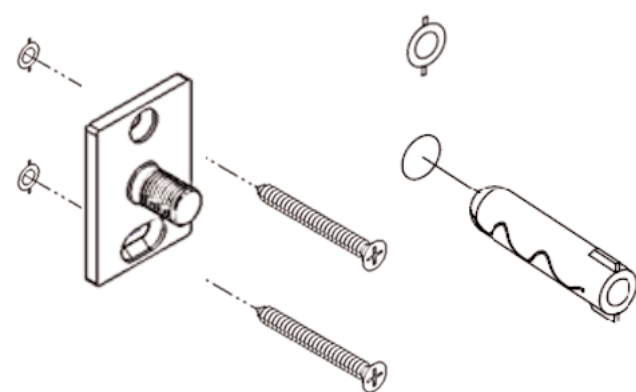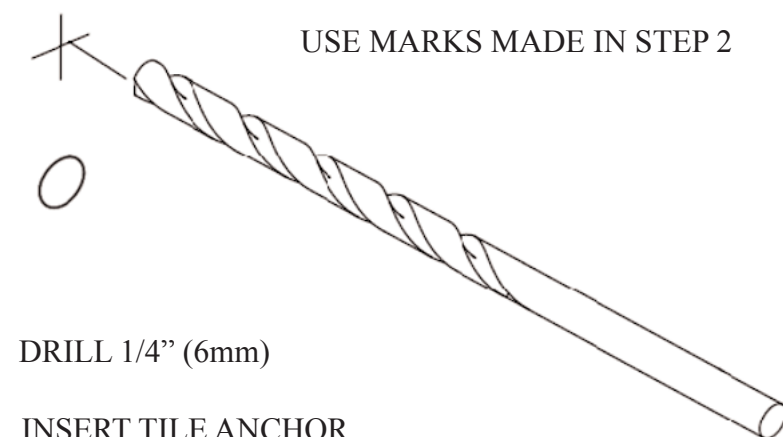

- ⑤ INSTALL PRODUCT ONTO BRACKETS AND TIGHTEN THE HOOK POST

