
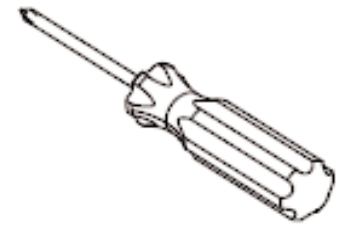
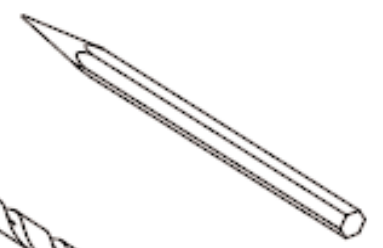
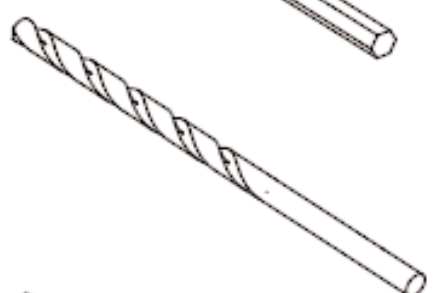
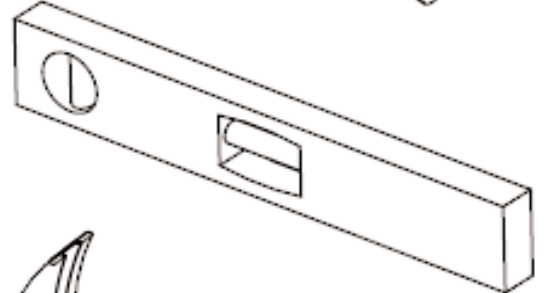
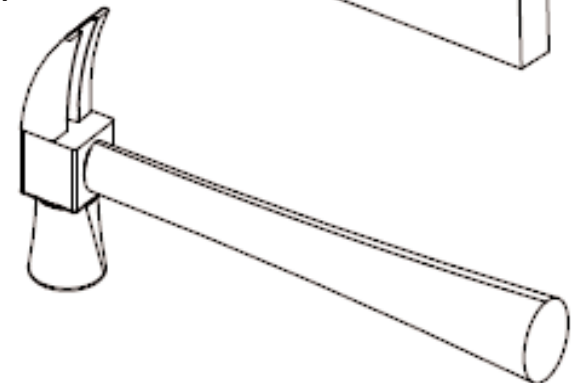


ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 2	PEN / PENCIL	
#8 SCREW		X 2	1/4"(6 mm) DRILL	
MOUNTING BRACKET		X 1	LEVEL SET	
M6 X 6 SET SCREW		X 1	HAMMER	
3 MM HEX KEY		X 1		
HANGING TT HOLDER		X 1		

INSTALLATION INSTRUCTIONS


3250-1510

HANGING TT HOLDER

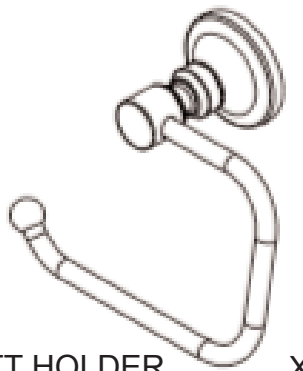


2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKET

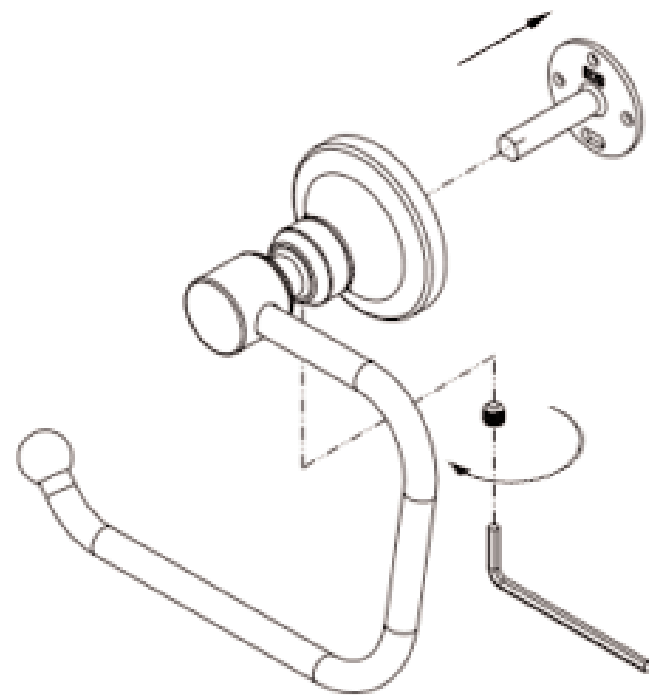

② ALIGN MOUNTING BRACKET AND MARK LOCATION

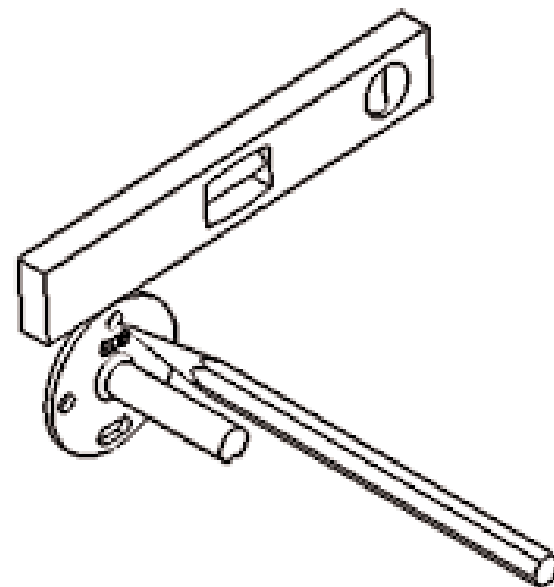


③ DRY WALL INSTALLATION

DO NOT DRILL




USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

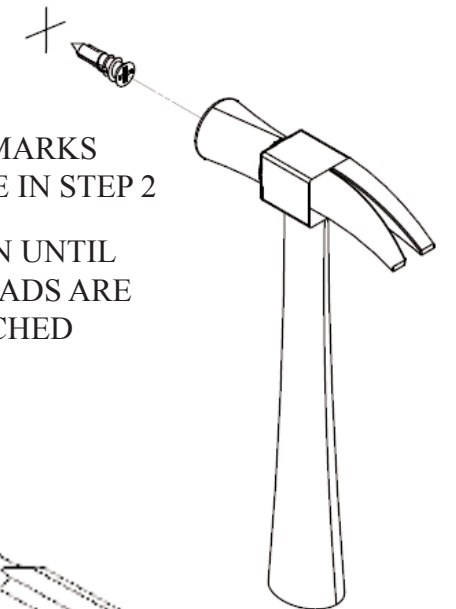


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

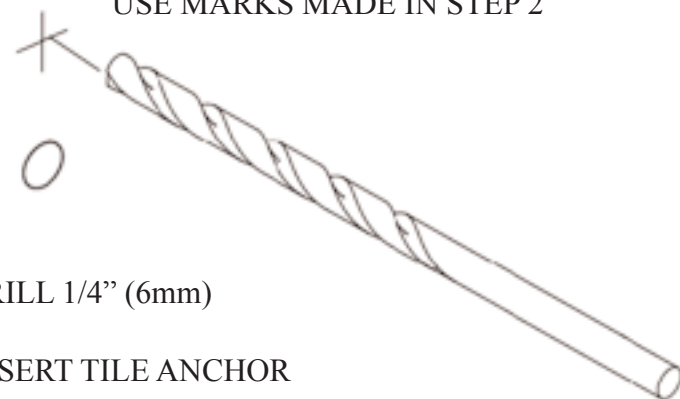


DRILL 1/4" (6mm)

INSERT TILE ANCHOR

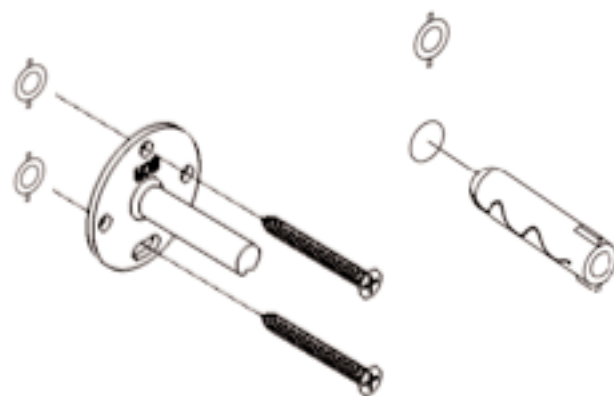

⑤ INSTALL PRODUCT ONTO BRACKET

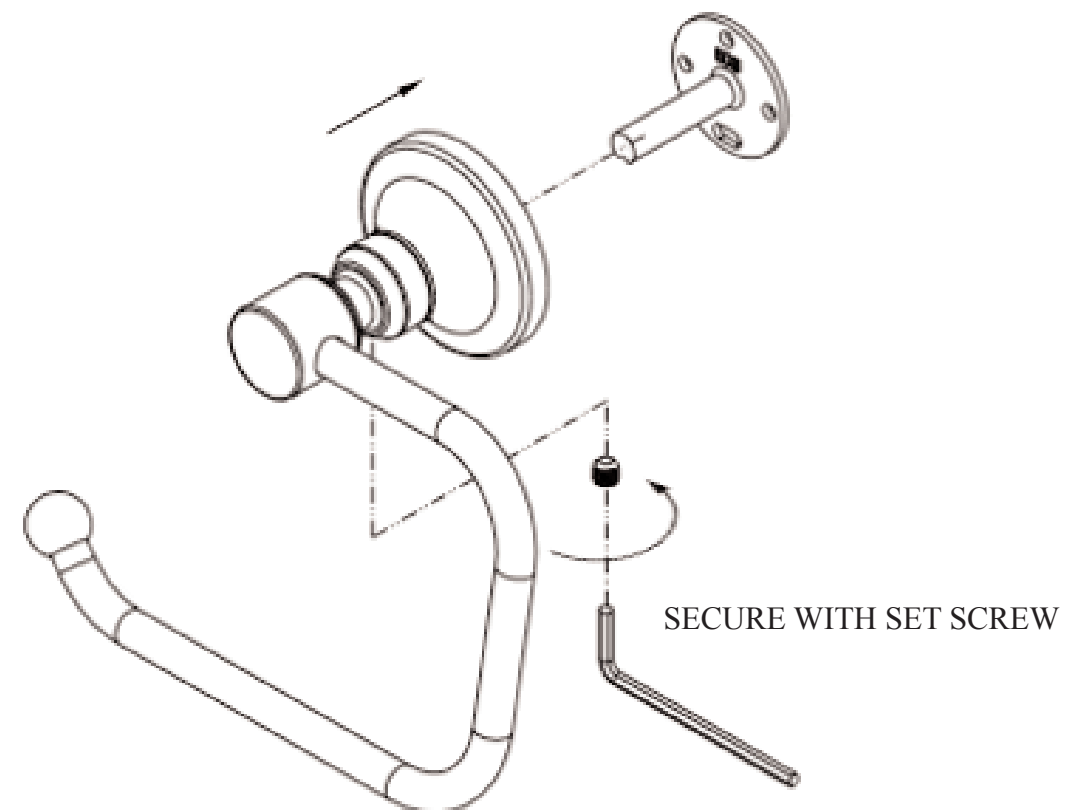

SECURE WITH SET SCREW