
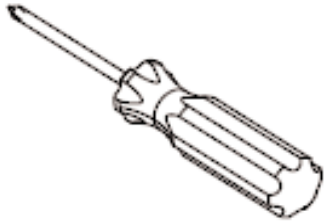
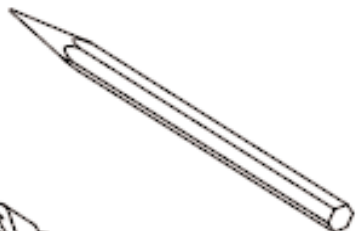
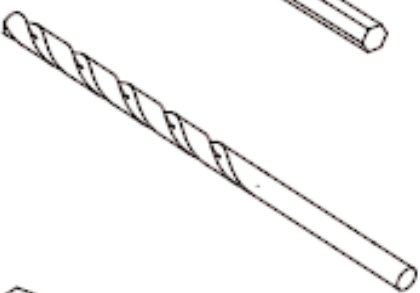
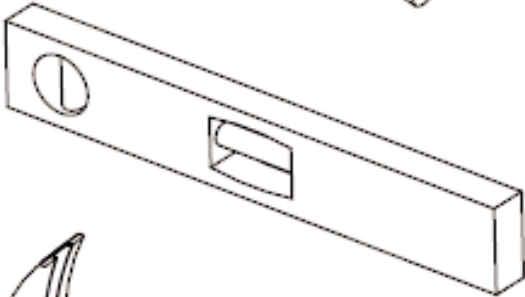



ITEMS INCLUDED	TOOLS REQUIRED
DRY WALL ANCHOR  X 4	PHILLIPS SCREW DRIVER 
TILE ANCHOR  X 4	PEN / PENCIL 
#8 SCREW  X 4	1/4" 6 mm) DRILL 
MOUNTING BRACKET  X 2	LEVEL SET 
M6 X 6 SET SCREW  X 2	HAMMER 
3 MM HEX KEY  X 1	
DOUBLE POST TOILET TISSUE HOLDER  X 1	

INSTALLATION INSTRUCTIONS 3250-1530 DOUBLE POST TOILET TISSUE HOLDER

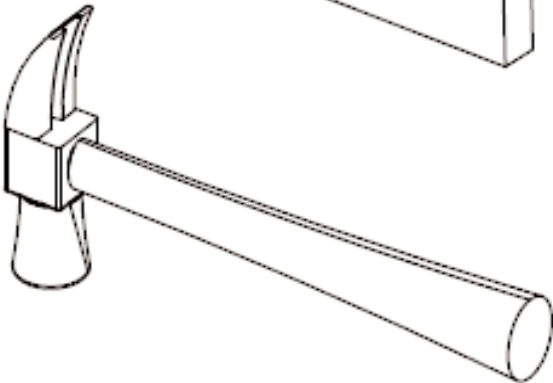


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
 WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKETS

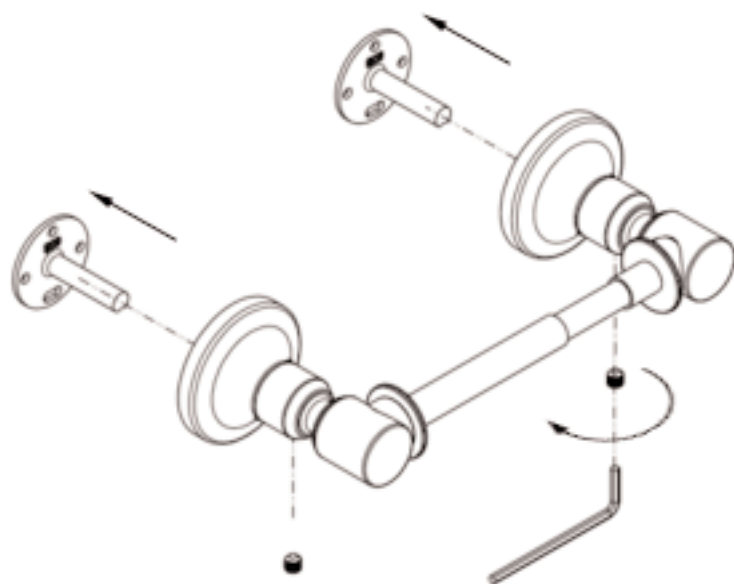


② ALIGN MOUNTING BRACKETS AND MARK LOCATION

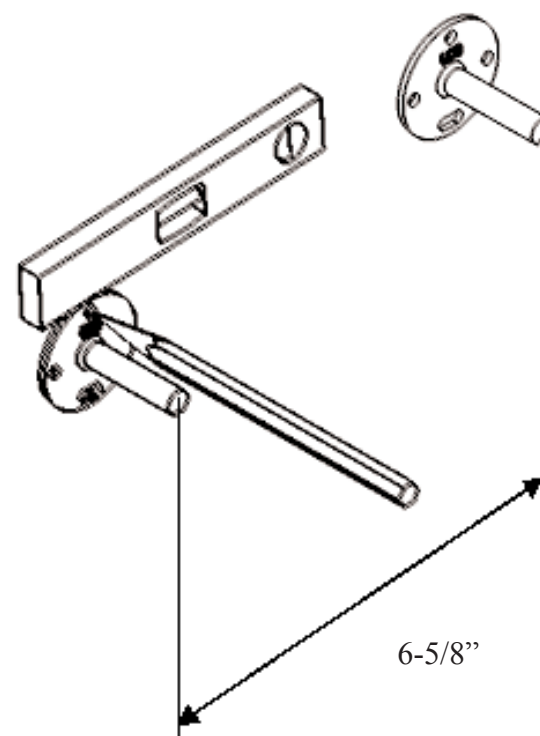


③ DRY WALL INSTALLATION

DO NOT DRILL

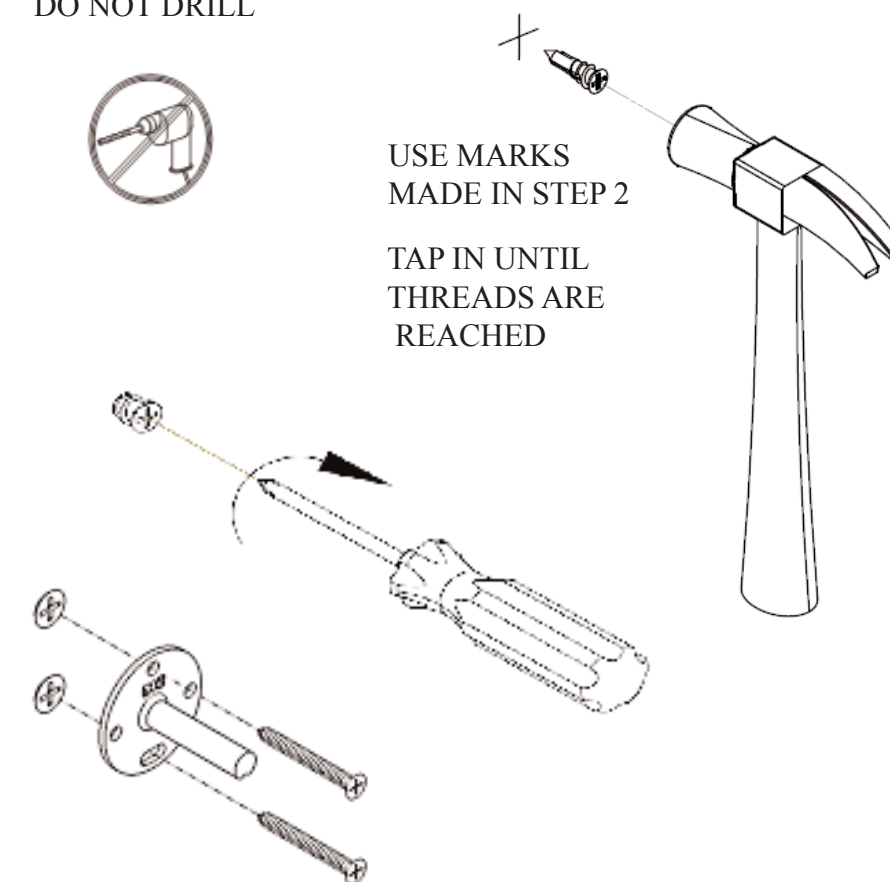

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

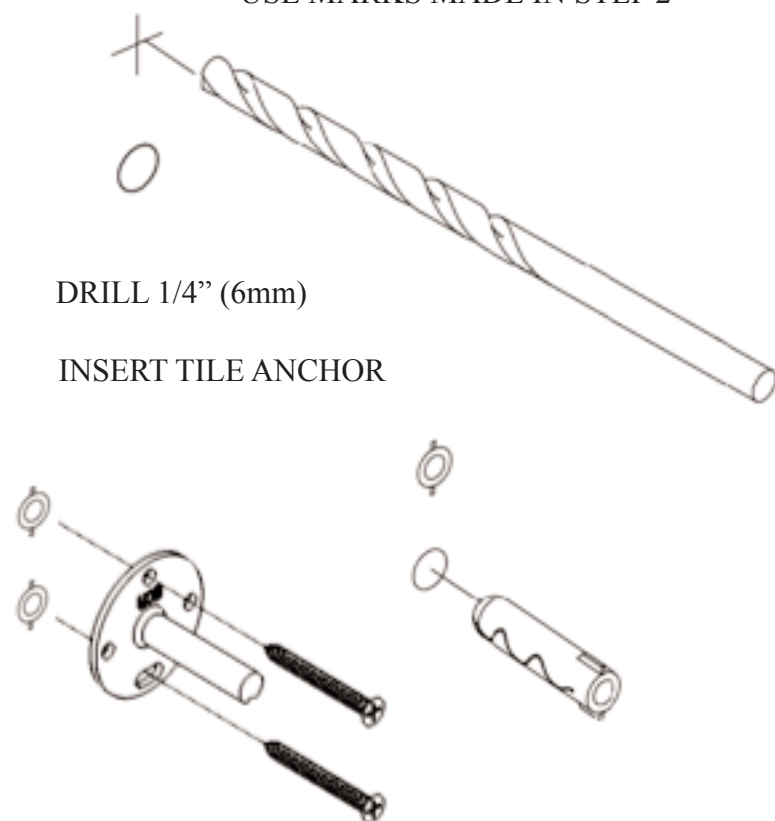

⑤ INSTALL PRODUCT ONTO BRACKETS

