
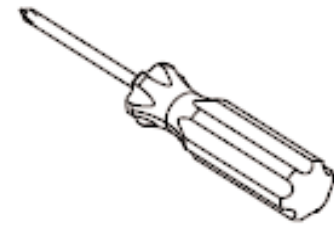
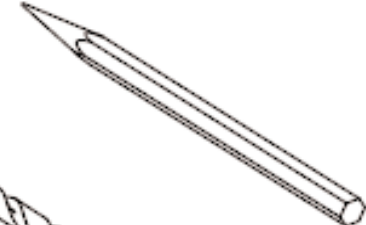
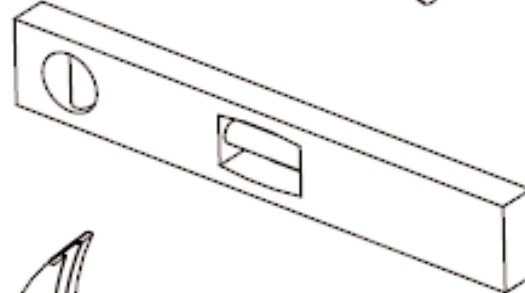


ITEMS INCLUDED	TOOLS REQUIRED
DRY WALL ANCHOR  X 2	PHILLIPS SCREW DRIVER 
TILE ANCHOR  X 2	PEN / PENCIL 
#8 SCREW  X 2	1/4" (6 mm) DRILL 
MOUNTING BRACKET  X 1	LEVEL SET 
M6 X 6 SET SCREW  X 1	HAMMER 
3 MM HEX KEY  X 1	
DOUBLE ROBE HOOK  X 1	


INSTALLATION INSTRUCTIONS

DOUBLE ROBE HOOK

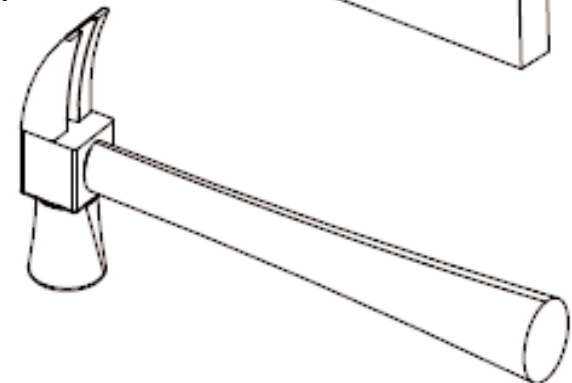


2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKET

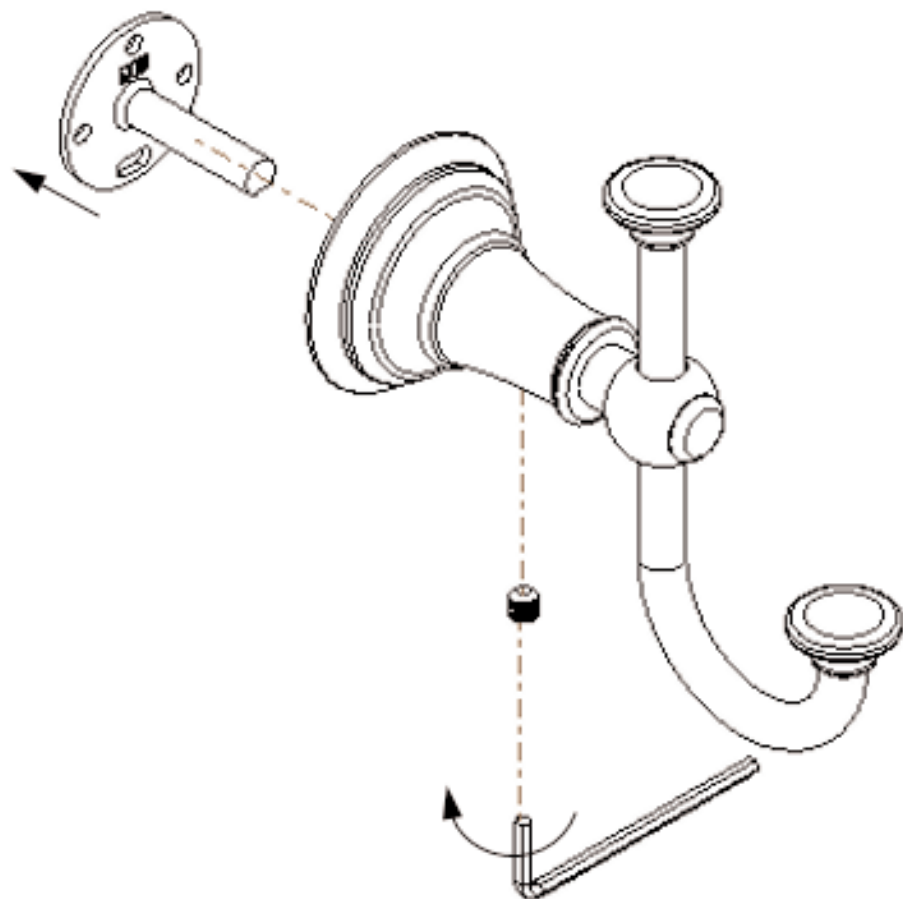


② ALIGN MOUNTING BRACKET AND MARK LOCATION

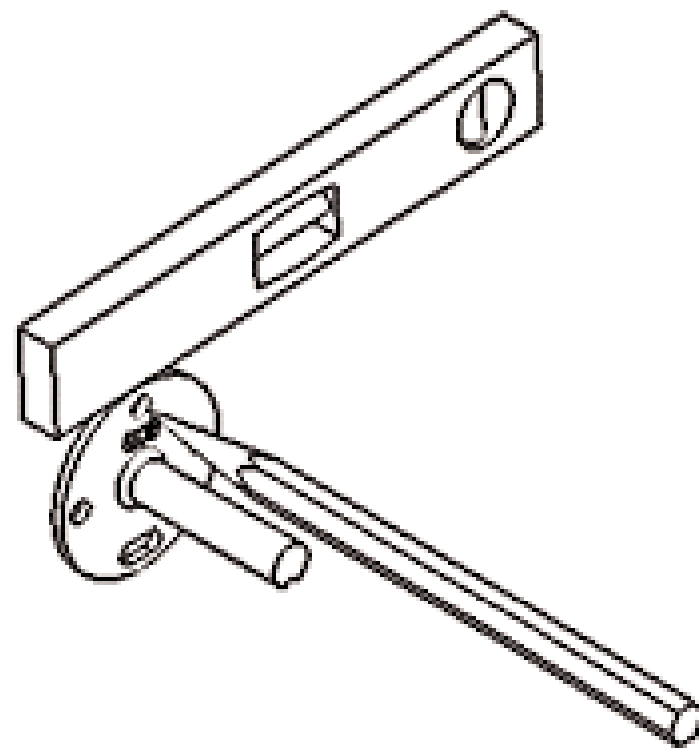


③ DRY WALL INSTALLATION

DO NOT DRILL

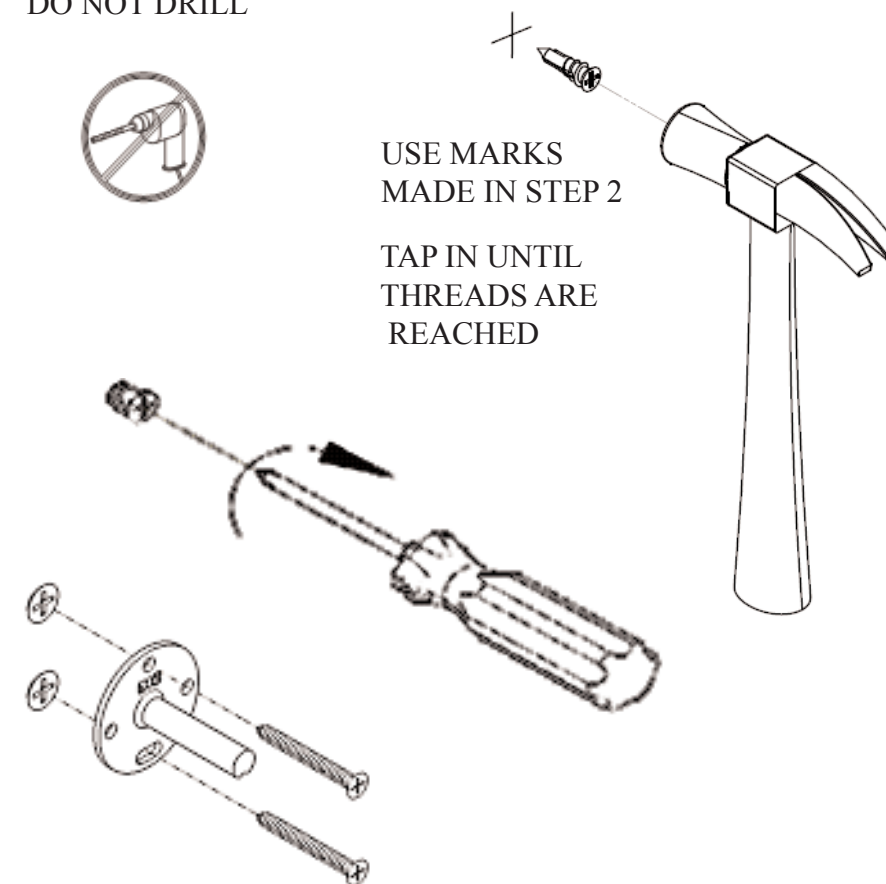

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

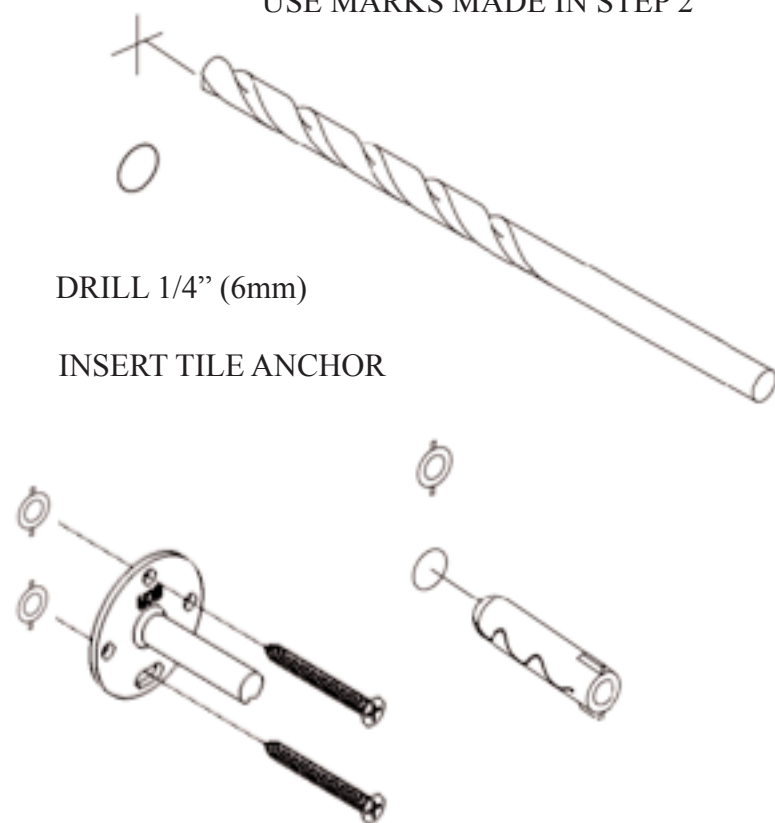

⑤ INSTALL PRODUCT ONTO BRACKET

