
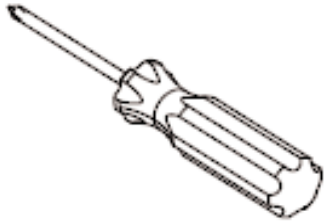
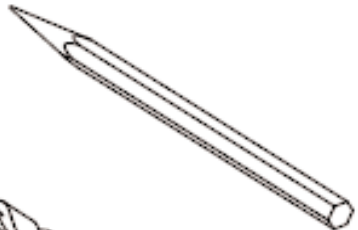
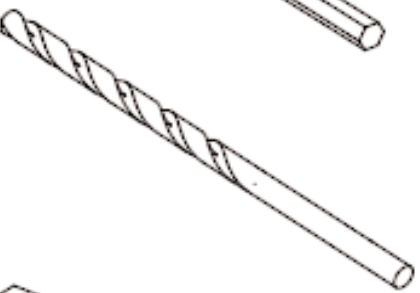
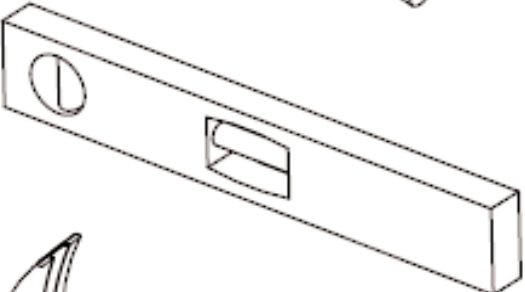
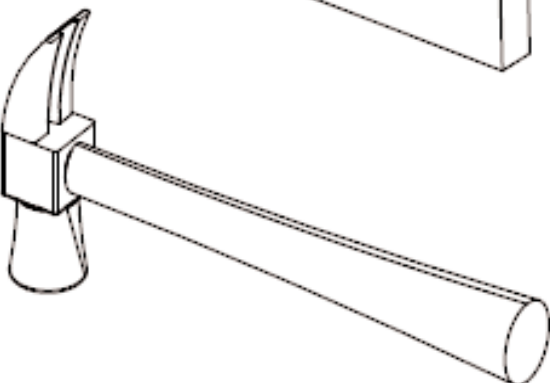



ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 4	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 4	PEN / PENCIL	
#8 SCREW		X 4	1/4" 6 mm) DRILL	
MOUNTING BRACKET		X 2	LEVEL SET	
M6 X 6 SET SCREW		X 2	HAMMER	
3 MM HEX KEY		X 1		
DOUBLE POST TOILET TISSUE HOLDER		X 1		

INSTALLATION INSTRUCTIONS DOUBLE POST TOILET TISSUE HOLDER

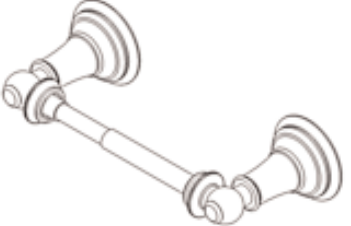


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
 WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKETS

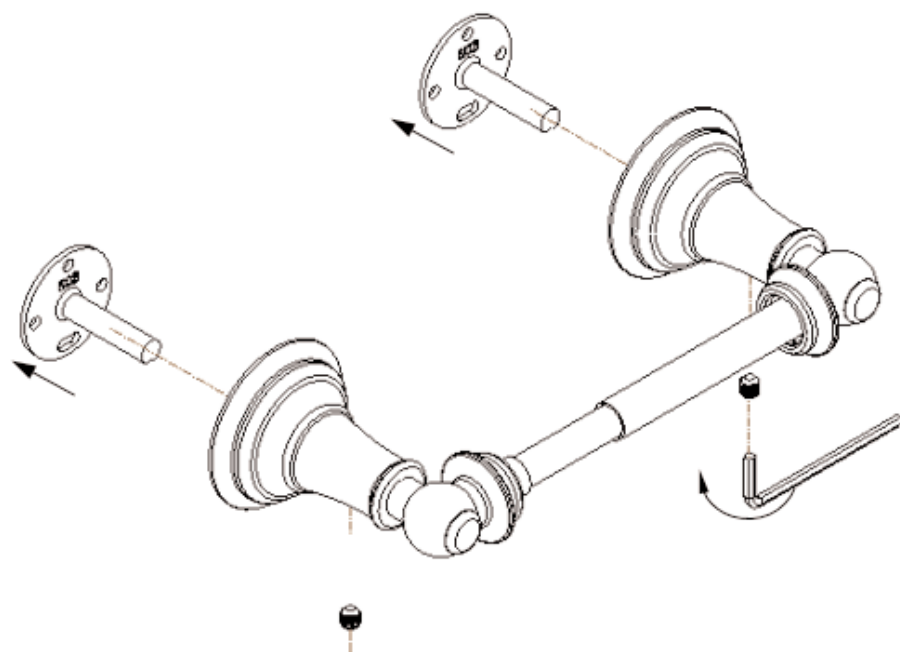


② ALIGN MOUNTING BRACKETS AND MARK LOCATION

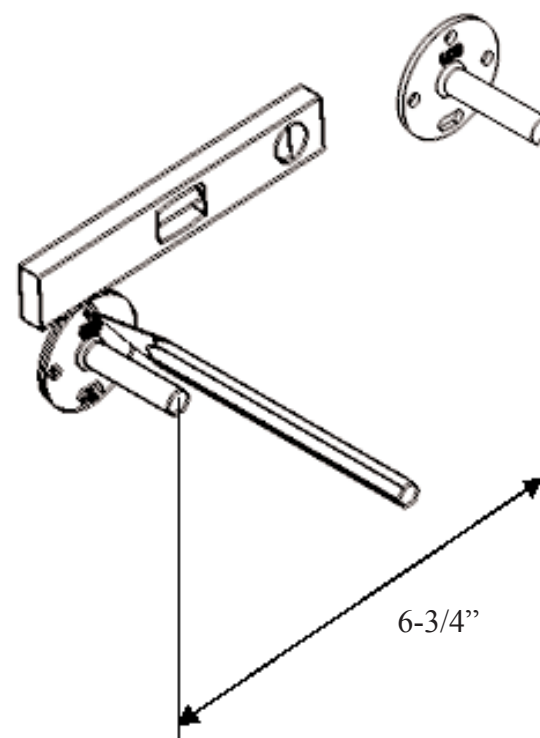


③ DRY WALL INSTALLATION

DO NOT DRILL

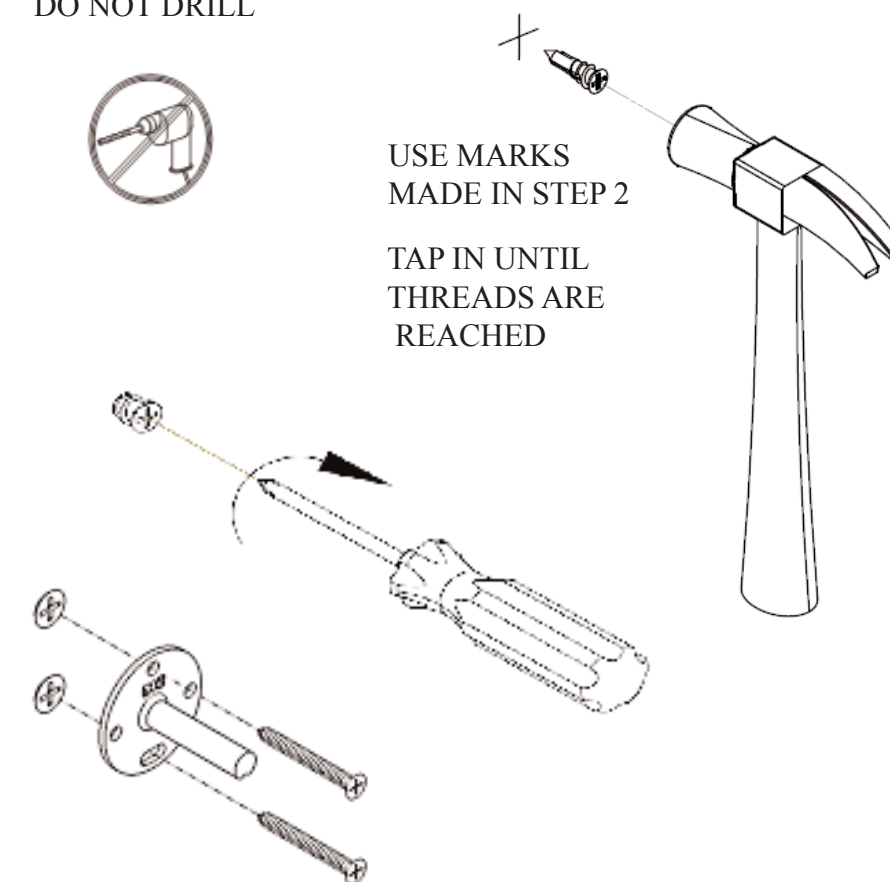

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

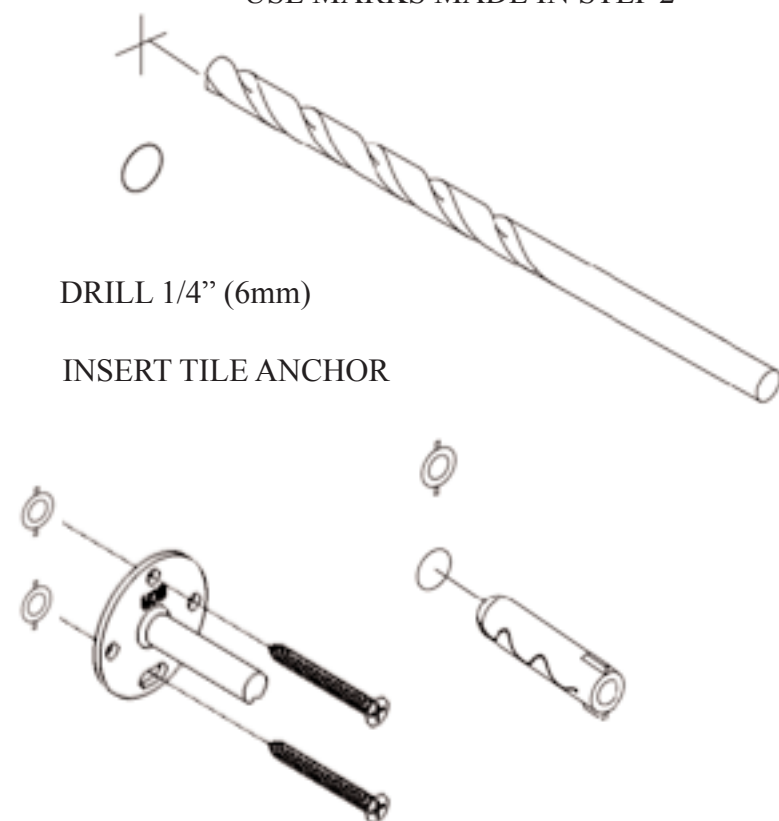

⑤ INSTALL PRODUCT ONTO BRACKETS

