
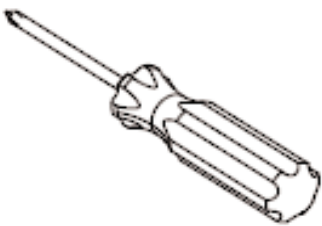
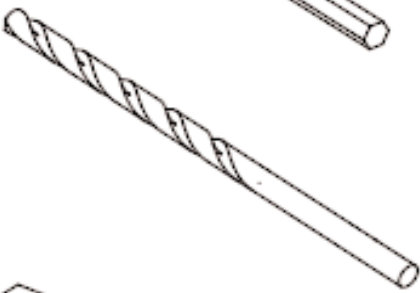
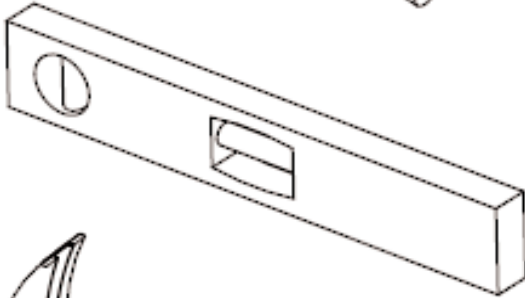


ITEMS INCLUDED			TOOLS REQUIRED		
DRY WALL ANCHOR		X 2	PHILLIPS SCREW DRIVER		
TILE ANCHOR		X 2	PEN / PENCIL		
#8 SCREW		X 2	1/4" (6mm) DRILL		
MOUNTING BRACKET		X 1	LEVEL SET		
M6 X 6 SET SCREW		X 1	HAMMER		
3 MM ALLOY STEEL HEX KEY		X 1			
TOWEL RING		X 1			


INSTALLATION INSTRUCTIONS

TOWEL RING

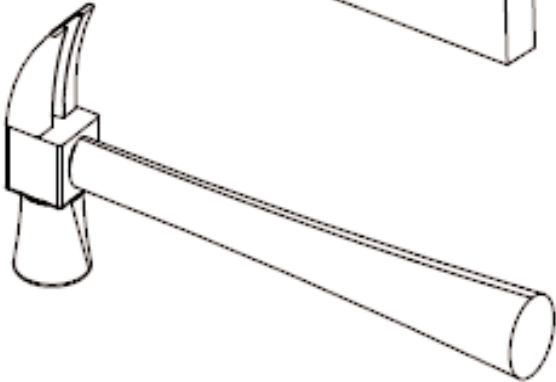


2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKET

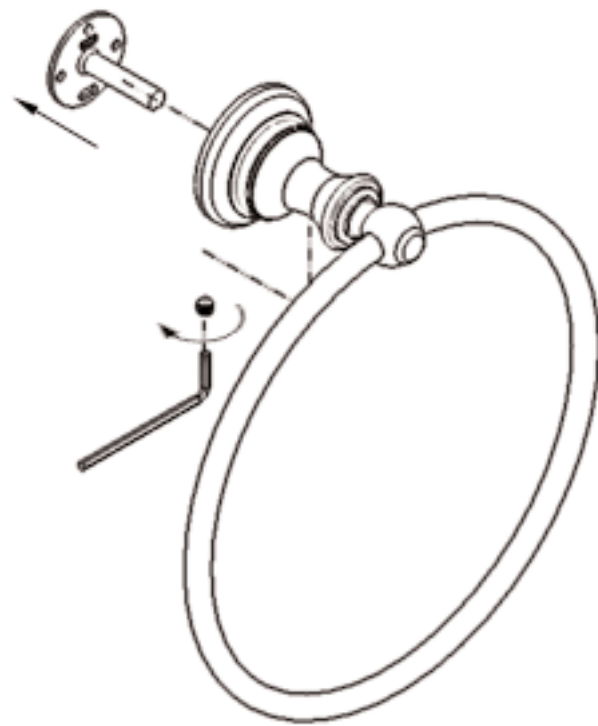

② ALIGN MOUNTING BRACKET AND MARK LOCATION

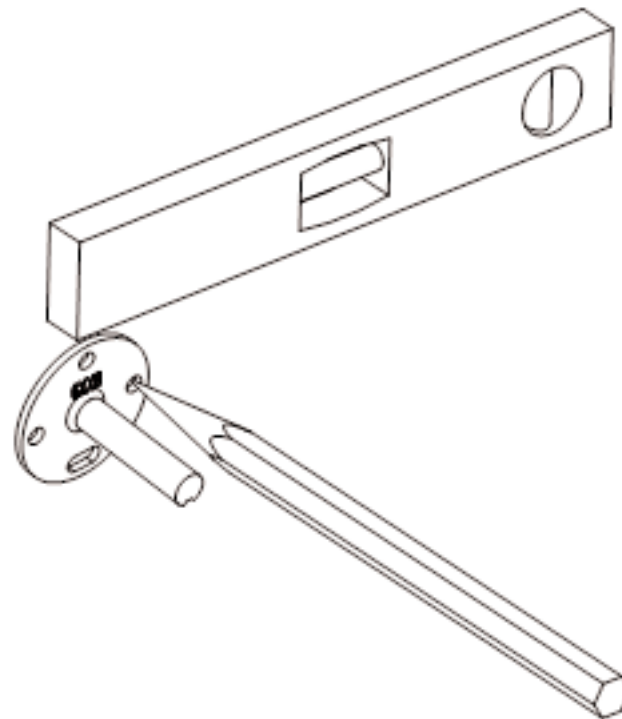


③ DRY WALL INSTALLATION

DO NOT DRILL





USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

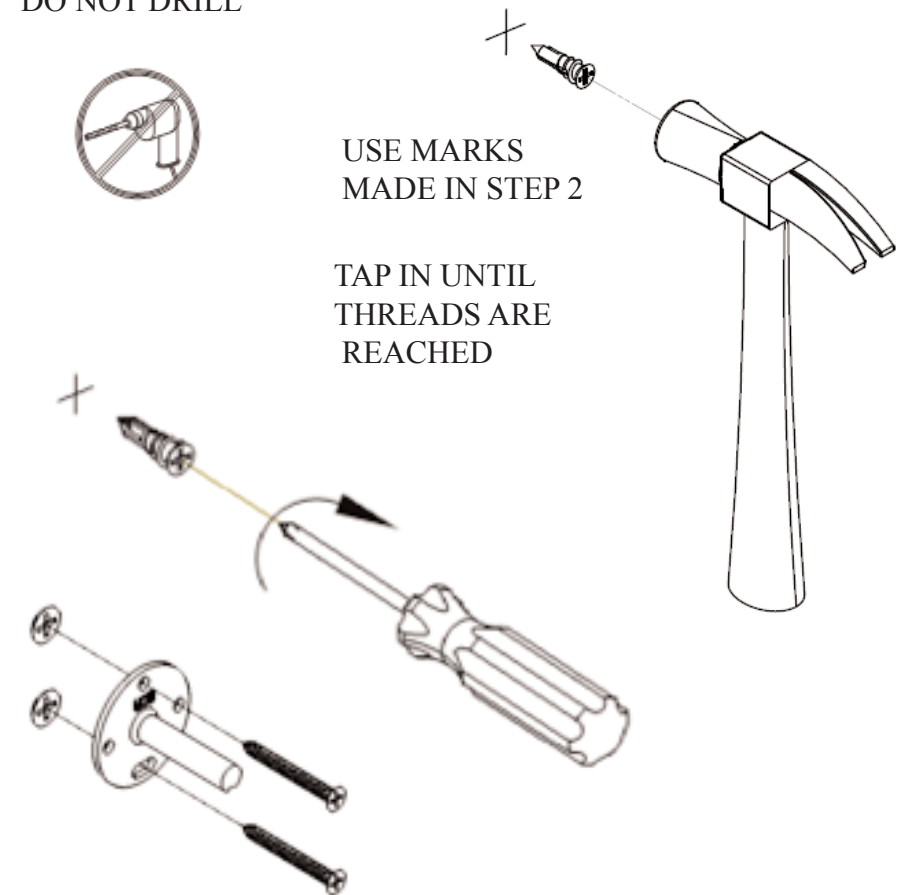

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

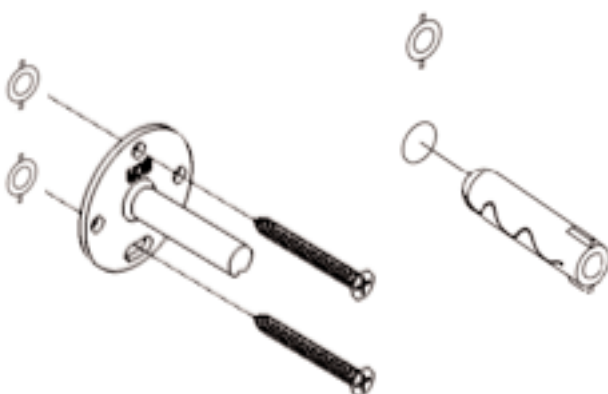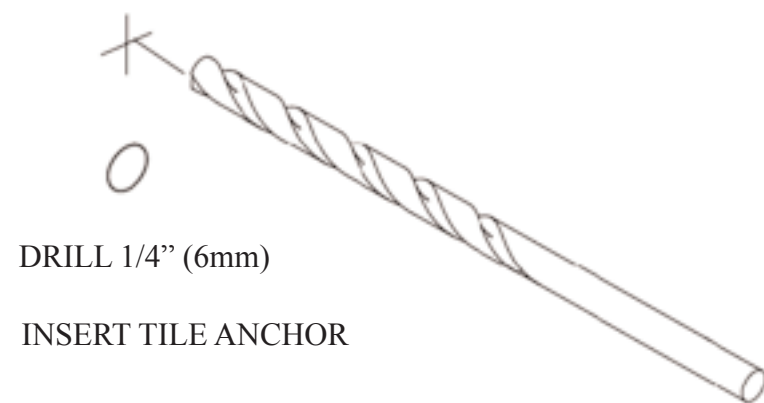

⑤ INSTALL PRODUCT ONTO BRACKET

SECURE WITH SET SCREW

