
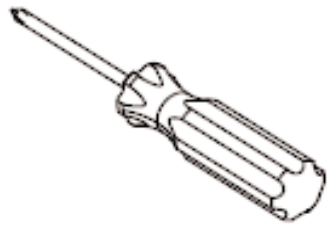
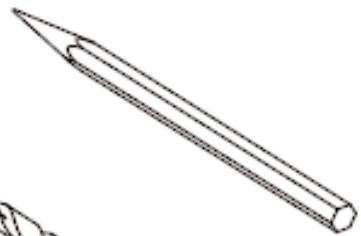
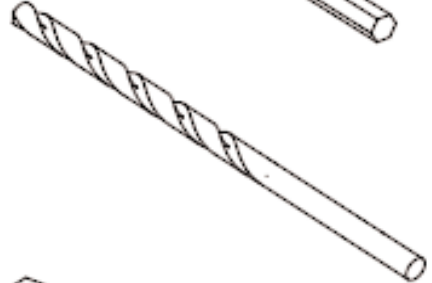
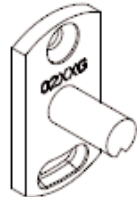
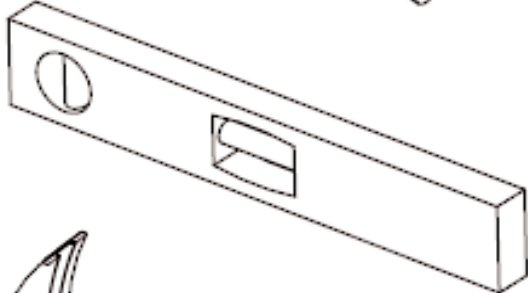
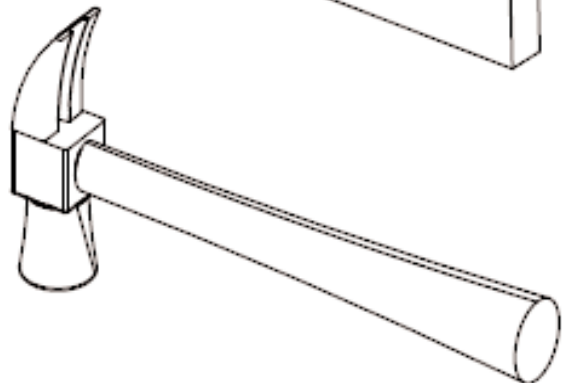



ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 2	PEN / PENCIL	
#8 SCREW		X 2	1/4" (6 mm) DRILL	
MOUNTING BRACKET		X 1	LEVEL SET	
M6X1 SET SCREW		X 1	HAMMER	
3MM HEX KEY		X 1		
SINGLE ROBE HOOK		X 1		

INSTALLATION INSTRUCTIONS SINGLE ROBE HOOK

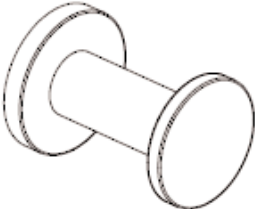


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
WWW.GINGERCO.COM
WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKET

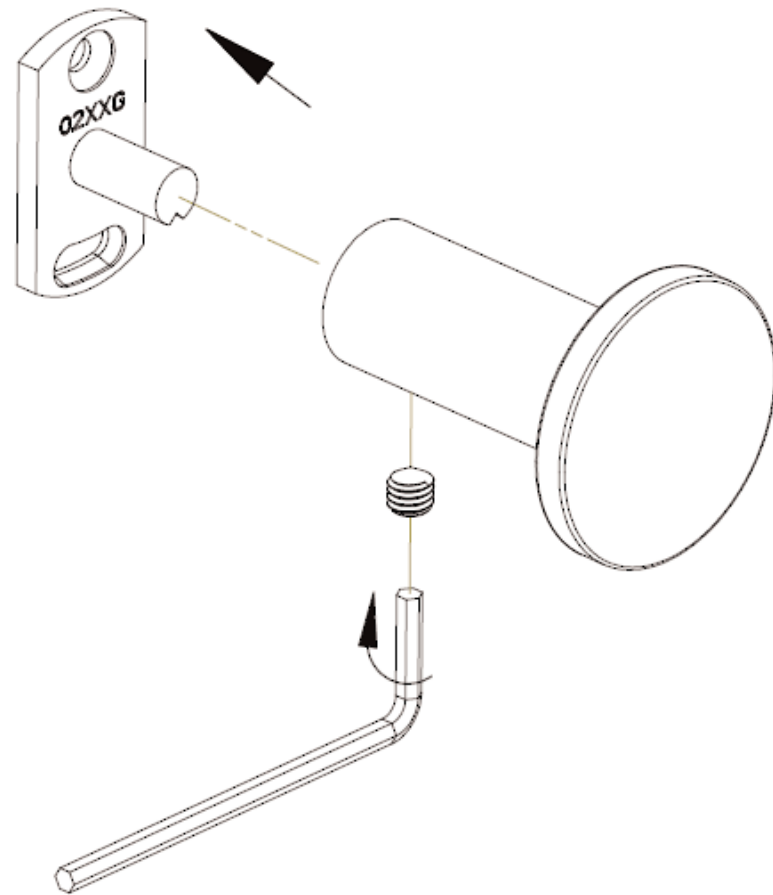

② ALIGN MOUNTING BRACKET AND MARK LOCATION

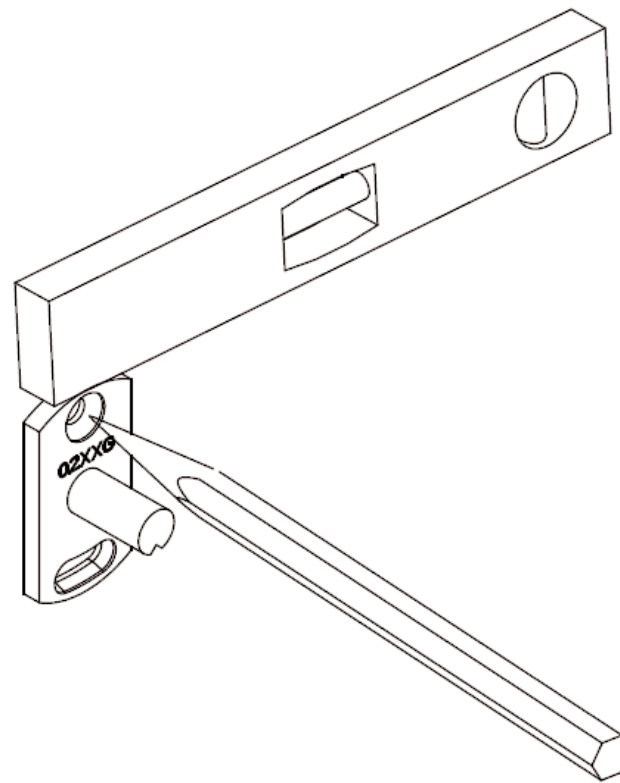


③ DRY WALL INSTALLATION

DO NOT DRILL




USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

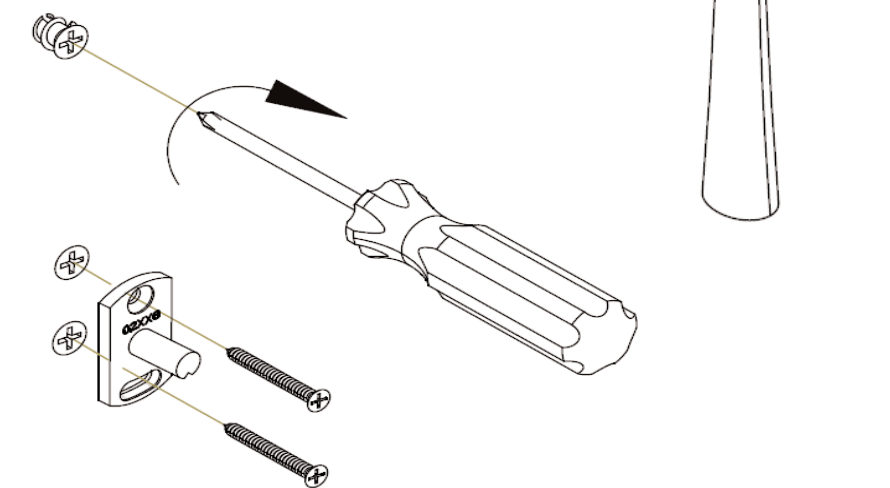


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

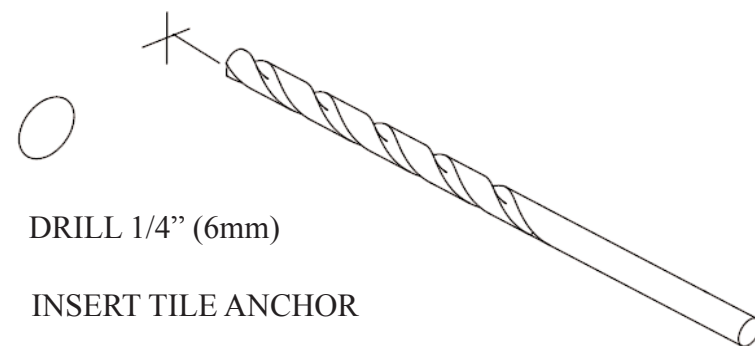

INSERT TILE ANCHOR

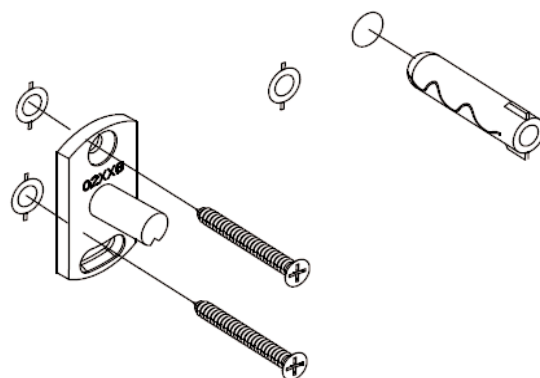

⑤ INSTALL PRODUCT ONTO BRACKET REGISTER ROSETTE ONTO POST AND PRESS LIGHTLY DURING INSTALLATION.

