
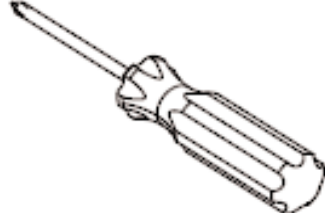
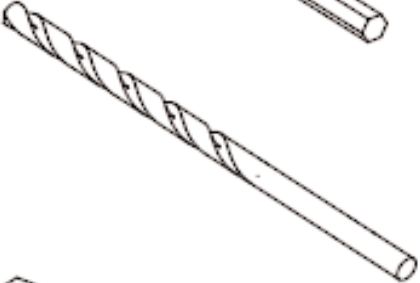
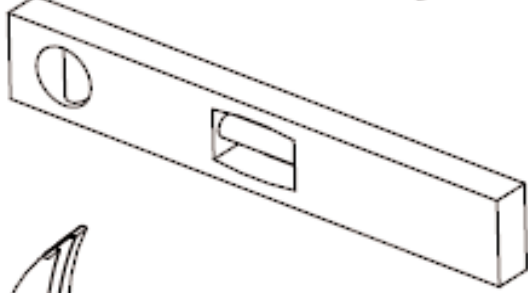
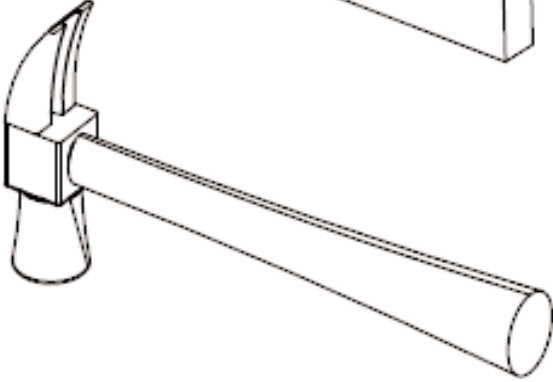
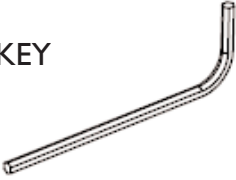



ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 4	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 4	PEN / PENCIL	
#8 SCREW		X 4	1/4"(6 mm) DRILL	
MOUNTING BRACKET		X 2	LEVEL SET	
M6X1 SET SCREW		X 2	HAMMER	
3MM HEX KEY		X 1		
PIVOTING TISSUE HOLDER		X 1		

INSTALLATION INSTRUCTIONS PIVOTING TISSUE HOLDER

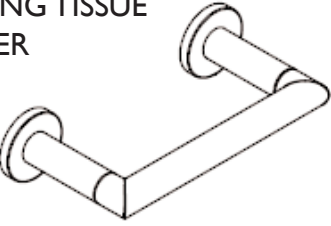


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
 WWW.GINGERCO.COM
 WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKETS

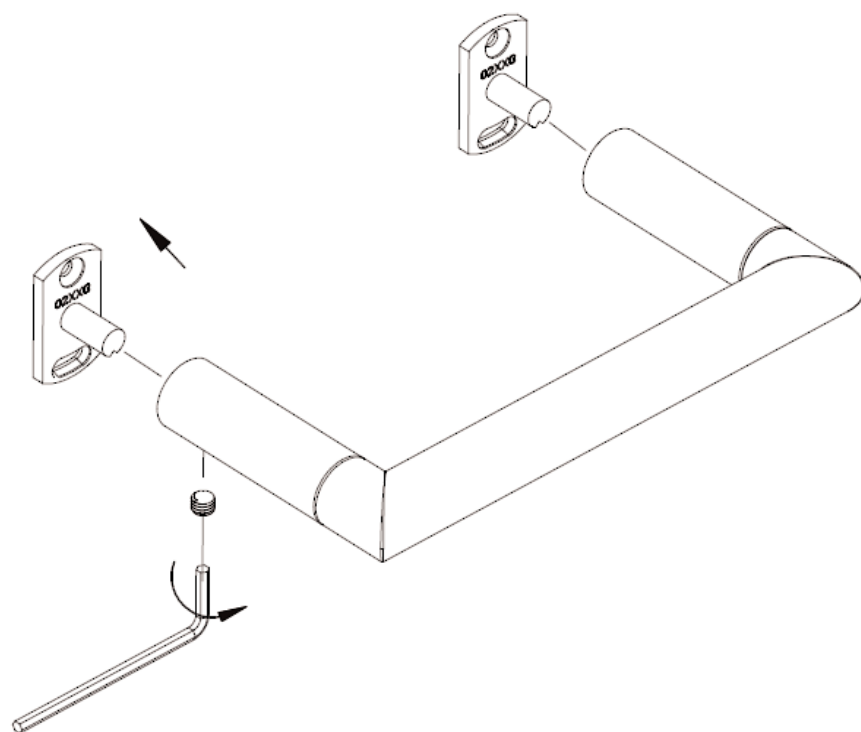

② ALIGN MOUNTING BRACKETS AND MARK LOCATION

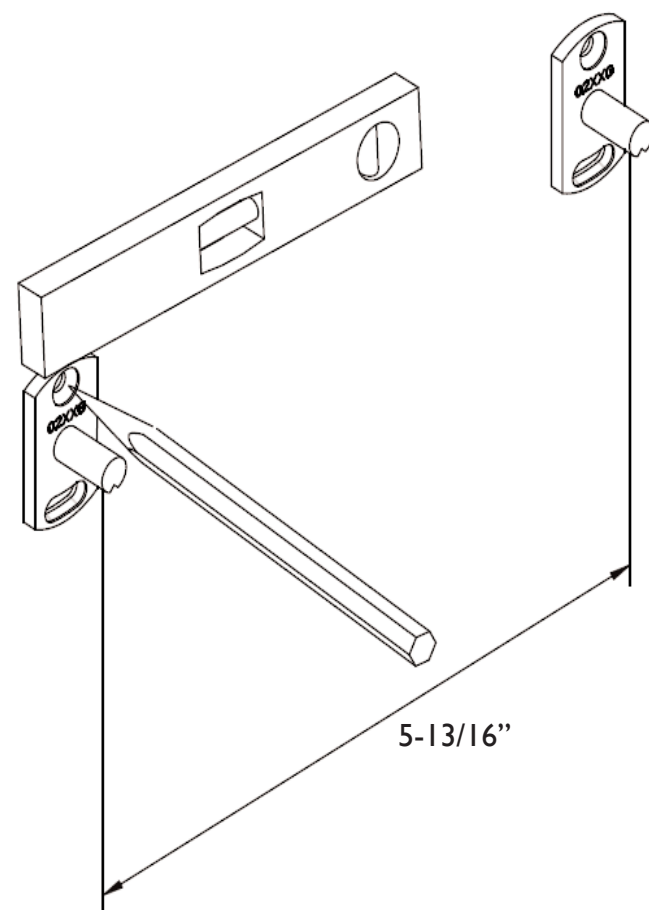


③ DRY WALL INSTALLATION

DO NOT DRILL




USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

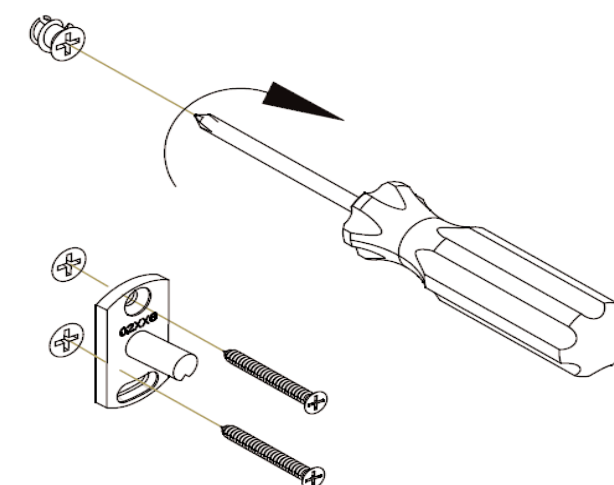


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

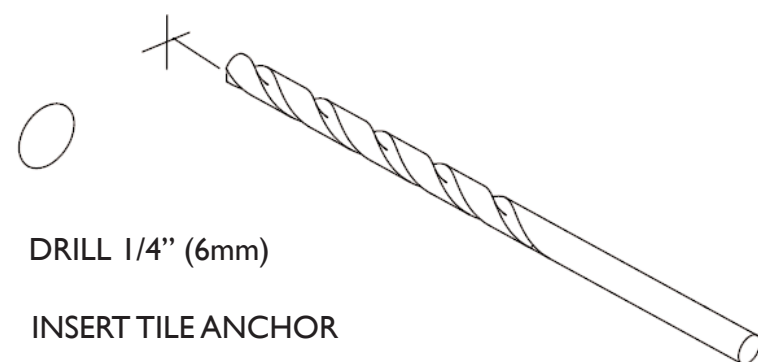

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

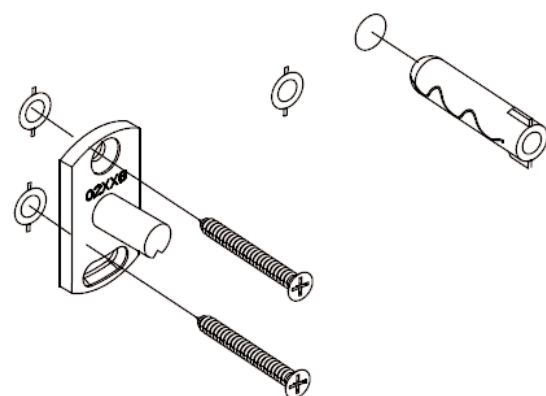

⑤ INSTALL PRODUCT ONTO BRACKETS. REGISTER ROSETTE ONTO POST AND PRESS LIGHTLY DURING INSTALLATION

