
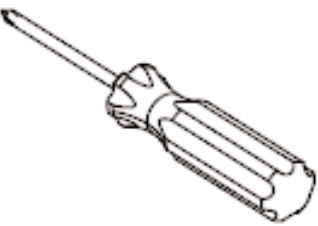
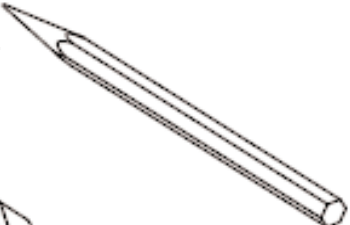
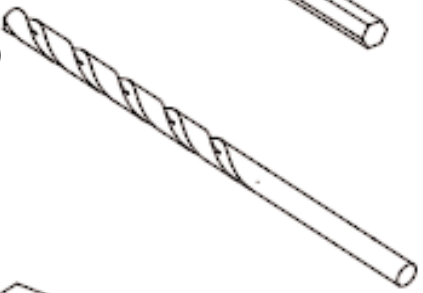
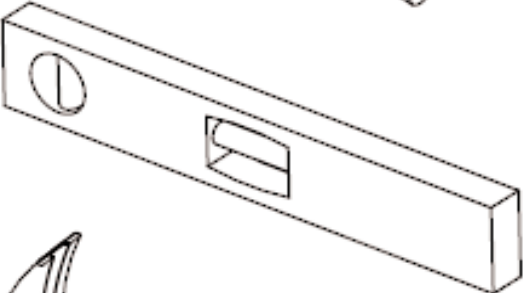



ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 2	PEN / PENCIL	
#8 SCREW		X 2	1/4" (6mm) DRILL	
MOUNTING BRACKET		X 1	LEVEL SET	
M6 X 1 SET SCREW		X 1	HAMMER	
3MM ALLOY STEEL HEX KEY		X 1		
TOWEL RING		X 1		

INSTALLATION INSTRUCTIONS TOWEL RING

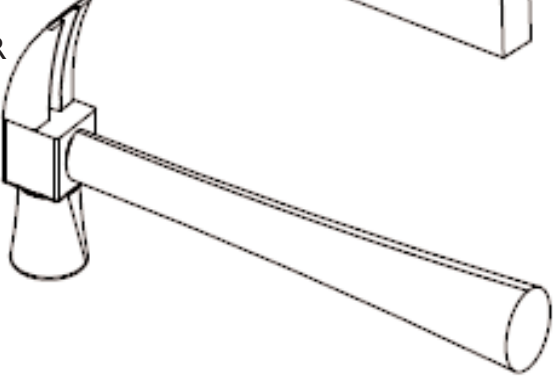


2001 CARNEGIE AVE, SANTA ANA CA 92705
 (949) 417-5207
 WWW.GINGERCO.COM
 WWW.NEWPORTBRASS.COM


① REMOVE MOUNTING BRACKET

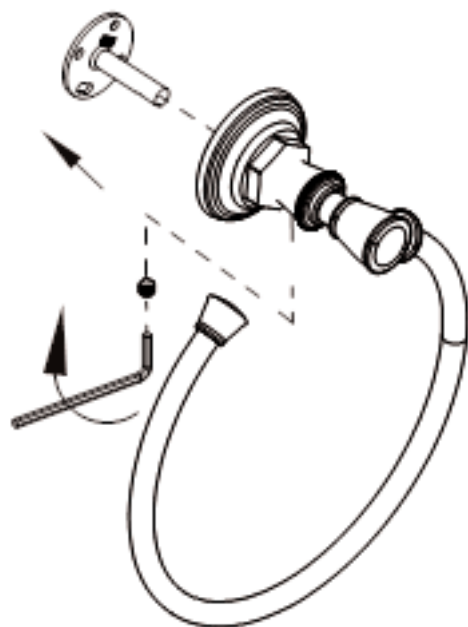

② ALIGN MOUNTING BRACKET AND MARK LOCATION

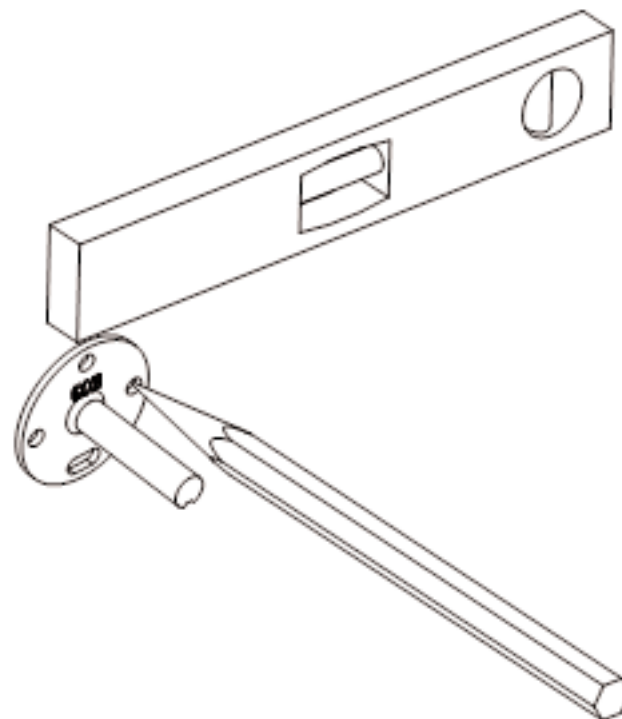


③ DRY WALL INSTALLATION

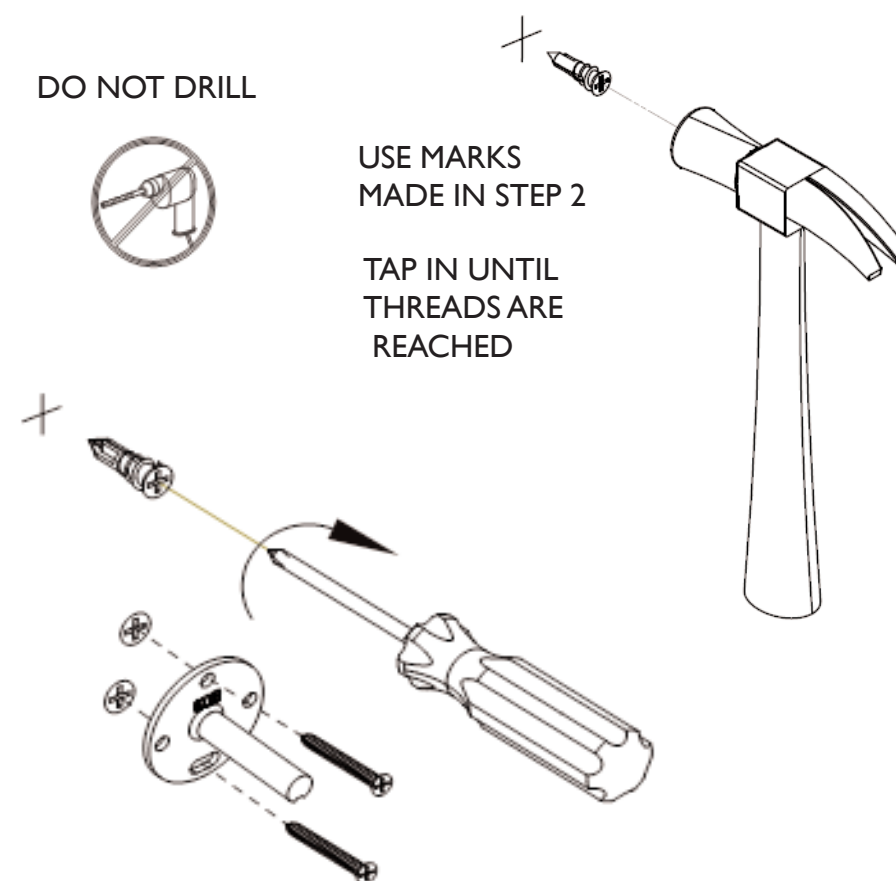

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

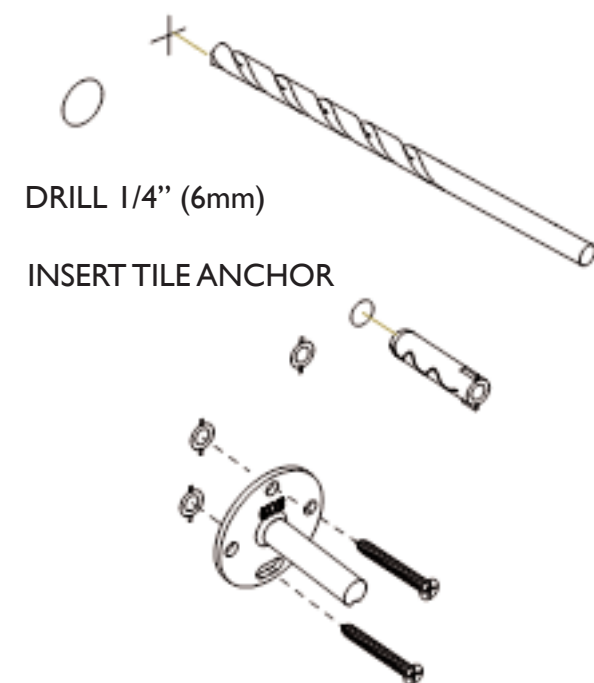

⑤ INSTALL PRODUCT ONTO BRACKET

SECURE WITH SET SCREW

