
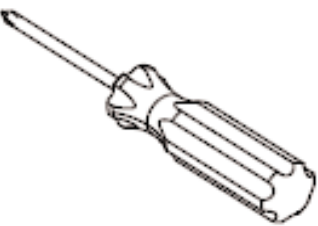
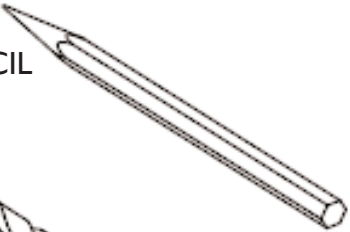
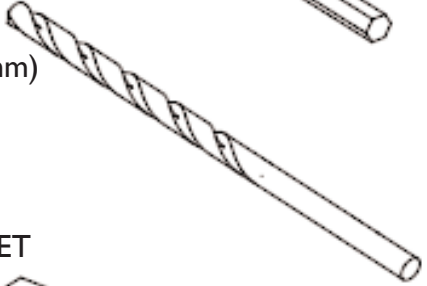
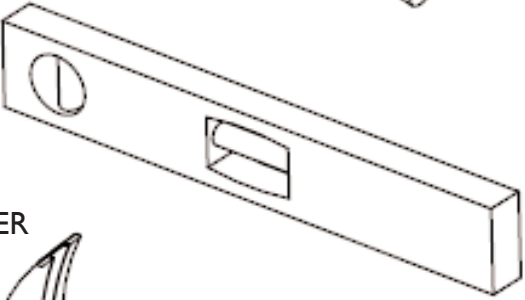



| ITEMS INCLUDED          |                                                                                     |     | TOOLS REQUIRED        |                                                                                      |
|-------------------------|-------------------------------------------------------------------------------------|-----|-----------------------|--------------------------------------------------------------------------------------|
| DRY WALL ANCHOR         |    | X 2 | PHILLIPS SCREW DRIVER |    |
| TILE ANCHOR             |    | X 2 | PEN / PENCIL          |    |
| #8 SCREW                |    | X 2 | 1/4" (6mm) DRILL      |   |
| MOUNTING BRACKET        |    | X 1 | LEVEL SET             |  |
| M6 X 1 SET SCREW        |  | X 1 | HAMMER                |  |
| 3MM ALLOY STEEL HEX KEY |  | X 1 |                       |                                                                                      |
| DOUBLE ROBE HOOK        |  | X 1 |                       |                                                                                      |

# INSTALLATION INSTRUCTIONS DOUBLE ROBE HOOK

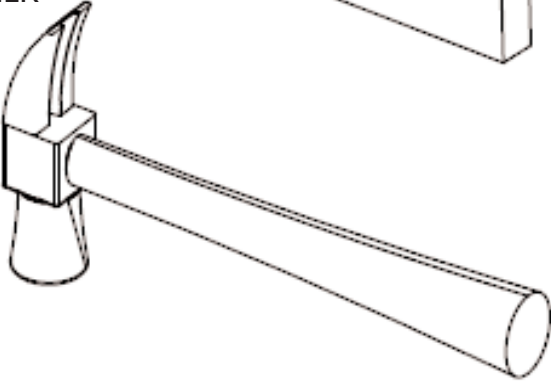


2001 CARNEGIE AVE, SANTA ANA CA 92705  
 (949) 417-5207  
[WWW.GINGERCO.COM](http://WWW.GINGERCO.COM)  
[WWW.NEWPORTBRASS.COM](http://WWW.NEWPORTBRASS.COM)


① REMOVE MOUNTING BRACKET

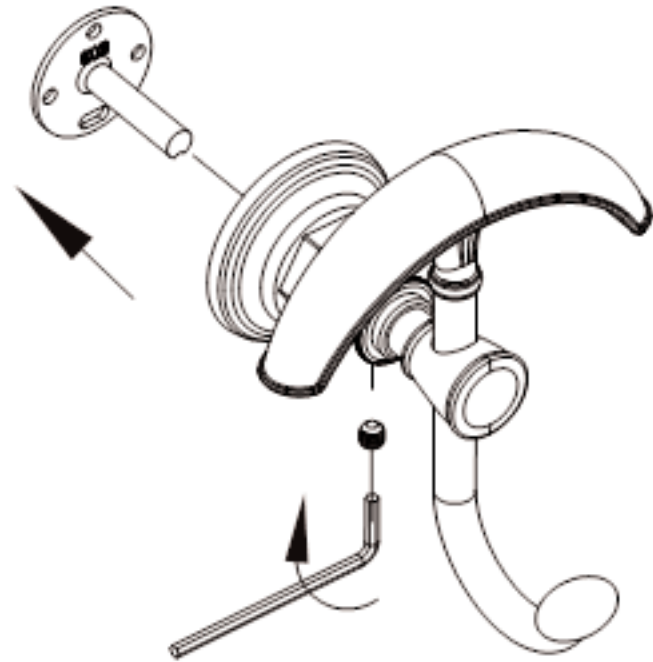

② ALIGN MOUNTING BRACKET AND MARK LOCATION

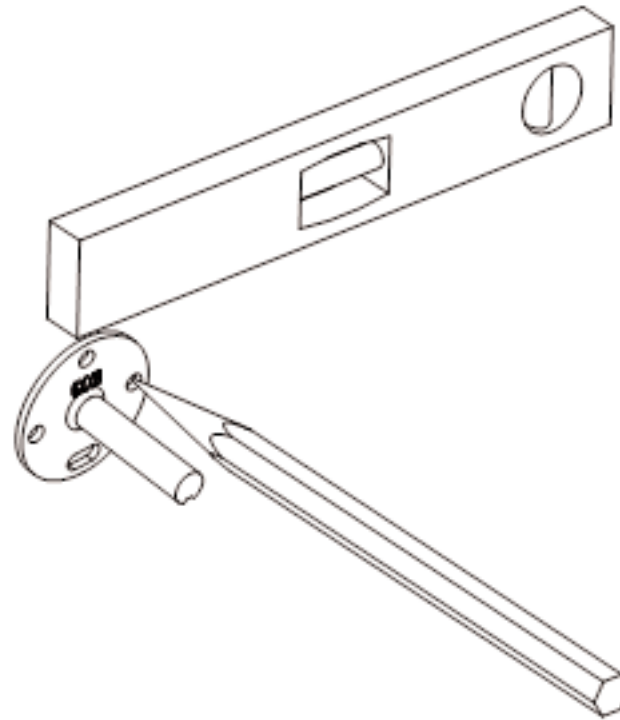


③ DRY WALL INSTALLATION

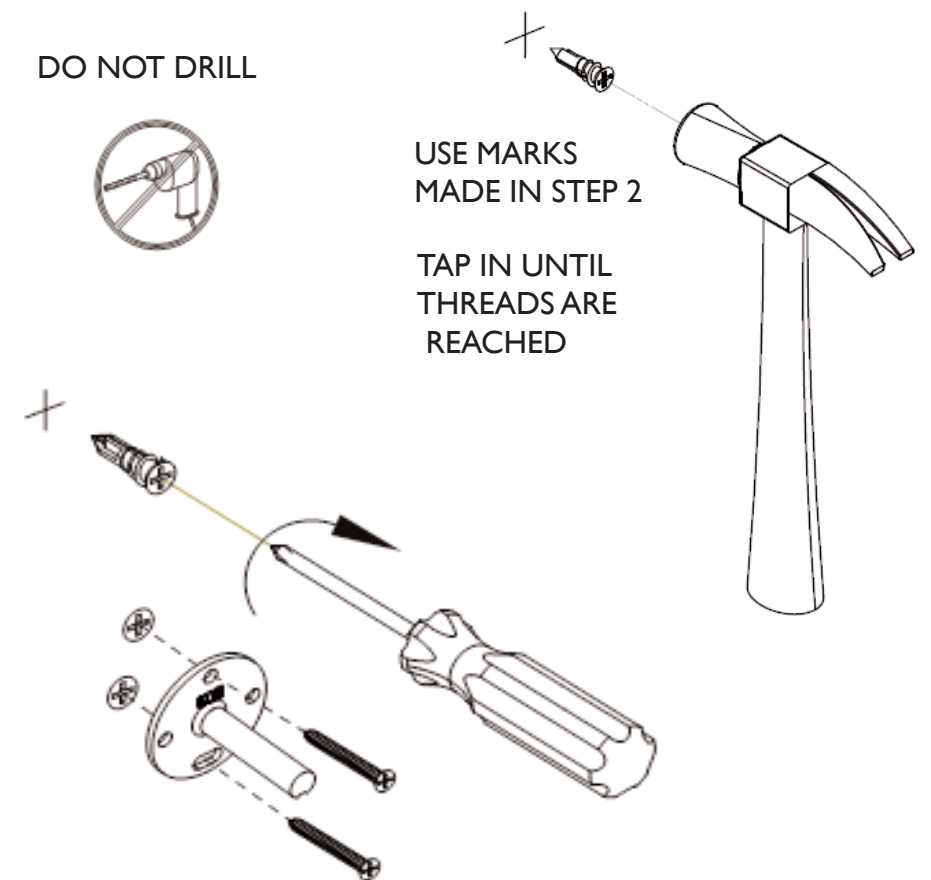

④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

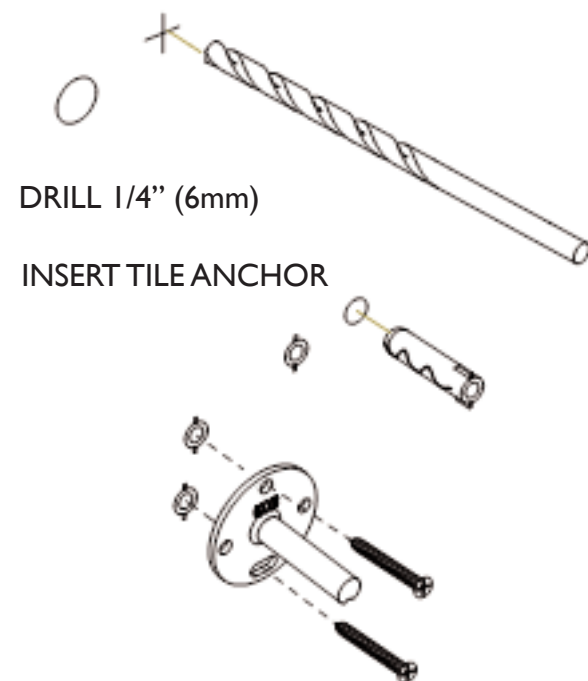

⑤ INSTALL PRODUCT ONTO BRACKET

