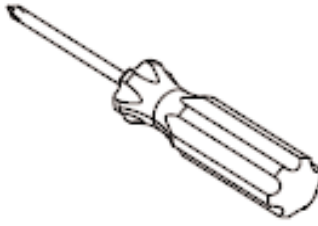
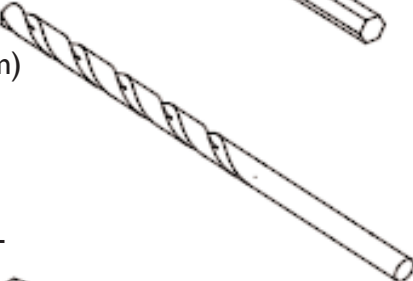
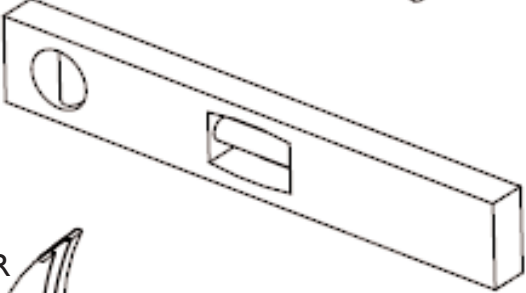
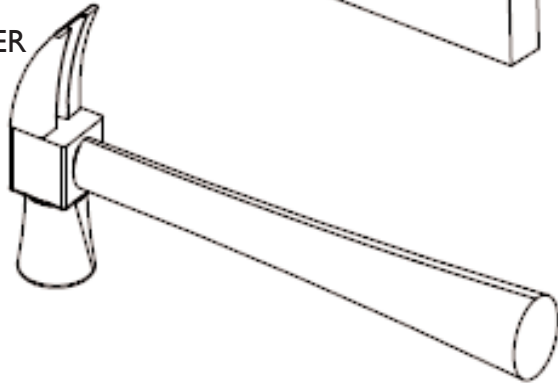
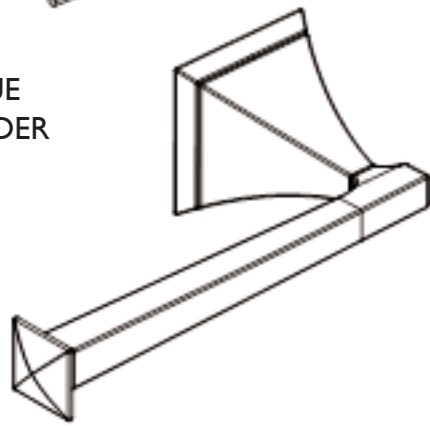


ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 2	PEN / PENCIL	
#8 SCREW		X 2	1/4" (6 mm) DRILL	
MOUNTING BRACKET		X 1	LEVEL SET	
M6 X 1 SET SCREW		X 1	HAMMER	
3MM ALLOY STEEL HEX KEY		X 1		
TISSUE HOLDER		X 1		


INSTALLATION INSTRUCTIONS

SINGLE POST TOILET TISSUE HOLDER


NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
(949) 417-5207
WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKET

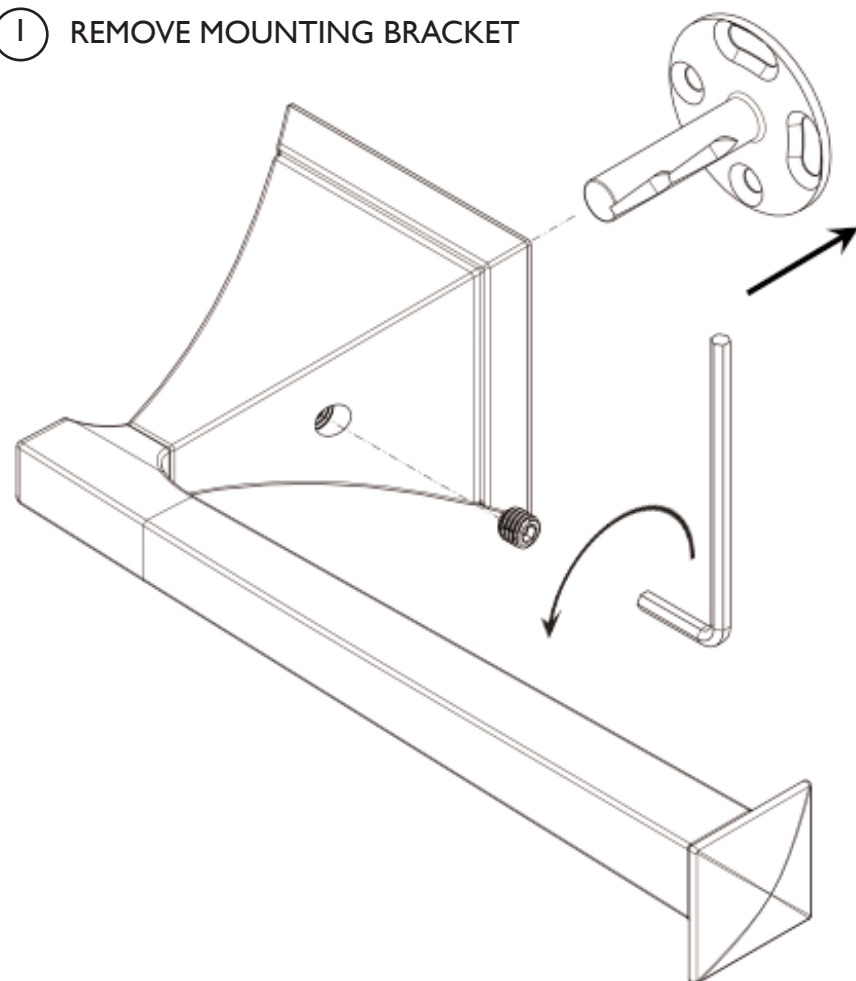

② ALIGN MOUNTING BRACKET AND MOUNT LOCATION

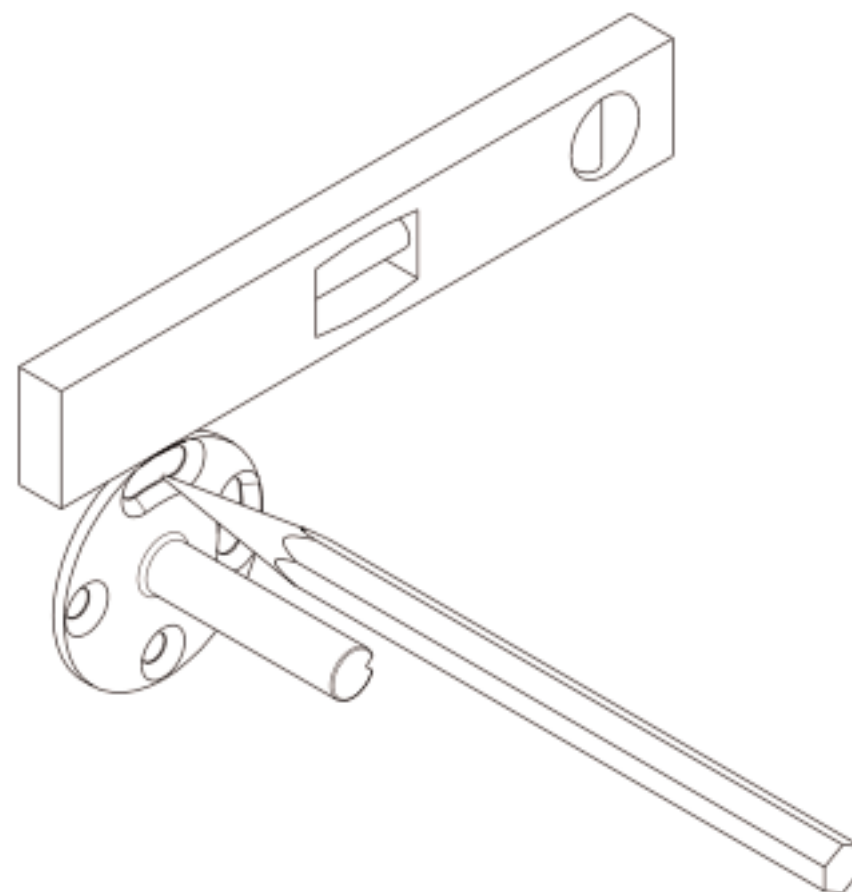


③ DRY WALL INSTALLATION

DO NOT DRILL

USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

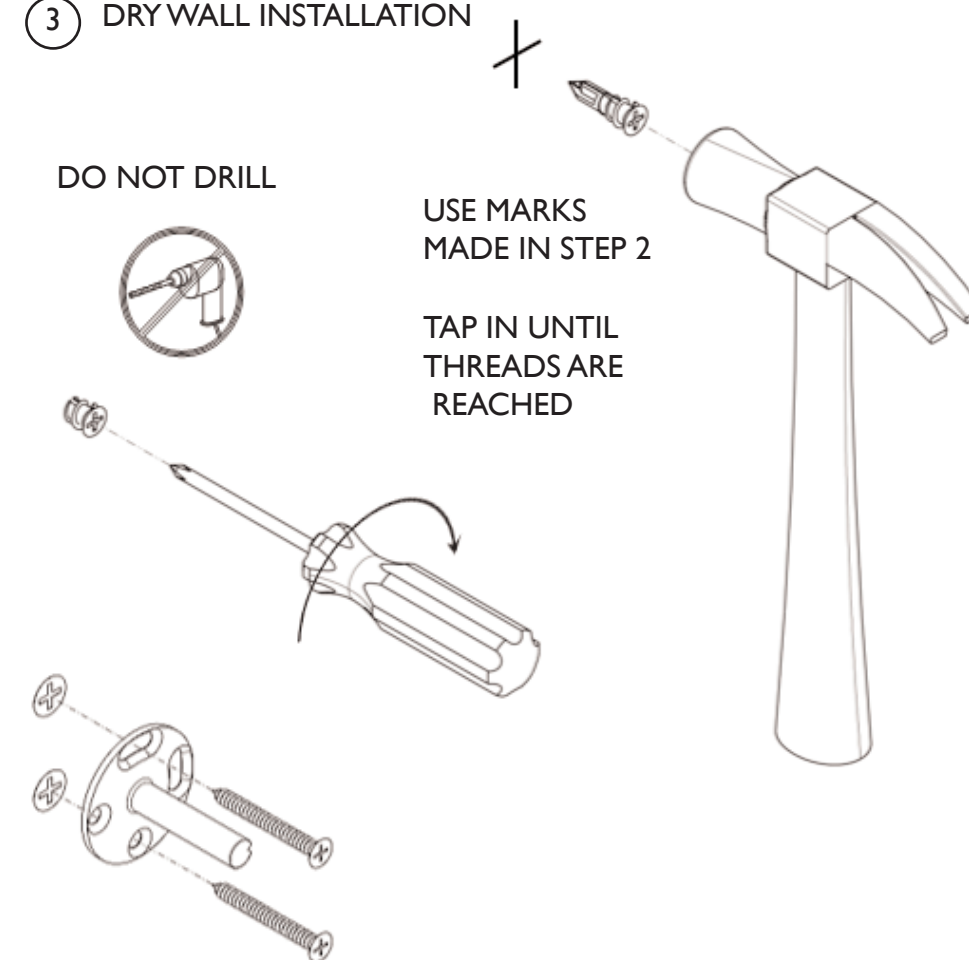


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

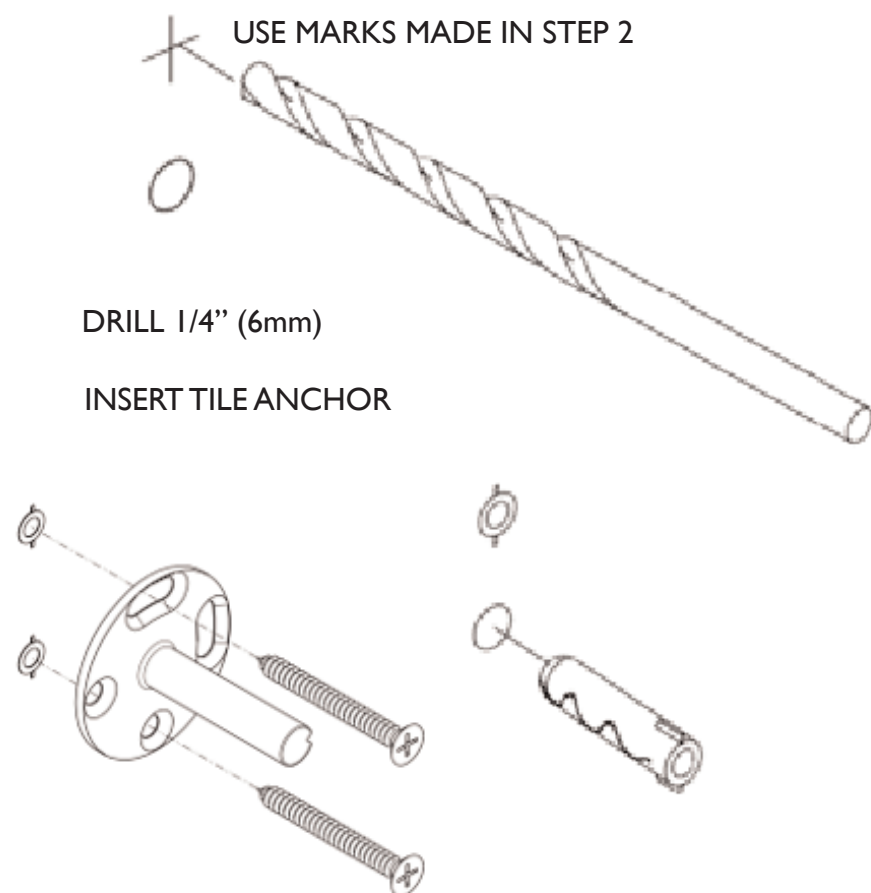

⑤ INSTALL PRODUCT ONTO BRACKET

