


ITEMS INCLUDED		TOOLS REQUIRED	
DRY WALL ANCHOR		X 4	PHILLIPS SCREW DRIVER
TILE ANCHOR		X 4	PEN / PENCIL
#8 SCREW		X 4	1/4" (6mm) DRILL
MOUNTING BRACKET		X 2	LEVEL SET
M6 X 1 SET SCREW		X 2	HAMMER
3MM ALLOY STEEL HEX KEY		X 1	
DOUBLE POST TOILET TISSUE HOLDER		X 1	


INSTALLATION INSTRUCTIONS

DOUBLE POST PIVOTING
TOILET TISSUE HOLDER

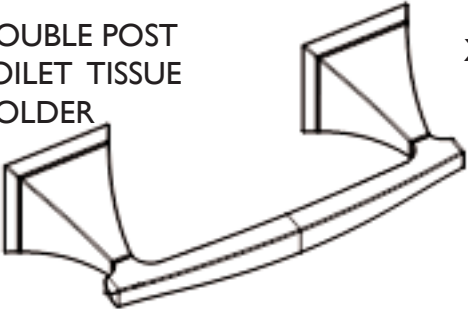


2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.NEWPORTBRASS.COM


① REMOVE MOUNTING BRACKETS

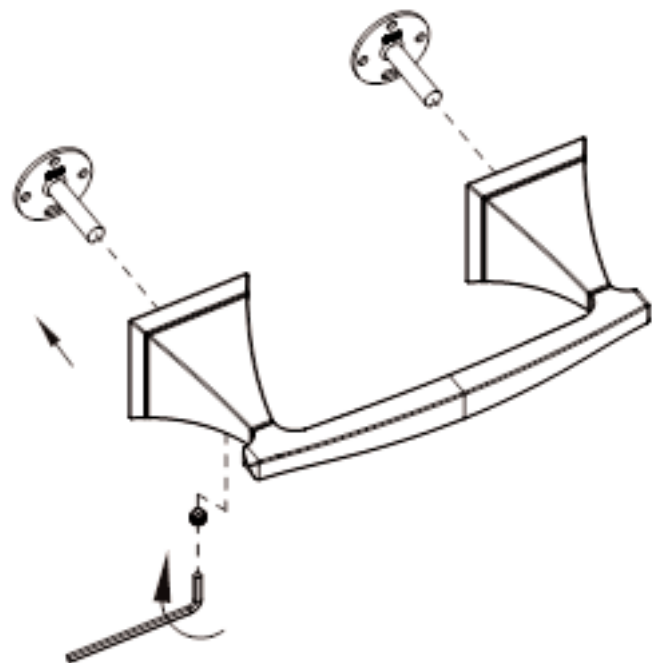


② ALIGN MOUNTING BRACKETS AND MARK LOCATION

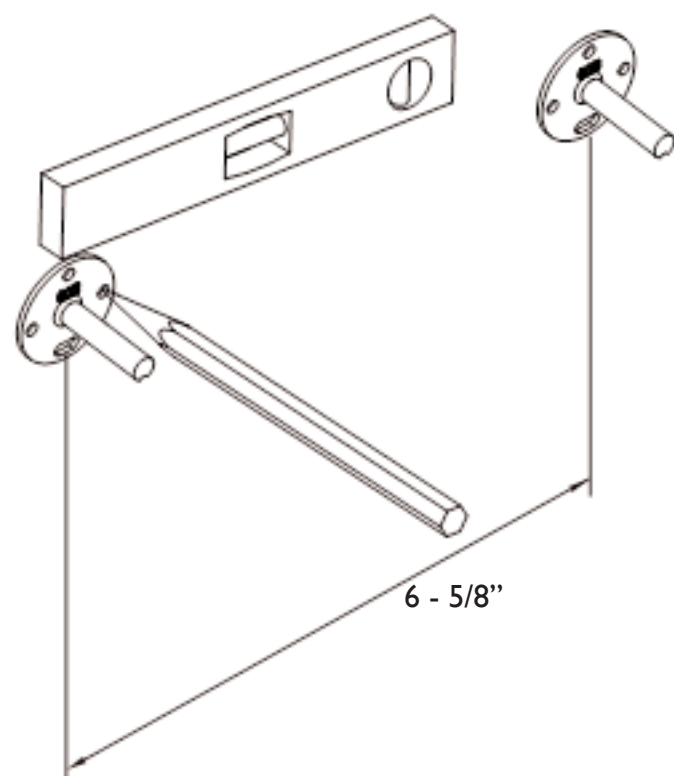

③ DRY WALL INSTALLATION

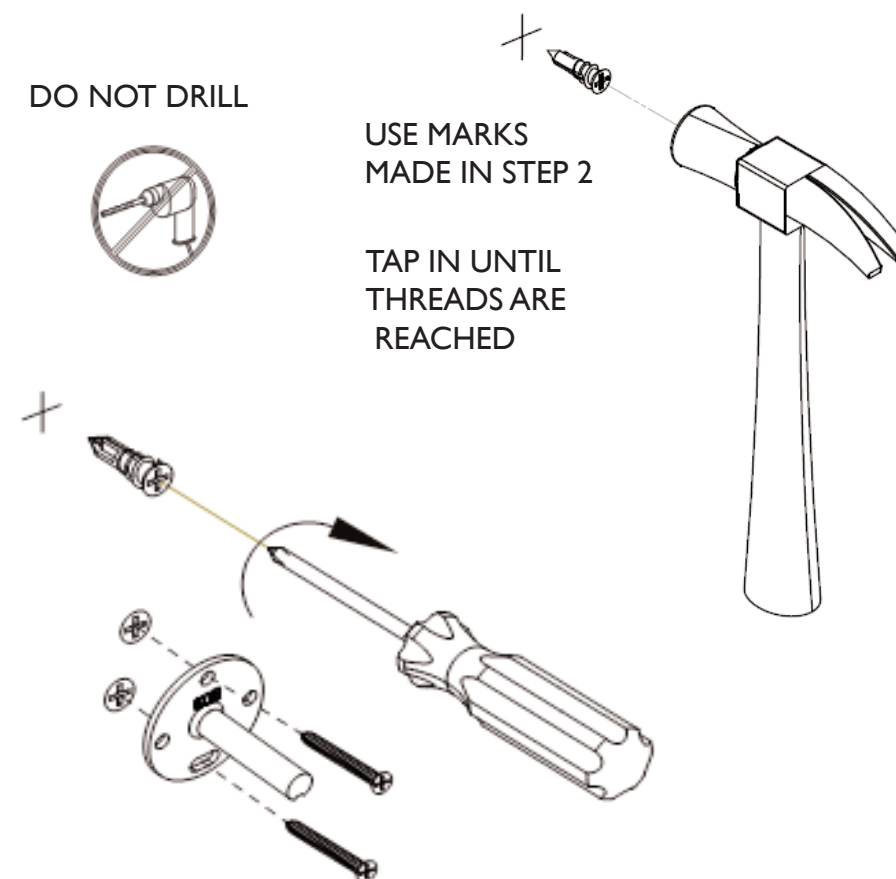

④ TILE OR SOLID WALL INSTALLATION

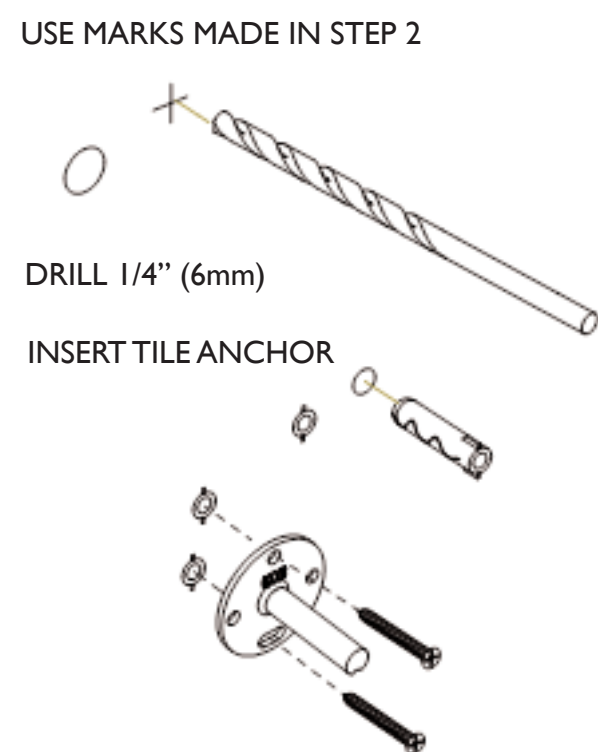

⑤ INSTALL PRODUCT ONTO BRACKETS

