



① REMOVE MOUNTING BRACKET

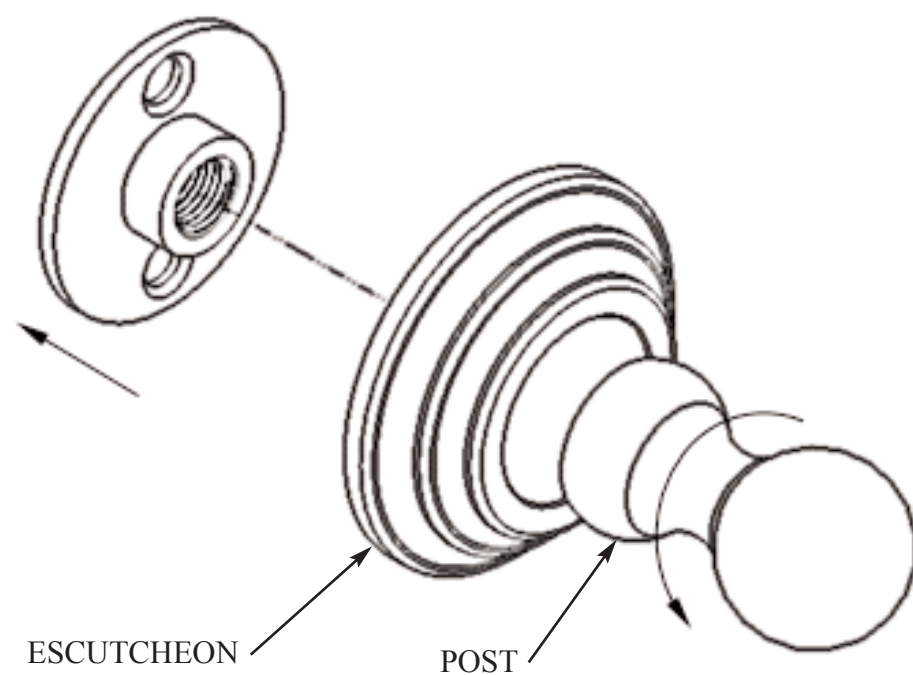


② ALIGN MOUNTING BRACKET AND MARK LOCATION

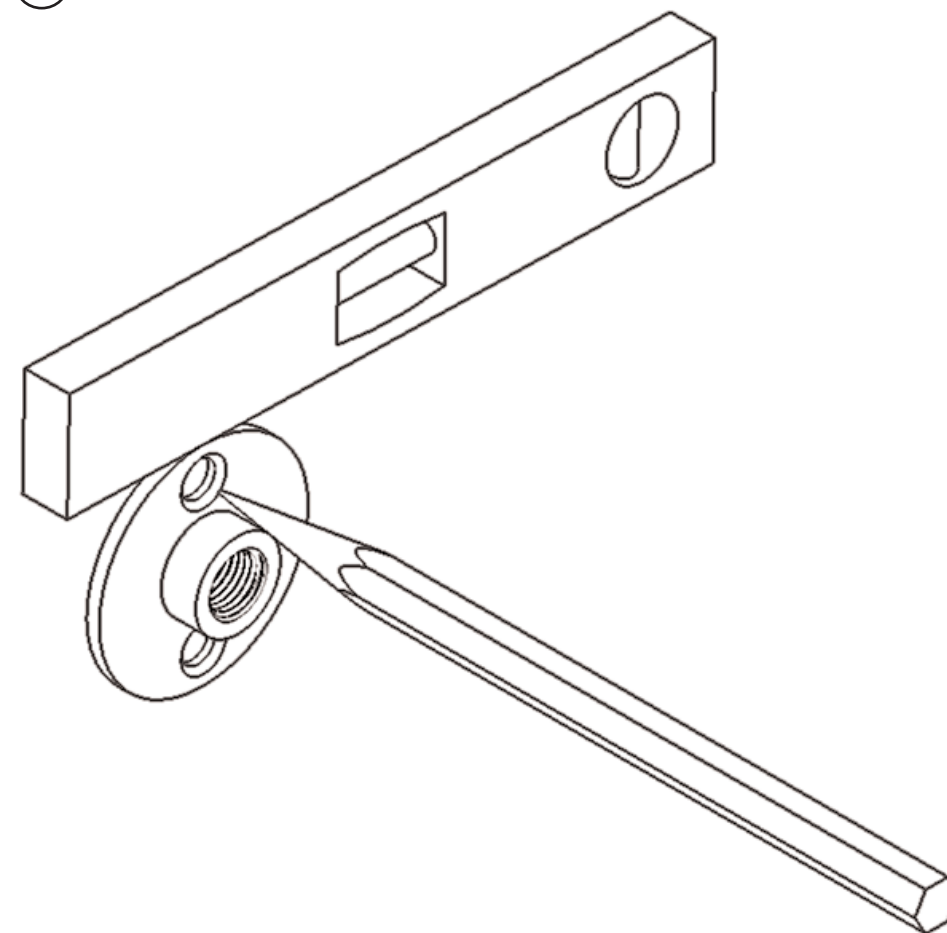


③ DRY WALL INSTALLATION

DO NOT DRILL

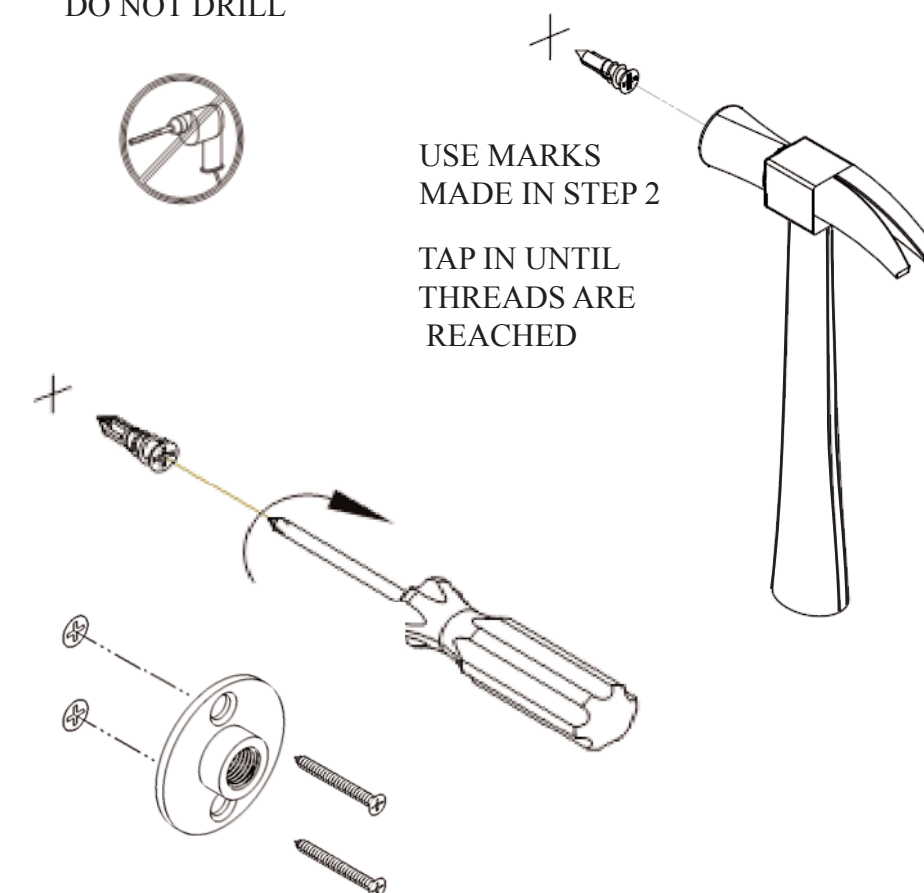

④ TILE OR SOLID WALL INSTALLATION
USE MARKS MADE IN STEP 2

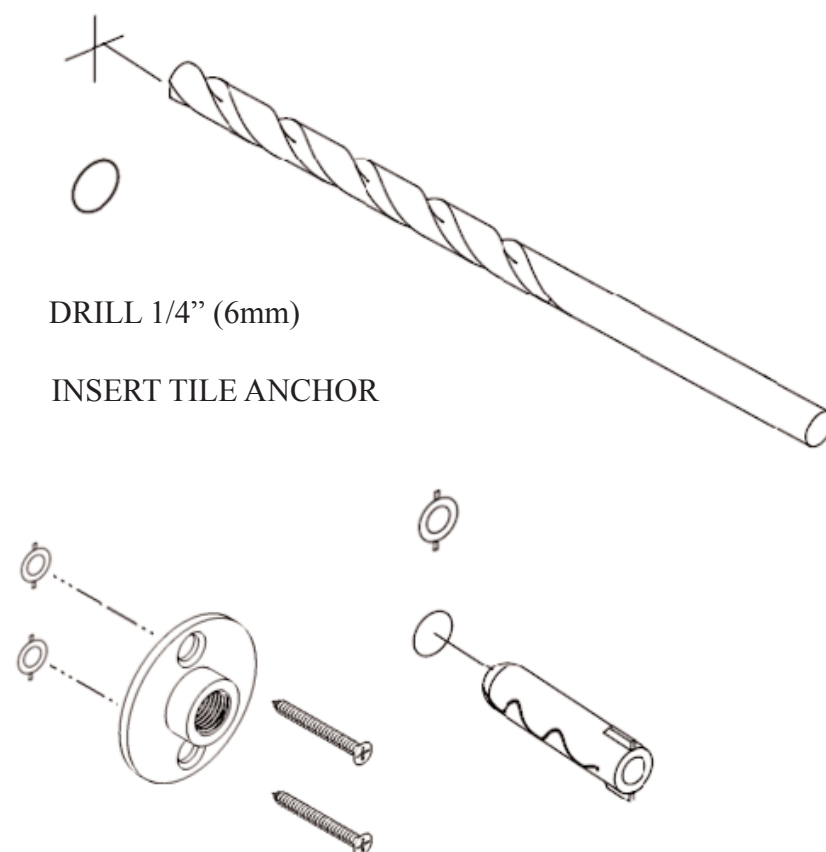

⑤ INSTALL PRODUCT ONTO BRACKET

