


NEWPORT BRASS

Flawless Beauty. From Faucet to Finish.

INSTALLATION INSTRUCTIONS INSTRUCCIONES DE INSTALACIÓN


VALVE VÁLVULA

BALANCED PRESSURE TUB / SHOWER CONTROL ROUGH
CONTROL DE BANERA / DUCHA DE PRESIÓN EQUILIBRADA

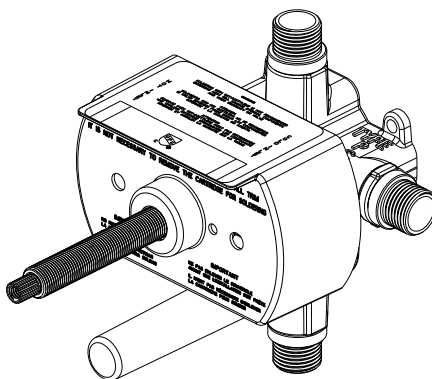

RECOMMEND INSTALLATION BY A PROFESSIONAL PLUMBING CONTRACTOR
RECOMIENDE LA INSTALACIÓN A UN CONTRATISTA DE PLOMERÍA PROFESIONAL

NOTE: THE USE OF PETROLEUM BASE PLUMBERS PUTTY ON OUR PRODUCTS WILL NULLIFY THE WARRANTY.
WE RECOMMEND THE USE OF CLEAR SILICONE SEALING MATERIALS.
NOTA: EL USO DE MASILLA DE PLOMERÍA A BASE DE PETRÓLEO EN NUESTROS PRODUCTOS ANULARÁ LA GARANTÍA.
RECOMENDAMOS EL USO DE MATERIALES DE SELLADO DE SILICONA TRANSPARENTE.

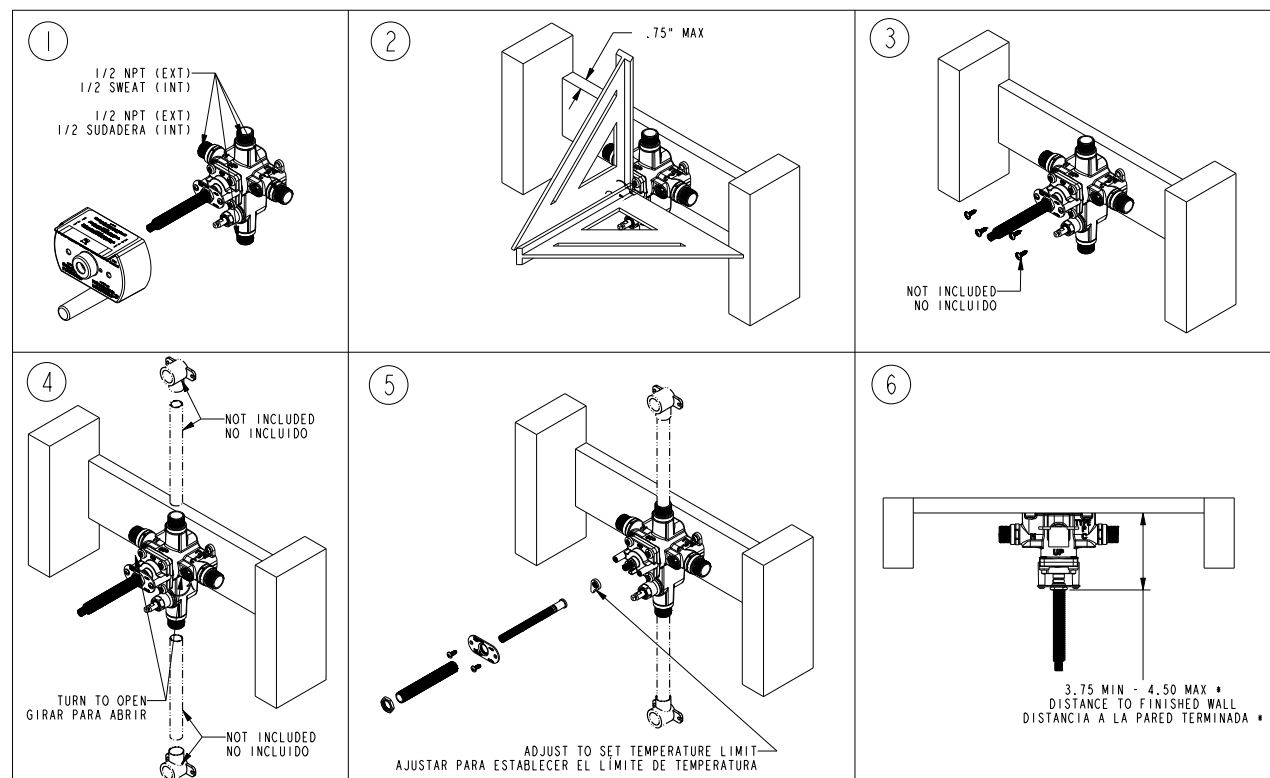

WARNING: If copper pipe soldered directly to valve inlet/outlet, avoid soldering at high temperature; ensure STOPS and cartridge are fully open.

ADVERTENCIA: Si la tubería de cobre se suelda directamente a la entrada/salida de la válvula, evitar soldar a alta temperatura; asegúrese de que los STOPS y el cartucho estén completamente abiertos.

*IF VALVE IS TOO FAR FROM FINISHED WALL, USE STEM EXTENSION KIT #1-249 (SOLD SEPARATELY).

*SI LA VÁLVULA ESTÁ DEMASIADO LEJOS DE LA PARED TERMINADA, USE EL KIT DE EXTENSIÓN DE VÁSTAGO #1-249 (SE VENDE POR SEPARADO).

