


FLOOR MOUNT TUB FILLER INSTALLATION INSTRUCTIONS

MODEL : 1400-4262, 1400-4263 | 500-4262, 1500-4263

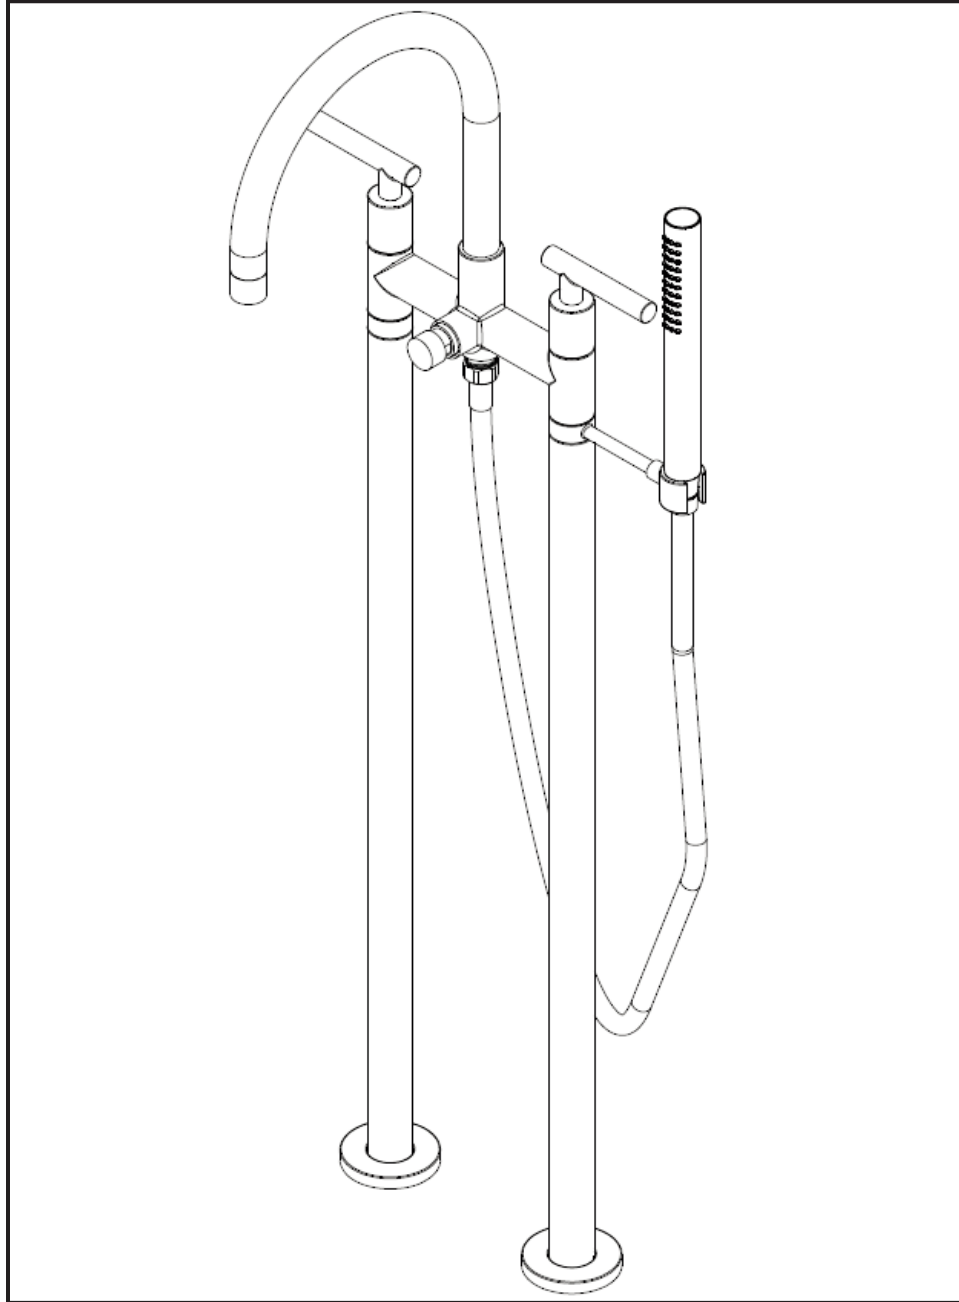

NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207

We recommended installation of this product by a Professional Plumbing Contractor

Note: The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.

Note: Required rough I-469 must be installed prior to installing the tub filler.

Tub Filler Installation

1. Slide a FLANGE (1) onto each of the tub filler risers. See **Figure 1**.
2. Remove the QUICK CONNECT ADAPTERS (2) from the rough by removing all six #8-32 SCREWS (3) with a 9/64" hex. See **Figure 2**
3. Attach the QUICK CONNECT ADAPTERS (2) to the two 3/4" NPT tub filler inlets. See **Figure 3**.
4. Insert the tub filler with attached QUICK CONNECT ADAPTERS (2) into the rough and tighten the six #8-32 SCREWS (3) to secure the quick connect adapters. See **Figure 4**.
5. Pressurize the tub filler with both handles in the off position to check for leaks.

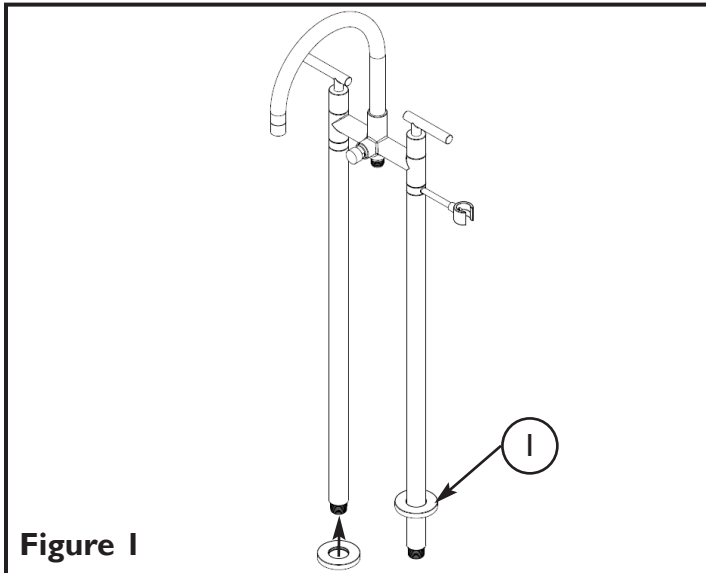


Figure 1

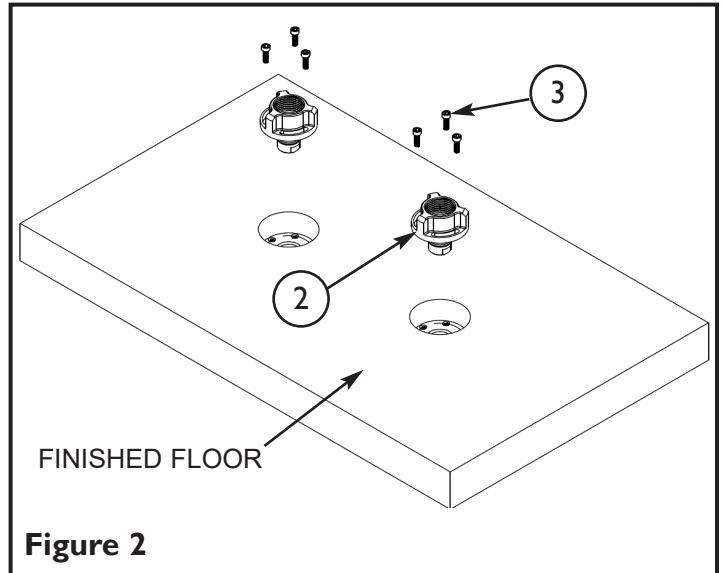


Figure 2

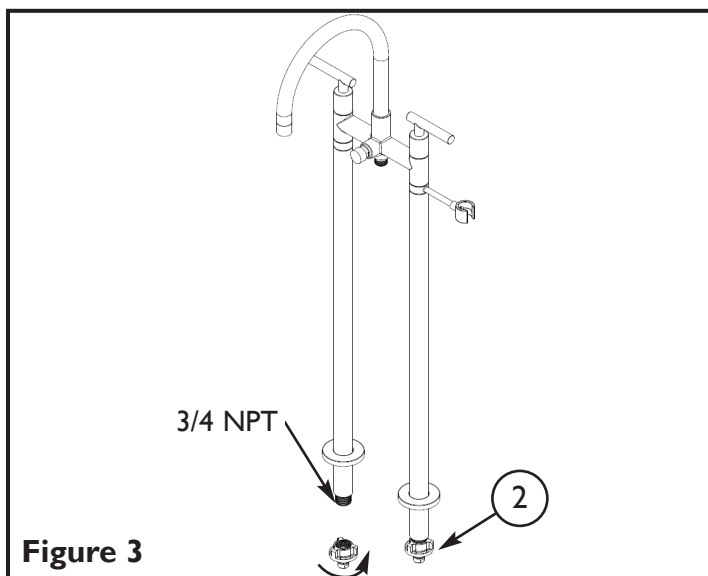


Figure 3



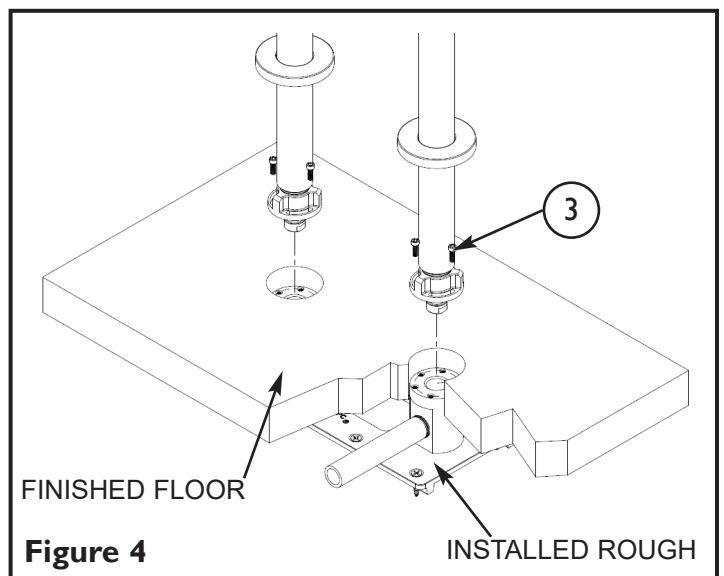


Figure 4

Tub Filler Installation (continued)





6. Orientate the SPOUT (4) as desired and lock in place by tightening the SET SCREW (5) on the back side of the spout. See **Figure 5**.
7. Attach the hand shower spray HOSE (6), remove the FLOW STRAIGHTENER (7) assembly, and flush the tub filler. Divert the flow to the HOSE (6) to flush as well. See **Figure 6**.
8. Reinstall FLOW STRAIGHTENER (7) assembly and attach HANDSHOWER (8) to HOSE (6). See **Figure 6**.

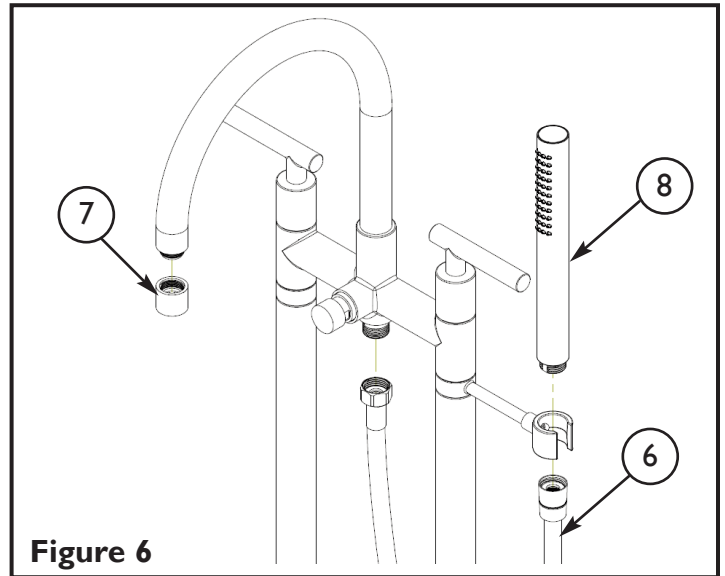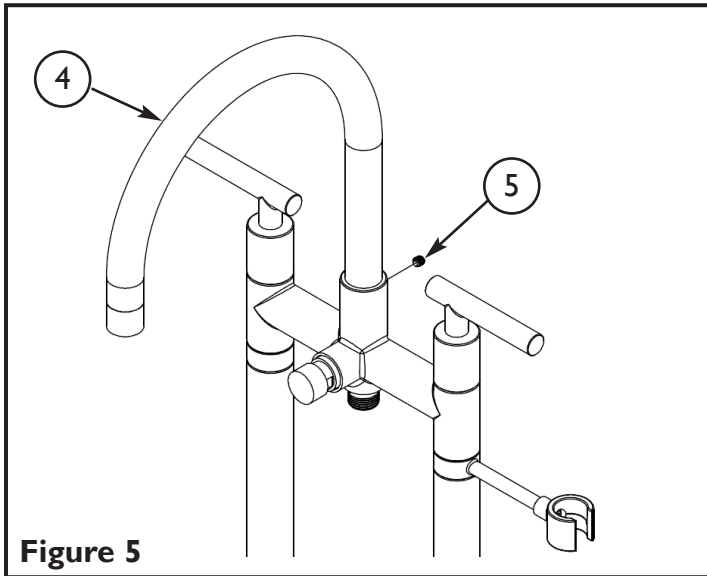

Hand shower holder adjustment about the axis of the riser.

Note: Following steps are to adjust the hand shower holder about the axis of the riser.

1. A 7/16 hex key is required.
2. Unscrew the HANDLE (9) assembly on the side with the HOLDER (10). See **Figure 7**.
3. Remove the CARTRIDGE (11). See **Figure 7**.
4. Using the 7/16 hex key loosen the visible NUT (12) just enough to move the HOLDER (10). Do not fully back out the nut. See **Figure 8**.
5. Adjust the HOLDER (10) to the desired location and tighten the NUT (12) to lock it in place. See **Figure 9**.
6. Install the CARTRIDGE (11) and torque to 15-20 ft-lbs. See **Figure 10**.
7. Install the HANDLE (9) assembly. See **Figure 10**.

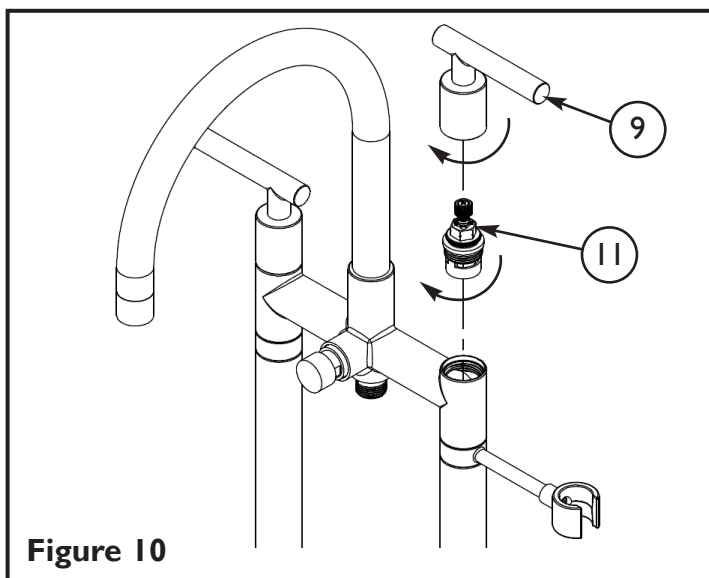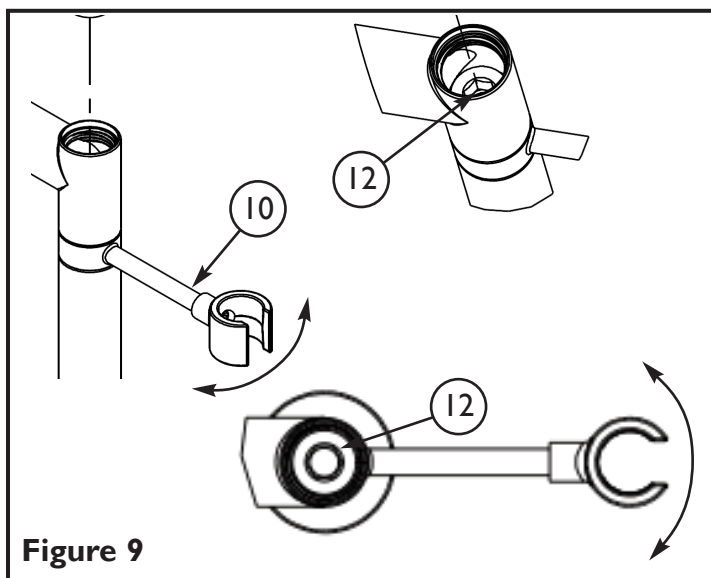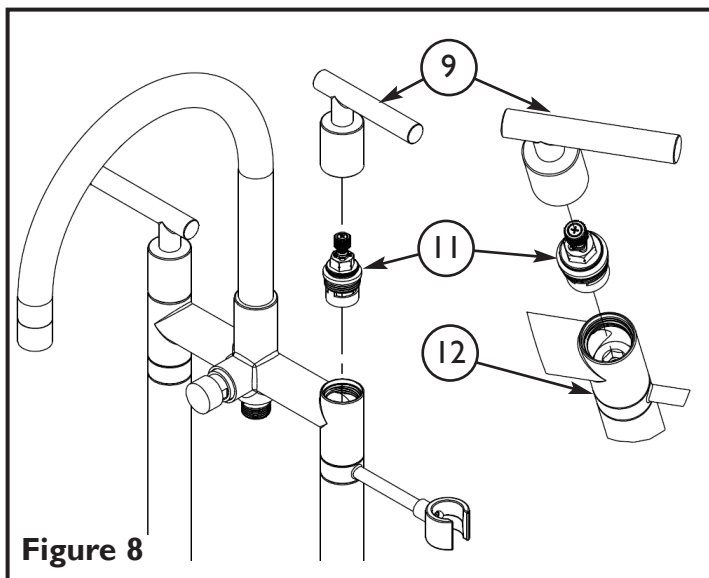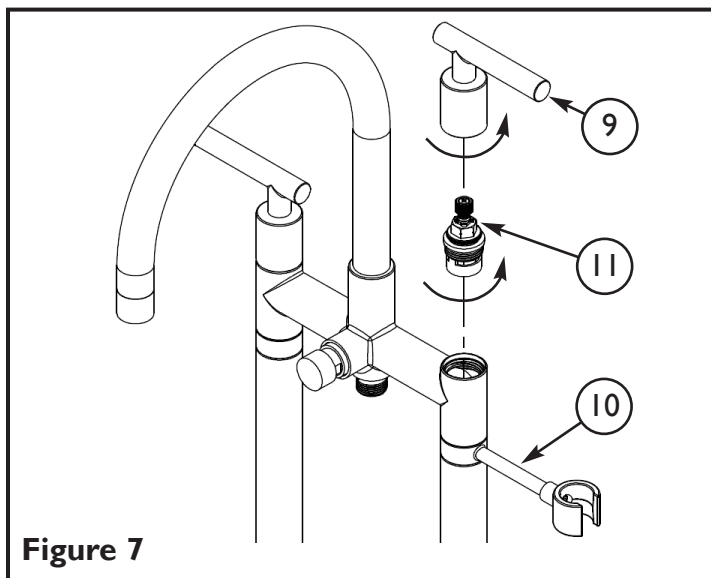

Hand shower holder adjustment about the axis of the holder arm.

Note: Following steps are to adjust the hand shower holder about the axis of the holder arm.

1. 5/32 hex key needed; T handle recommended.
2. Slowly loosen the SCREW (13) visible inside the HOLDER (10) until it is possible to move the HOLDER (10). See **Figure 11**. Notches should be felt as the HOLDER (10) is rotated. See **Figure 12**. If HOLDER (10) moves but notches aren't felt, the screw was loosen too much.
3. Once HOLDER (10) is at desired location, tighten the 5/32 hex SCREW (13). See **Figure 12**.

