


INSTALLATION INSTRUCTIONS  
SINGLE HOLE LAVATORY SET  
MODEL No's: I503, I508

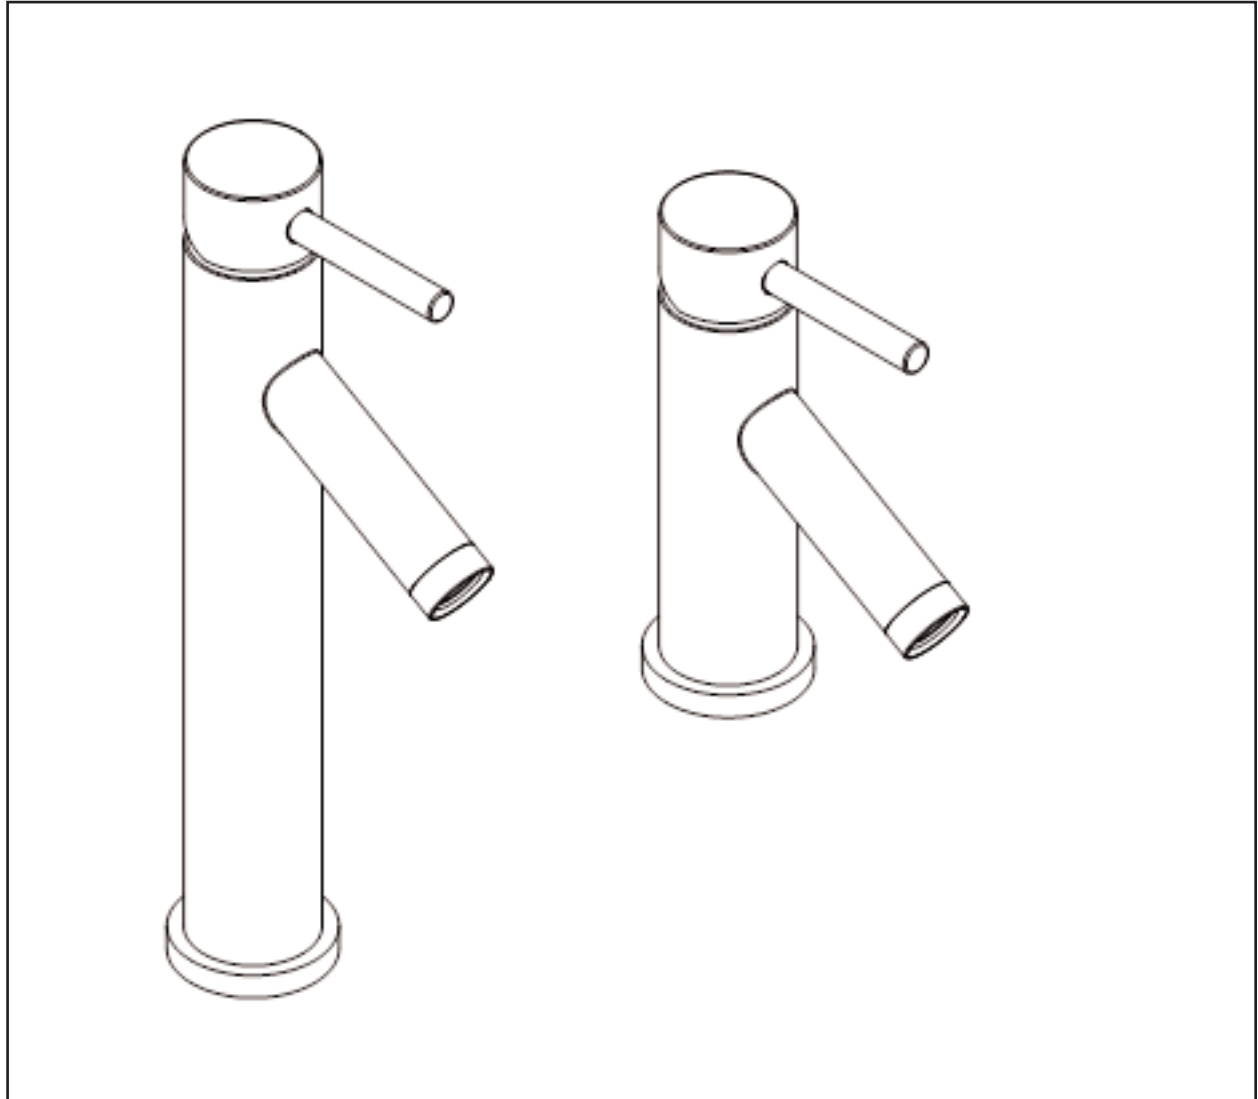

**NEWPORT BRASS**  
Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207

[WWW.NEWPORTBRASS.COM](http://WWW.NEWPORTBRASS.COM)

## **Recommended Installation by a Professional Plumbing Contractor**

**Note:** The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials.

**Recommended deck thru hole Ø 1.350-1.562"**

- 1. Place SHANK & HOSES through MOUNTING SURFACE. Secure spout into place with MOUNTING KIT. See Fig. 1**
- 2. Attach hot/cold spout supply hoses to appropriate supply lines and valves in the wall. See Fig. 2**
- 3. Drain assembly not included with I203-I. Remove FLANGE, RUBBER WASHER, STEEL WASHER, and discard drain CAP COVER from drain assembly. Place RUBBER WASHER into FLANGE. Then, place FLANGE through the sink hole (Clear silicone may be used in place of RUBBER WASHER). From underside of sink, install CONE WASHER, STEEL WASHER, and LOCK NUT into FLANGE. Thread LOCK NUT firmly. Thread TAILPIPE to FLANGE assembly and assemble TAILPIPE to existing PTrap. See Figure 3.**
- 4. Remove aerator from spout using key supplied. Turn on water supply, and flush system until water is clear. Check for leaks and make any final adjustments required. Re-attach aerator to the spout.**

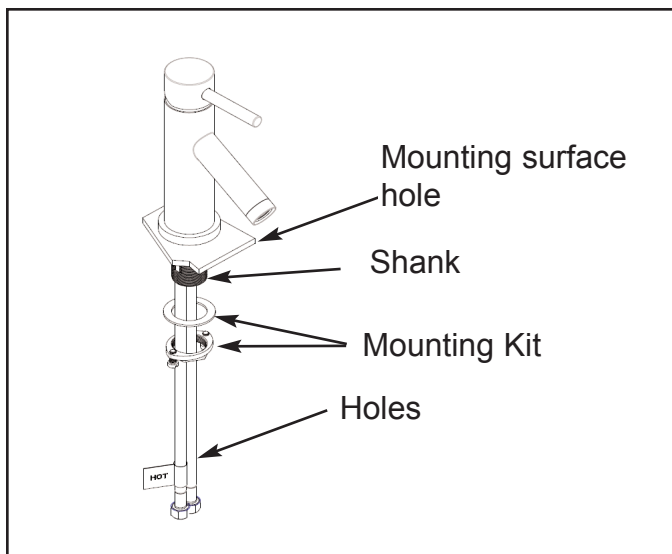


Figure 1

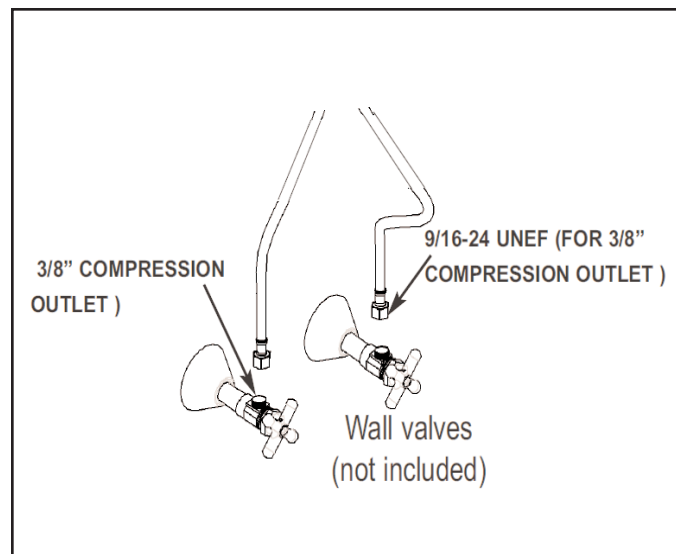


Figure 2

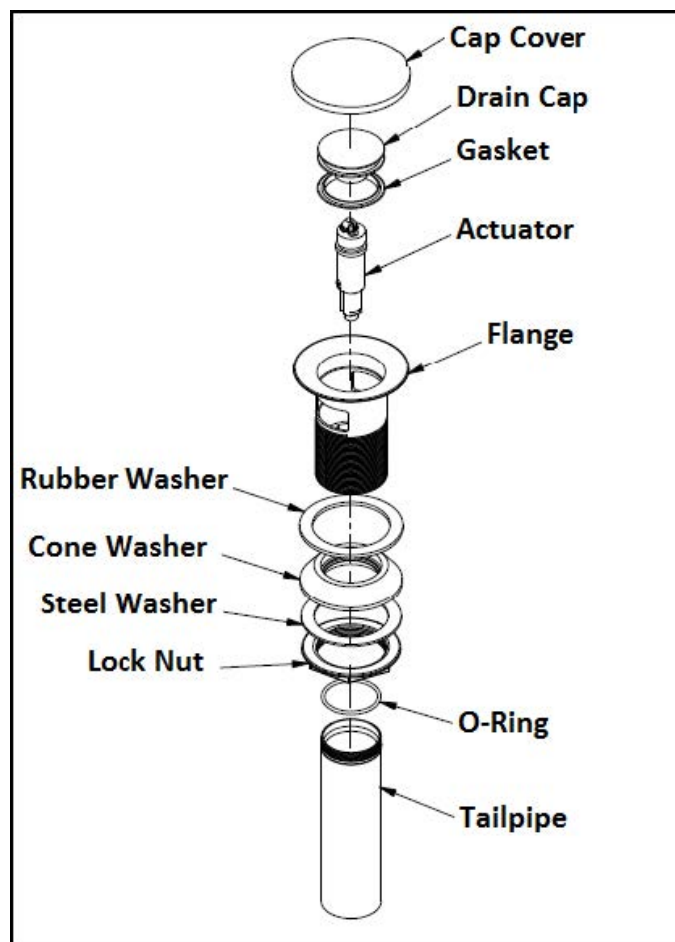


Figure 3