


INSTALLATION INSTRUCTIONS

HOT MOP ADAPTER : 277-01A, 277-02A

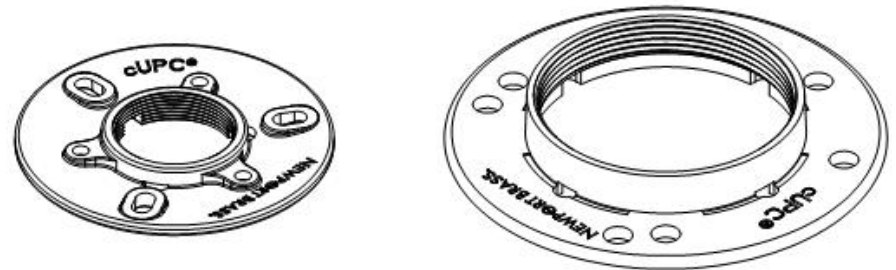


NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

2001 E.CARNEGIE AVE, SANTA ANNA CA 92705
(949) 417-5207
WWW.GINGERCO.COM

STEP 1

REMOVE BOLTS AND SAVE TO USE WITH HOT MOP ADAPTER

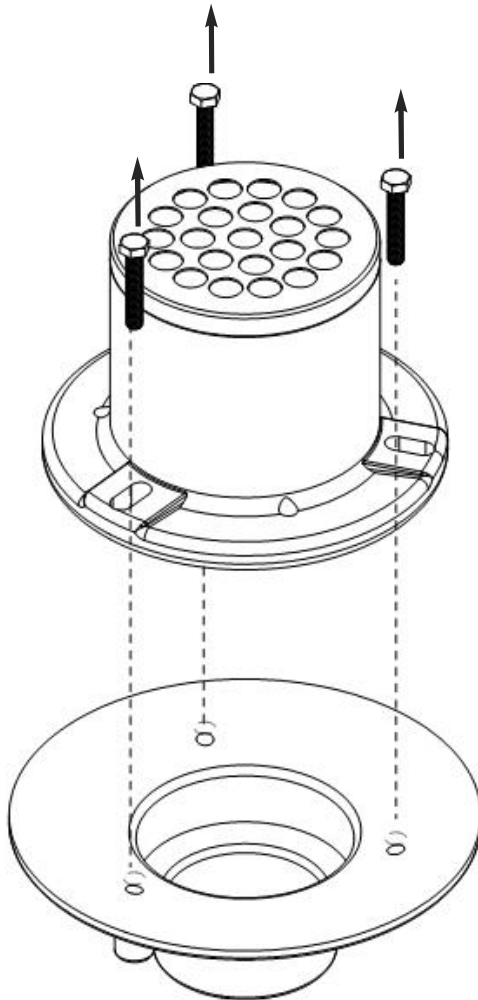

STEP 2

-PERFORM HOT MOP OR WATER PROOFING STEPS PER WATER PROOFING STANDARDS, MANUFACTURER REQUIREMENTS AND /OR LOCAL/CITY PLUMBING CODES.

-ATTACH HOT MOP ADAPTER WITH SCREWS SAVED IN STEP 1. ENSURE ADAPTER IS INSTALLED LEVEL.

