


Installation Instructions

THROAT ASSEMBLY


Model No: NWP 277-04

NWP 277-06

NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

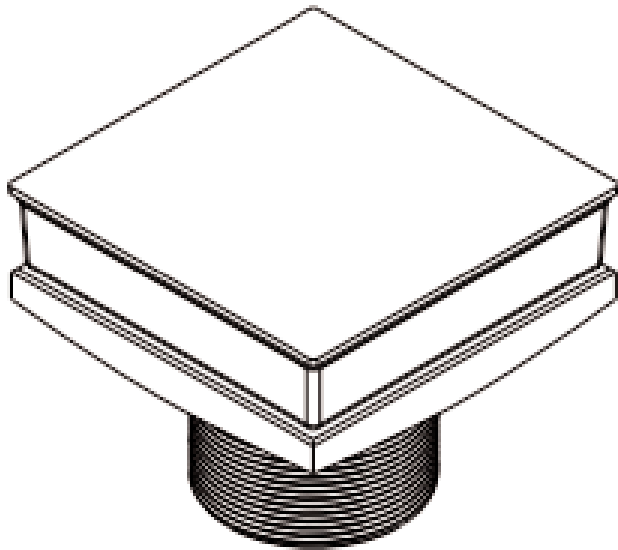

277-04

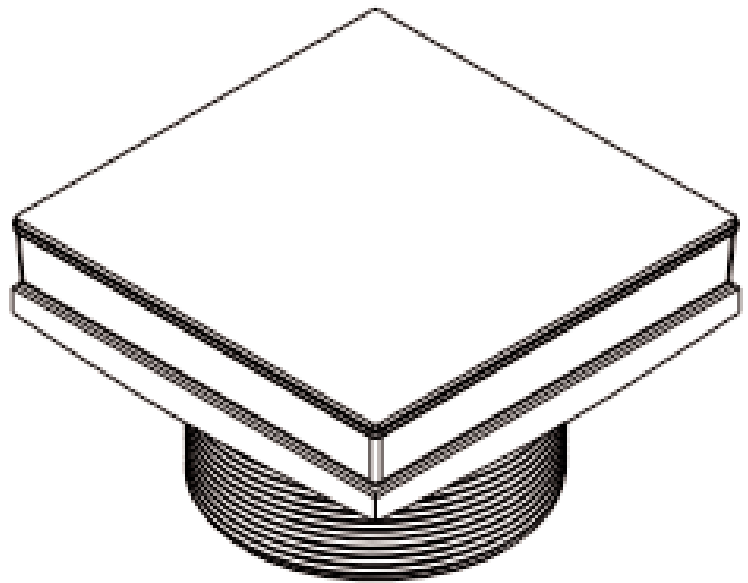

277-06

2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207

WWW.NEWPORTBRASS.COM

INSTALLATION INSTRUCTIONS

- **Brasstech recommends this product be installed by licensed contractor(s)**

THROAT/GRID HEIGHT ADJUSTMENT (see figure 1)

1. To obtain proper grid height, rotate THROAT ASSEMBLY [2] to raise or lower. One (1) complete rotation of THROAT ASSEMBLY [2] is equal to 1/8" in vertical adjustment.
2. Proper height should be determined by flooring contractor.
3. Before the final mortar application it is suggested to place some PEA GRAVEL [3] over WEEP HOLES [1] to prevent blockage of the holes.
4. Place THIN-SET Mortar [4] into TILE HOLDER [5] to ensure the height of the cover TILE [6] is level to the rest of the floor

NOTES: *All figures show cast iron no-hub connection*

277-04 engages with 2"IPS drain body [9]

277-06 engages with 4" IPS drain body [9]

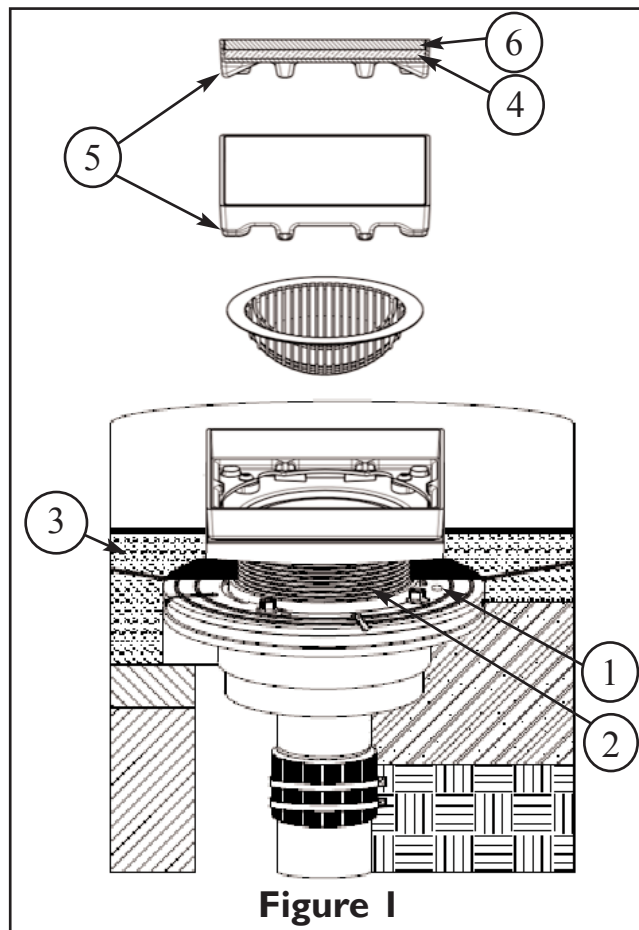


Figure 1