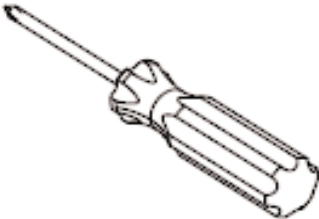
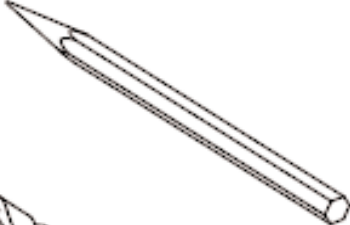
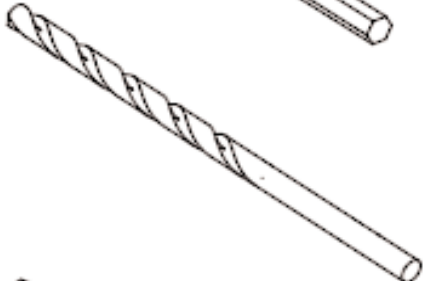
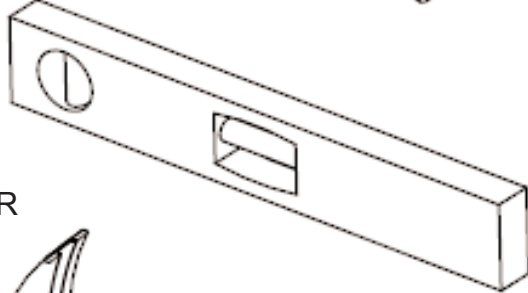
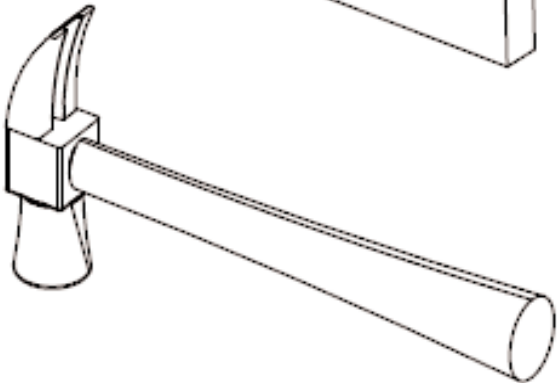
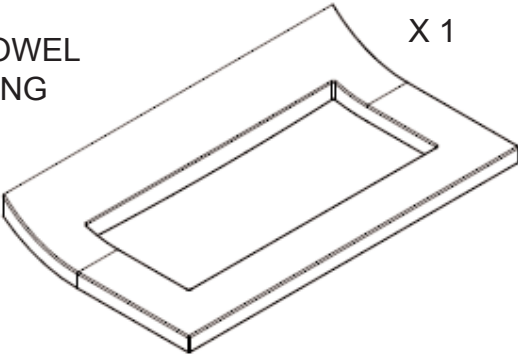


| ITEMS INCLUDED   |                                                                                     |     | TOOLS REQUIRED        |                                                                                      |
|------------------|-------------------------------------------------------------------------------------|-----|-----------------------|--------------------------------------------------------------------------------------|
| DRY WALL ANCHOR  |    | X 2 | PHILLIPS SCREW DRIVER |    |
| TILE ANCHOR      |    | X 2 | PEN / PENCIL          |    |
| #8 SCREW         |    | X 2 | 1/4" (6 mm) DRILL     |   |
| MOUNTING BRACKET |   | X 1 | LEVEL SET             |  |
| 1/4-28 SET SCREW |  | X 1 | HAMMER                |  |
| 1/8" HEX KEY     |  | X 1 |                       |                                                                                      |
| TOWEL RING       |  | X 1 |                       |                                                                                      |

# SECANT

## INSTALLATION INSTRUCTIONS

37-09


## TOWEL RING

**NEWPORT BRASS®**


*Flawless Beauty. From Faucet to Finish.™*

2001 CARNEGIE AVE, SANTA ANA CA 92705  
 (949) 417-5207  
[WWW.NEWPORTBRASS.COM](http://WWW.NEWPORTBRASS.COM)

① REMOVE MOUNTING BRACKET

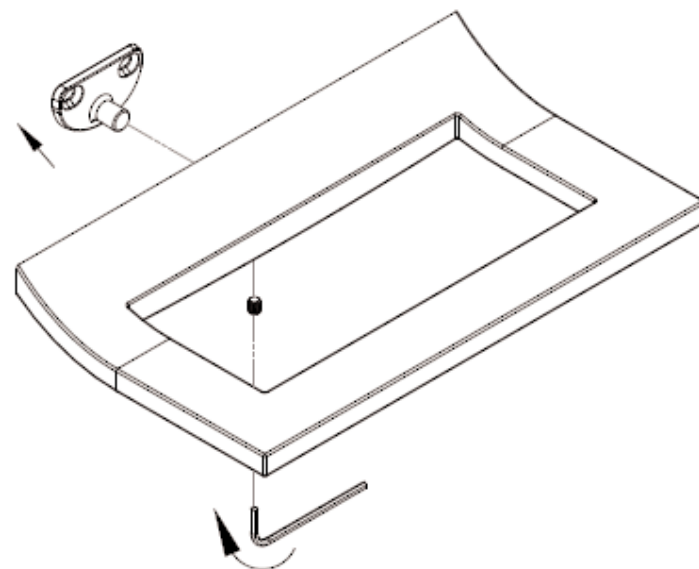

② ALIGN MOUNTING BRACKET AND MOUNT LOCATION

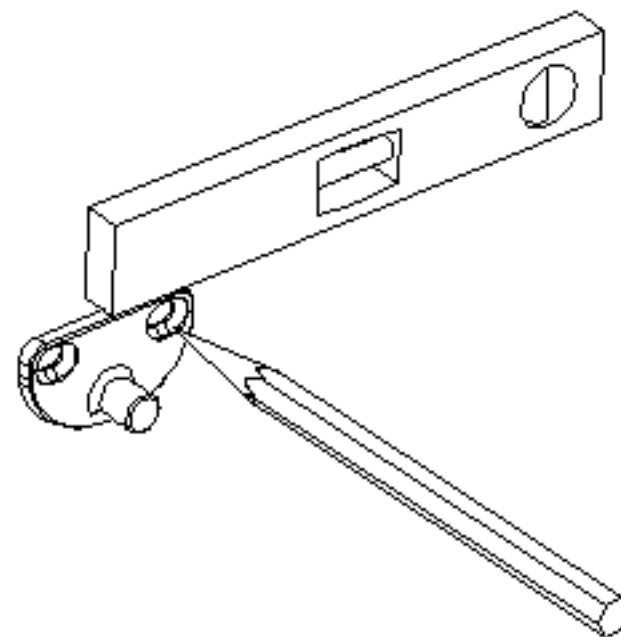


③ DRY WALL INSTALLATION

DO NOT DRILL




USE MARKS  
MADE IN STEP 2

TAP IN UNTIL  
THREADS ARE  
REACHED

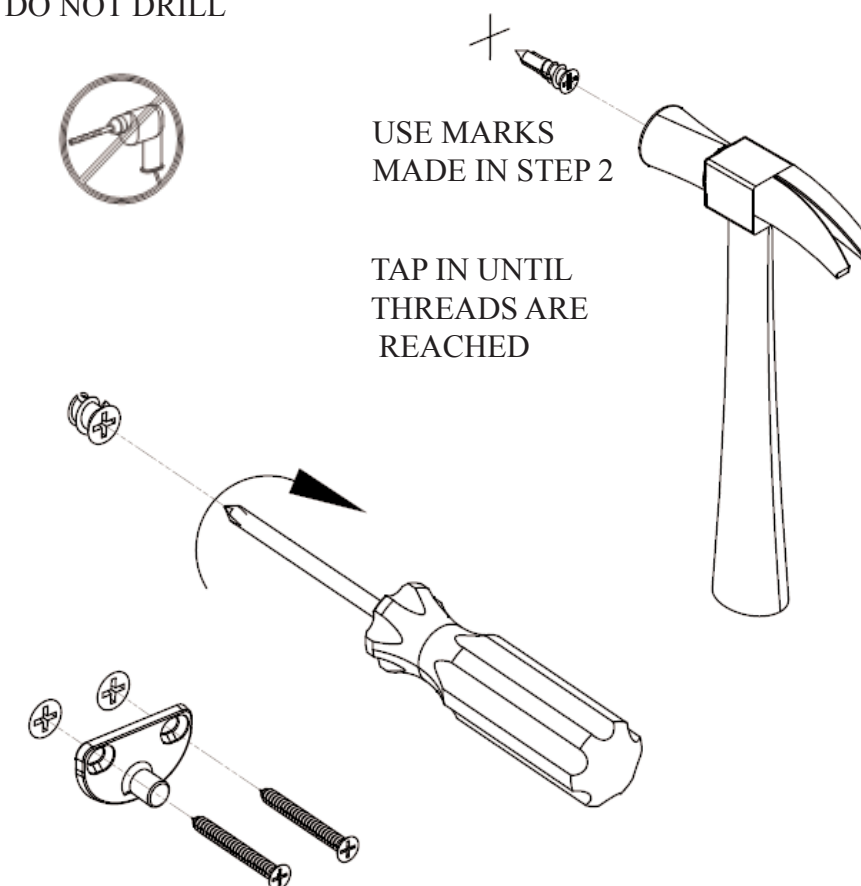


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

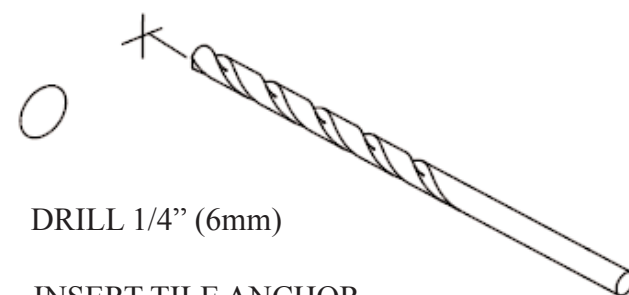


DRILL 1/4" (6mm)

INSERT TILE ANCHOR

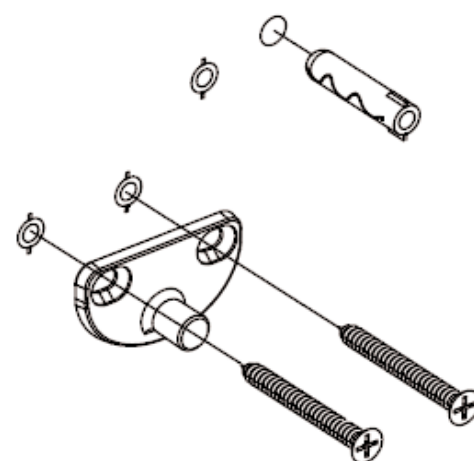

⑤ INSTALL PRODUCT ONTO BRACKET

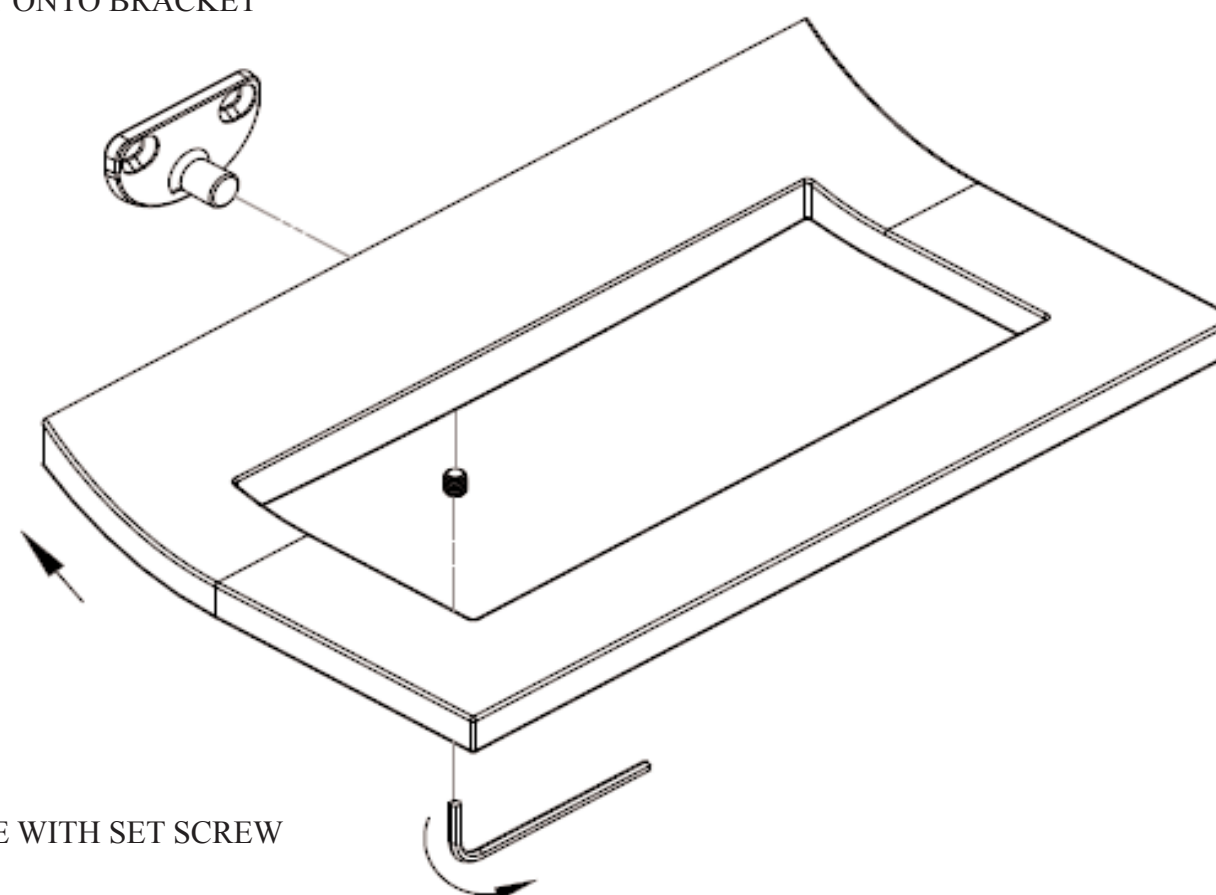

SECURE WITH SET SCREW