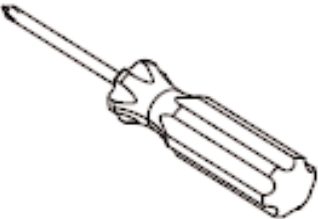
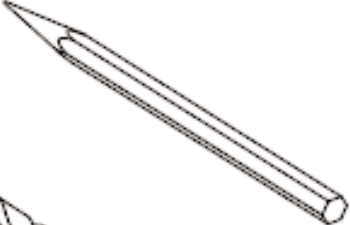
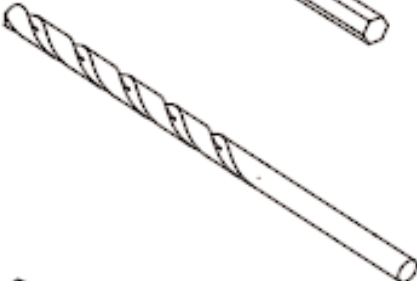
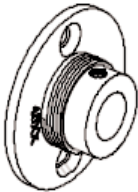
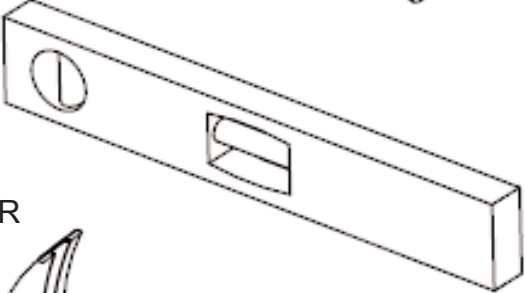
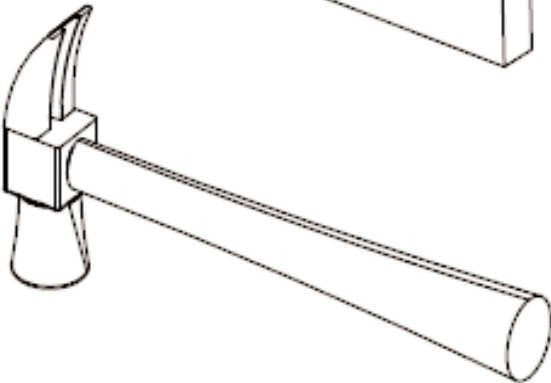


ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 2	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 2	PEN / PENCIL	
#8 SCREW		X 2	1/4" (6 mm) DRILL	
MOUNTING FLANGE		X 1	LEVEL SET	
M5X5 SET SCREW		X 1	HAMMER	
2.5 MM HEX KEY		X 1		
TOWEL RING		X 1		

ITHACA

INSTALLATION INSTRUCTIONS


38-09

8” TOWEL RING


NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING FLANGE
STEP 1b

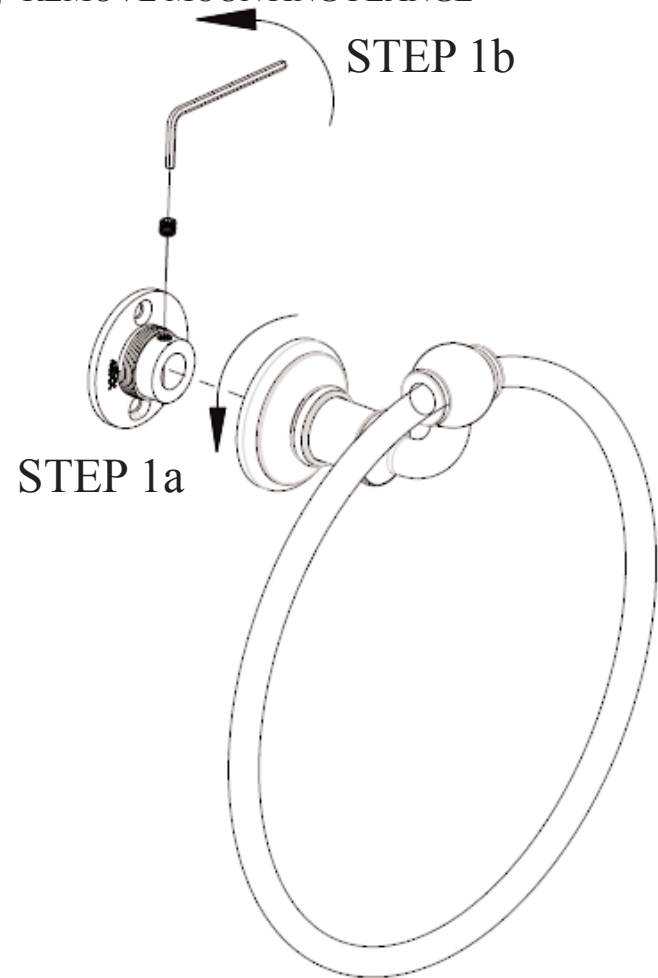

② ALIGN MOUNTING FLANGE AND MARK LOCATION

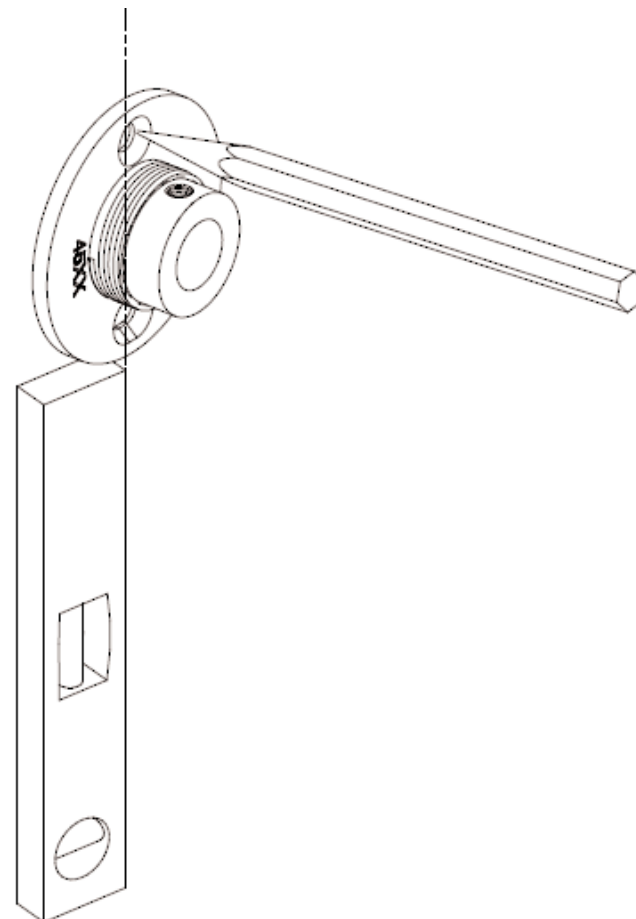



③ DRY WALL INSTALLATION

DO NOT DRILL




USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

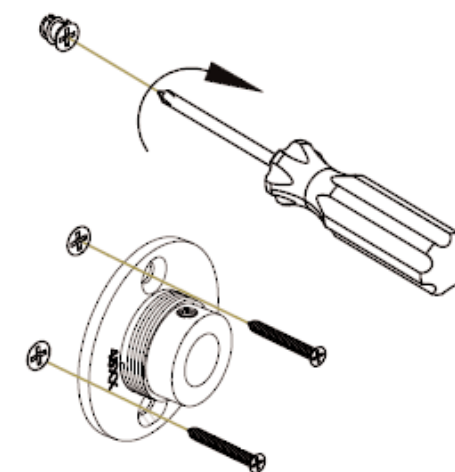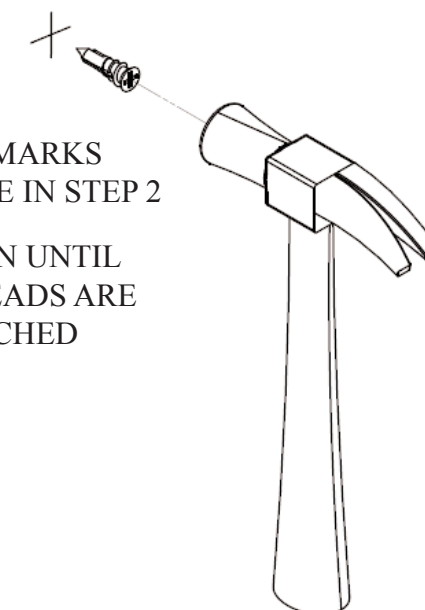


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

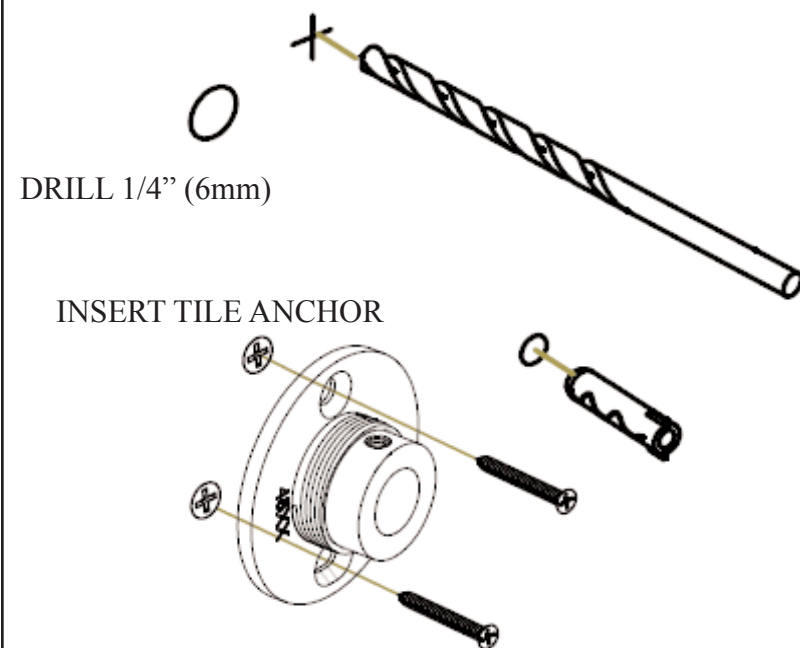

⑤ INSTALL PRODUCT ONTO FLANGE

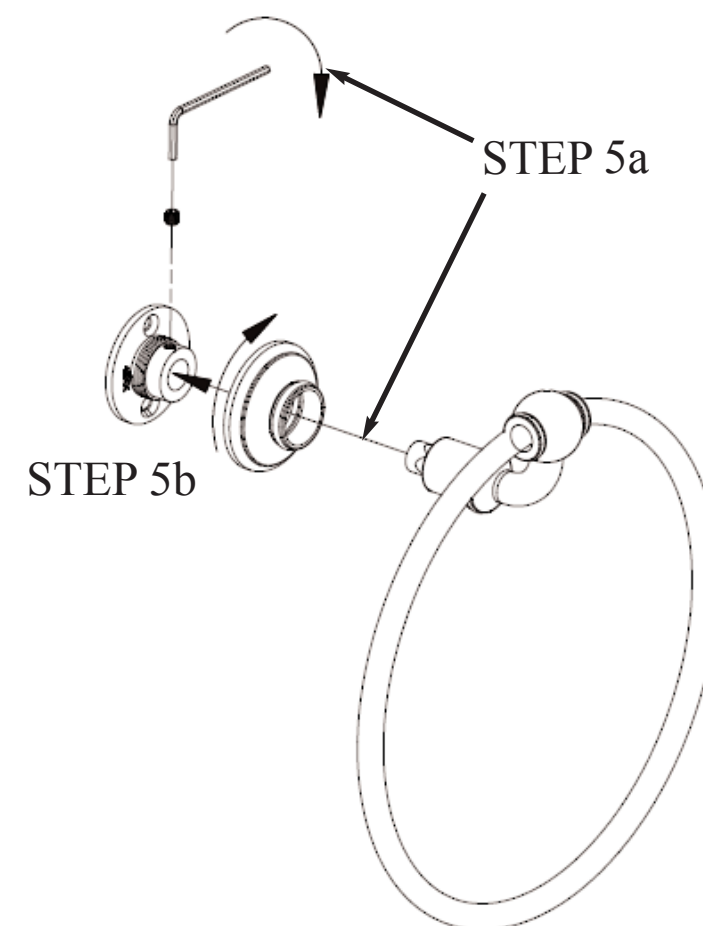

SECURE WITH SET SCREW