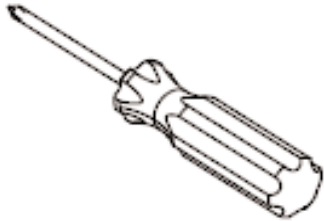
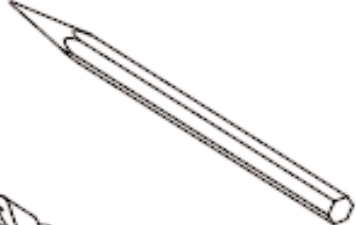
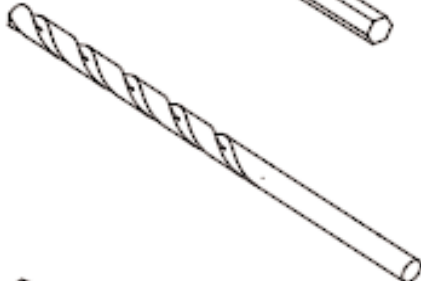
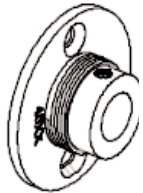
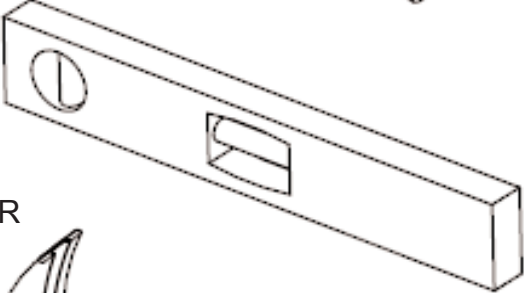
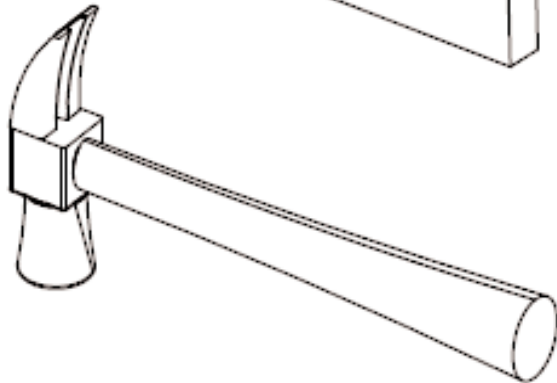
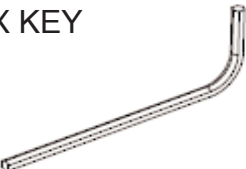
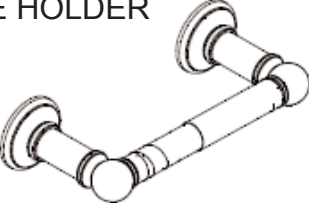


ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 4	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 4	PEN / PENCIL	
#8 SCREW		X 4	1/4" (6 mm) DRILL	
MOUNTING FLANGE		X 2	LEVEL SET	
M5X5 SET SCREW		X 2	HAMMER	
2.5 MM HEX KEY		X 1		
DOUBLE POST TISSUE HOLDER		X 1		

ITHACA

INSTALLATION INSTRUCTIONS


38-28

DOUBLE POST TISSUE HOLDER


NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705
(949) 417-5207
WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING FLANGES

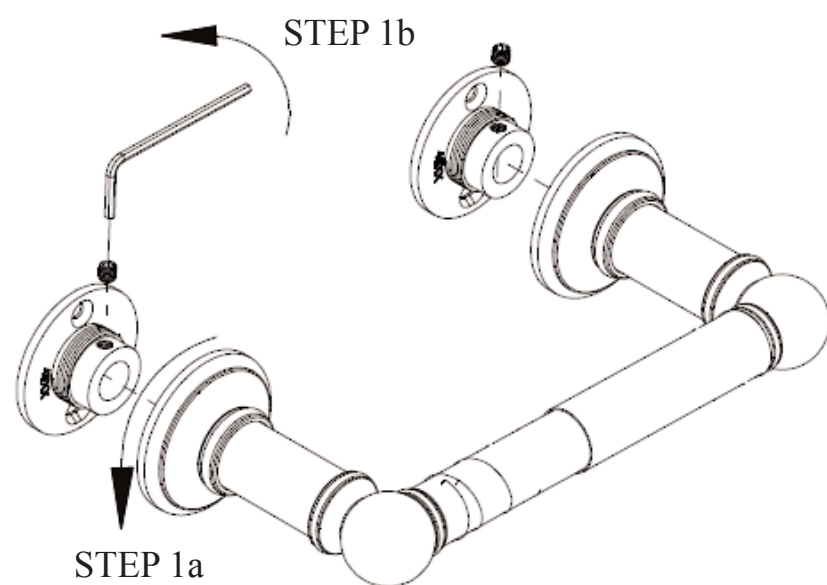


② ALIGN MOUNTING FLANGES AND MARK LOCATION

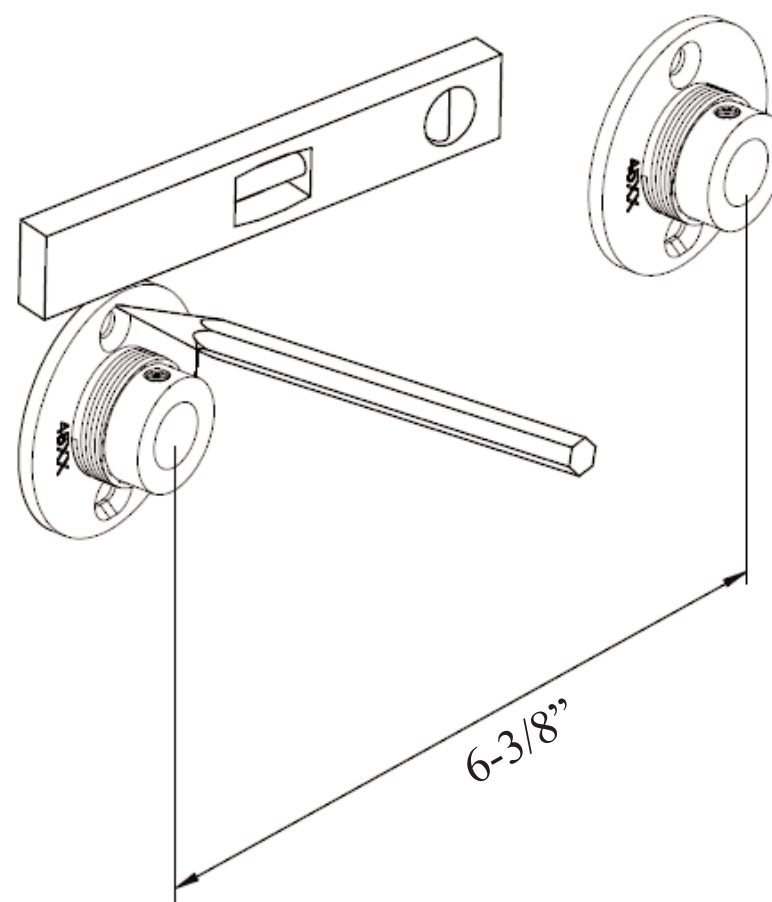


③ DRY WALL INSTALLATION

DO NOT DRILL

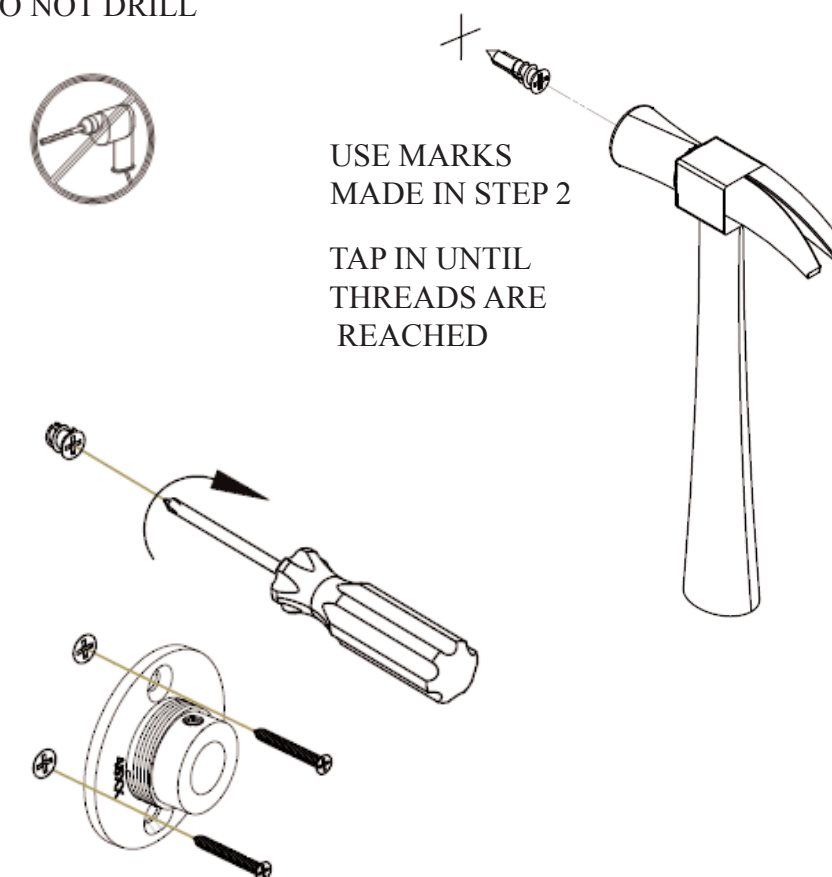


④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

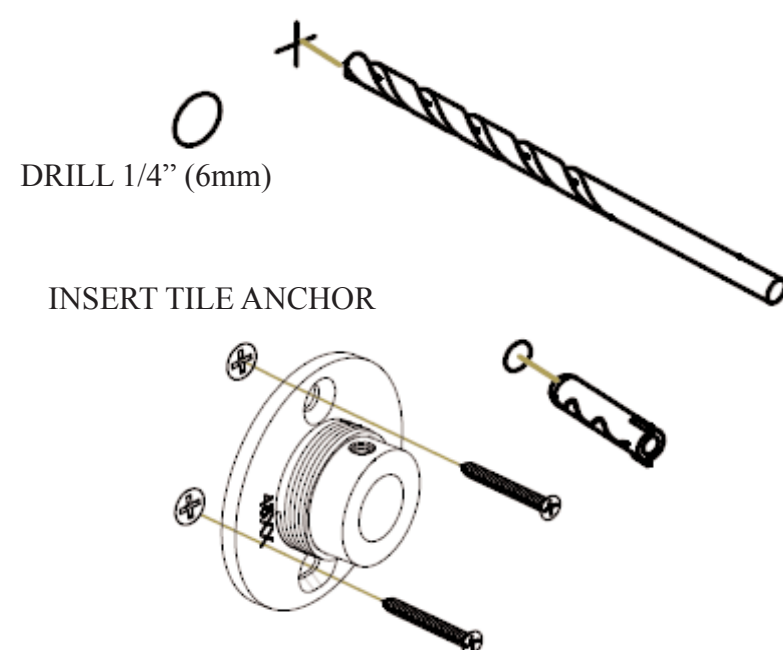

⑤ INSTALL PRODUCT ONTO FLANGES

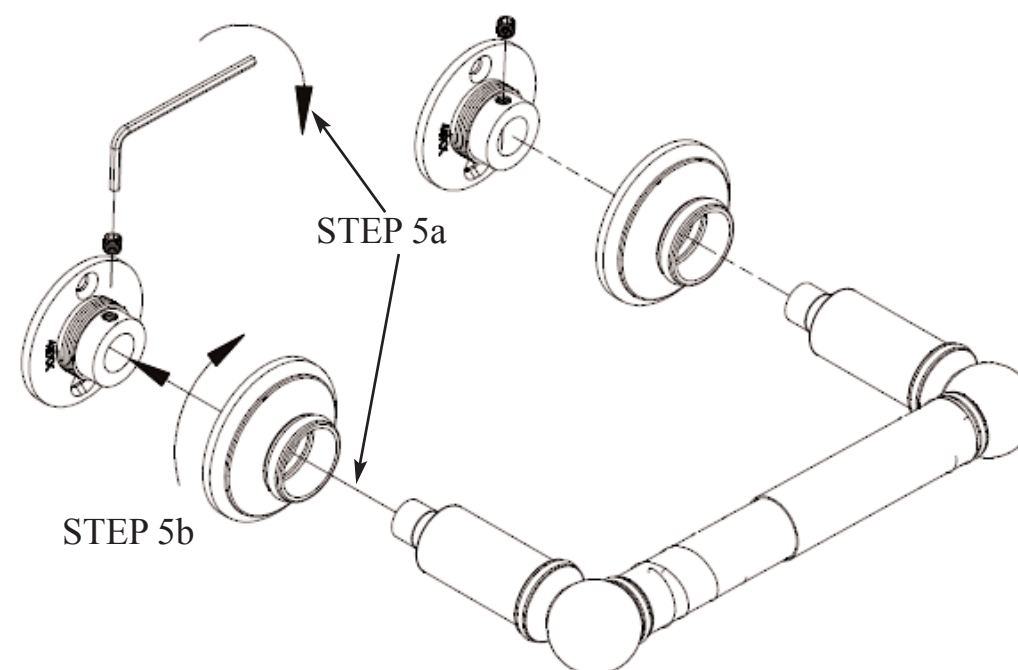

SECURE WITH SET SCREW