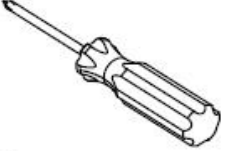
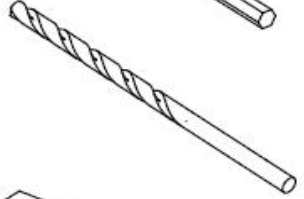
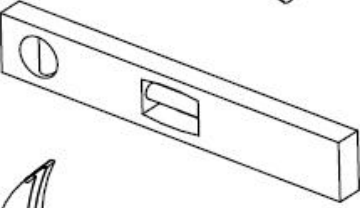
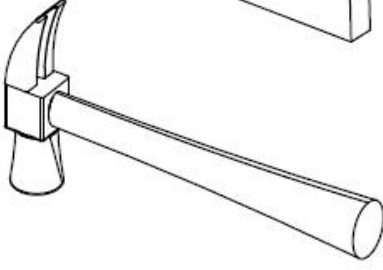
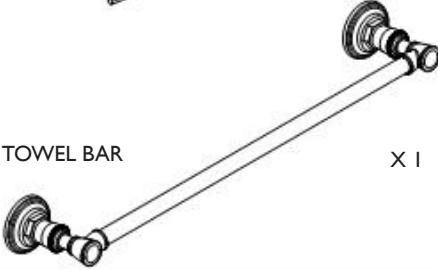


| ITEMS INCLUDED             |                                                                                        | TOOLS REQUIRED              |                                                                                     |
|----------------------------|----------------------------------------------------------------------------------------|-----------------------------|-------------------------------------------------------------------------------------|
| DRY<br>WALL ANCHOR         |  X 4  | PHILLIPS<br>SCREW<br>DRIVER |    |
| TILE<br>ANCHOR             |  X 4  | PEN / PENCIL                |    |
| #8 SCREW                   |  X 4  | 1/4" (6 mm)<br>DRILL        |    |
| MOUNTING<br>BRACKET        |  X 2  | LEVEL SET                   |  |
| M6 X 1 SET<br>SCREW        |  X 2  | HAMMER                      |  |
| 3MM ALLOY<br>STEEL HEX KEY |  X 1 |                             |                                                                                     |
| TOWEL BAR                  |  X 1 |                             |                                                                                     |

**NWP-40-02**  
**EN-2717**  
**REV -**

## INSTALLATION INSTRUCTIONS

40-02

### TOWEL BAR

**NEWPORT BRASS**  
 Flawless Beauty. From Faucet to Finish.™


2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207


(949) 417-5207

WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKETS

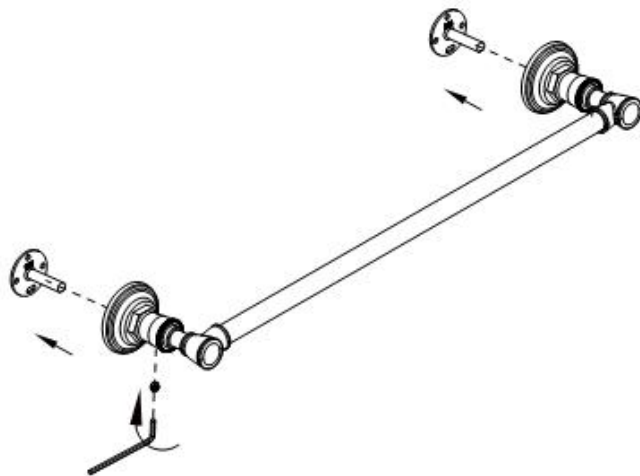

② ALIGN MOUNTING BRACKETS AND MARK LOCATION

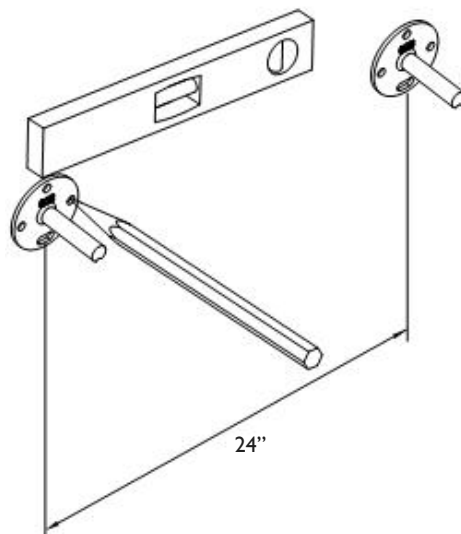


③ DRY WALL INSTALLATION

DO NOT DRILL



USE MARKS  
MADE IN STEP 2  
TAP IN UNTIL  
THREADS ARE  
REACHED

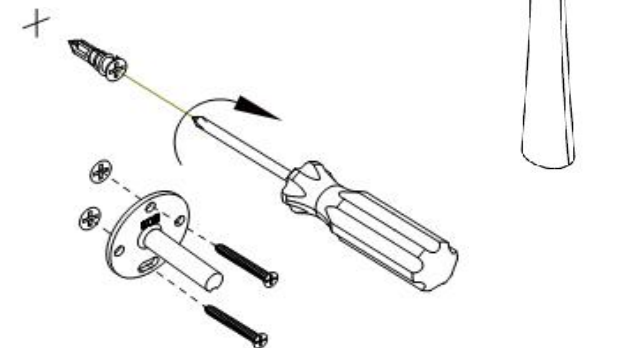


④ TILE OR SOLID WALL INSTALLATION


USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

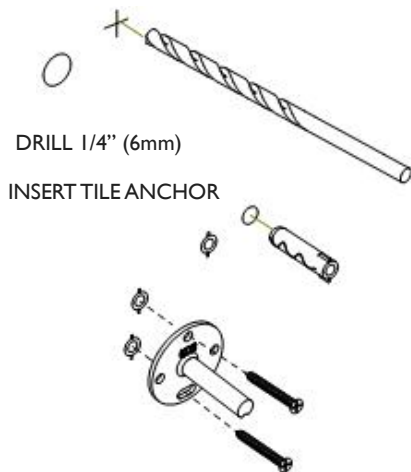

⑤ INSTALL PRODUCT ONTO BRACKETS

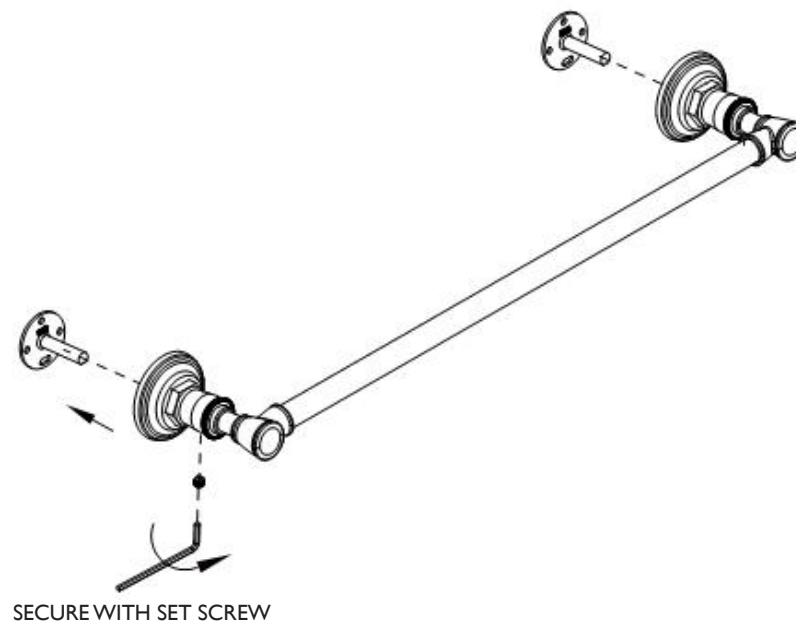

SECURE WITH SET SCREW