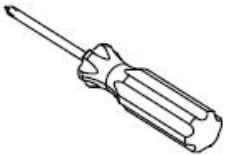
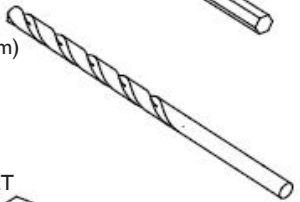
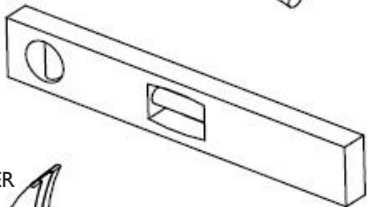
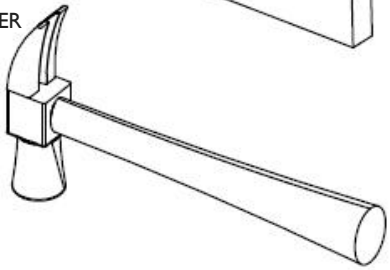


ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 4	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 4	PEN / PENCIL	
#8 SCREW		X 4	1/4" (6mm) DRILL	
MOUNTING BRACKET		X 2	LEVEL SET	
M6 X 1 SET SCREW		X 2	HAMMER	
3MM ALLOY STEEL HEX KEY		X 1		
TISSUE HOLDER		X 1		

INSTALLATION INSTRUCTIONS

40-28

TISSUE HOLDER

NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™

2001 CARNEGIE AVE, SANTA ANA CA 92705


(949) 417-5207

(949) 417-5207


WWW.NEWPORTBRASS.COM

NWP-40-28
EN-2717
REV -

① REMOVE MOUNTING BRACKETS

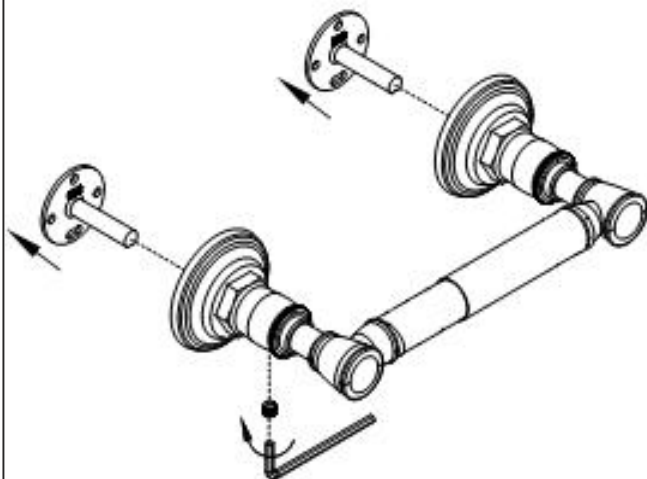

② ALIGN MOUNTING BRACKETS AND MARK LOCATION

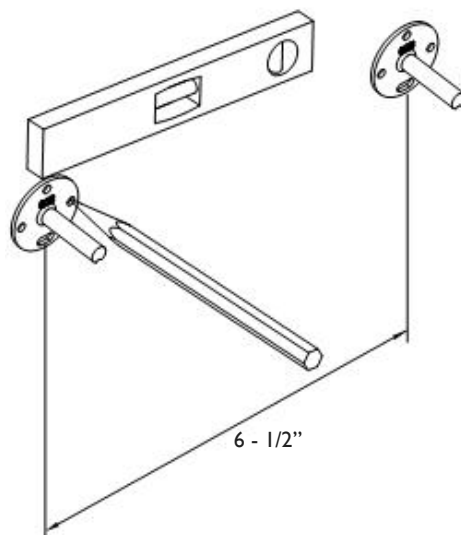


③ DRY WALL INSTALLATION

DO NOT DRILL



USE MARKS
MADE IN STEP 2

TAP IN UNTIL
THREADS ARE
REACHED

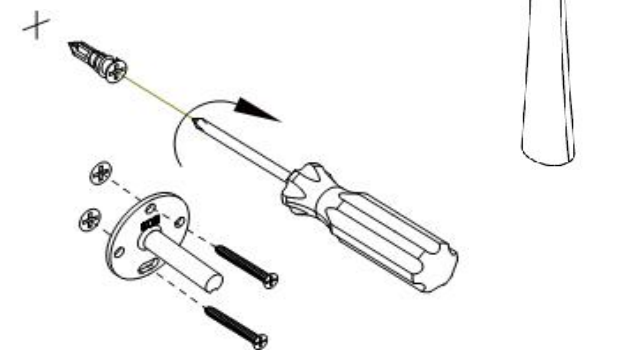


④ TILE OR SOLID WALL INSTALLATION


USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

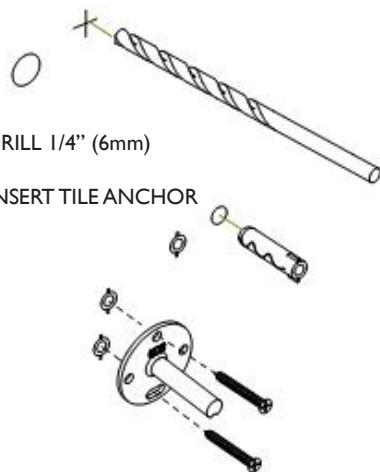

⑤ INSTALL PRODUCT ONTO BRACKETS

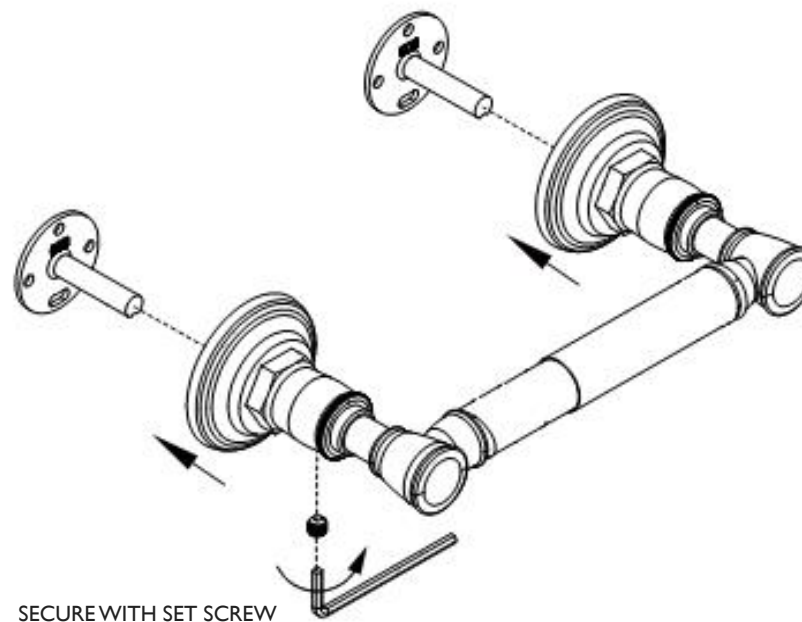

SECURE WITH SET SCREW