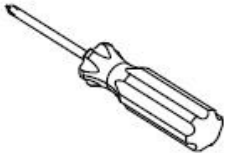
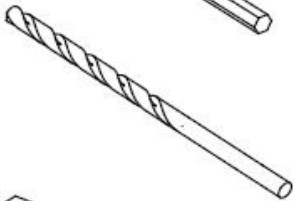
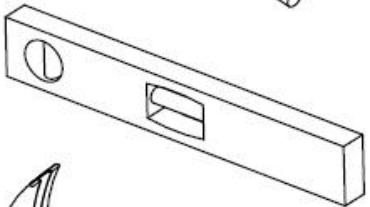
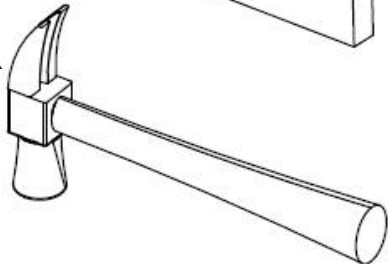
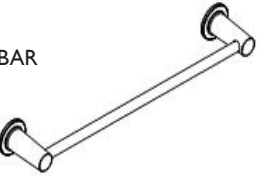


ITEMS INCLUDED			TOOLS REQUIRED	
DRY WALL ANCHOR		X 4	PHILLIPS SCREW DRIVER	
TILE ANCHOR		X 4	PEN / PENCIL	
#8 SCREW		X 4	1/4" (6 mm) DRILL	
MOUNTING BRACKET		X 2	LEVEL SET	
M6 X 1 SET SCREW		X 2	HAMMER	
3MM ALLOY STEEL HEX KEY		X 1		
TOWEL BAR		X 1		

NWP-42-01
EN-3133
REV -

INSTALLATION INSTRUCTIONS

42-01, 42-02

TOWEL BAR

NEWPORT BRASS
Flawless Beauty. From Faucet to Finish.™


2001 CARNEGIE AVE, SANTA ANA CA 92705

(949) 417-5207


(949) 417-5207

WWW.NEWPORTBRASS.COM

① REMOVE MOUNTING BRACKETS

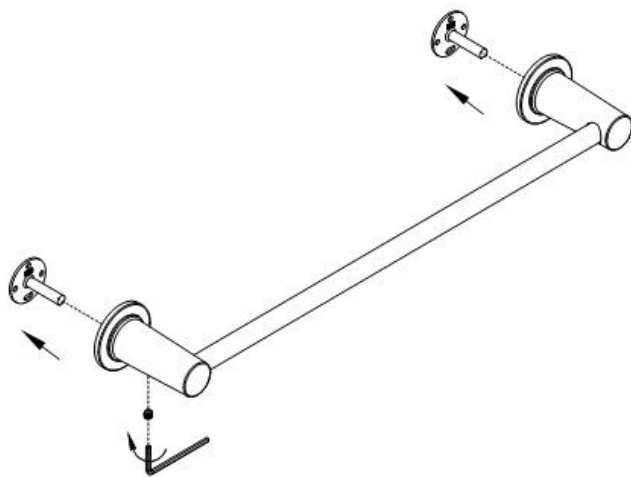

② ALIGN MOUNTING BRACKETS AND MARK LOCATION

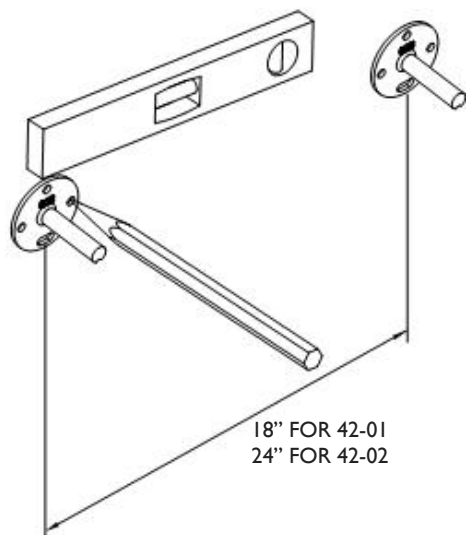

③ DRY WALL INSTALLATION




④ TILE OR SOLID WALL INSTALLATION

USE MARKS MADE IN STEP 2

DRILL 1/4" (6mm)

INSERT TILE ANCHOR

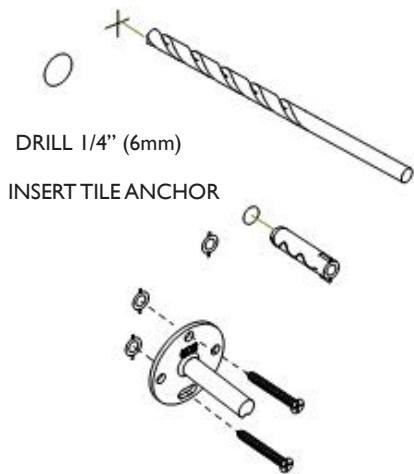

⑤ INSTALL PRODUCT ONTO BRACKETS

