


INSTALLATION INSTRUCTIONS

CENTER SET BAR FAUCET

MODEL No: 808, 2018

NEWPORT BRASS.
Proven Quality. Since 1921. In Oregon.

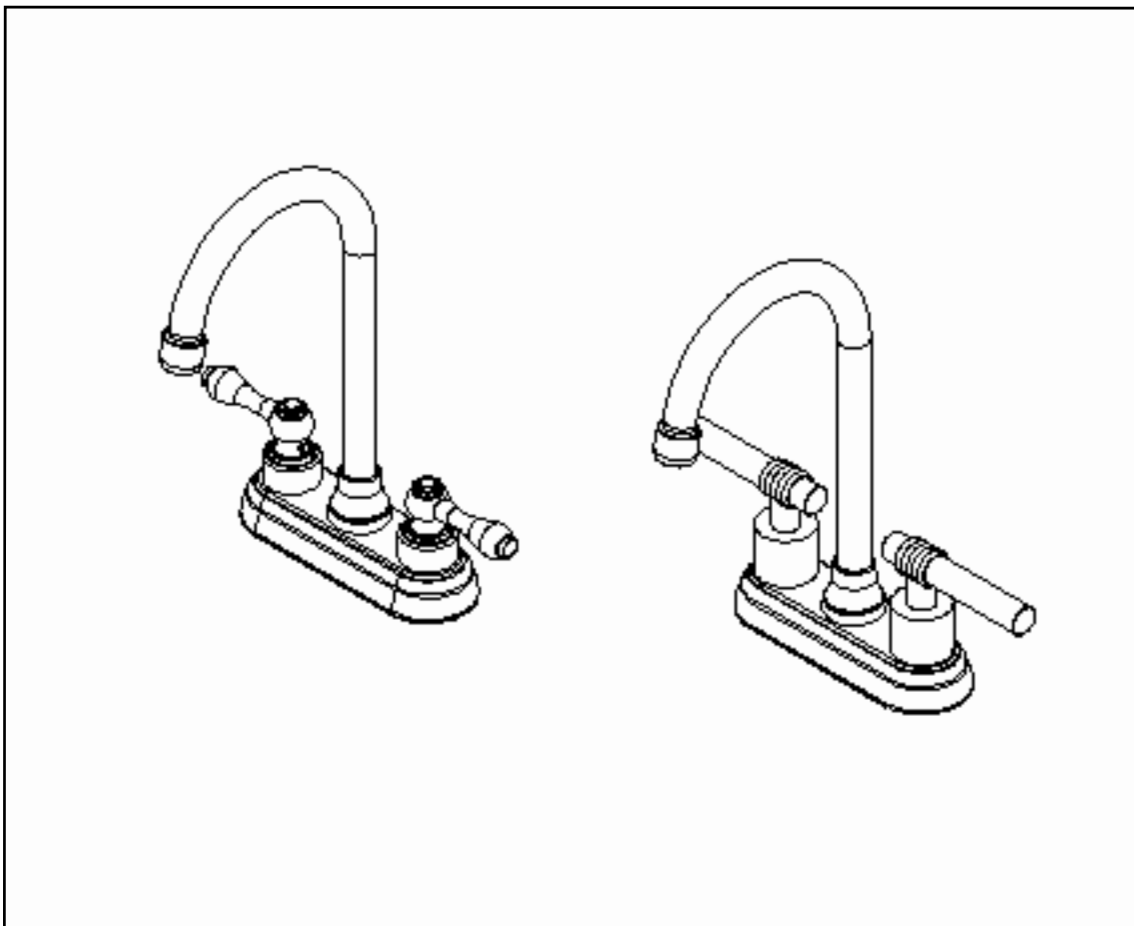

Congratulations on the purchase of this Newport Brass product, an excellent choice, that will give you years of quality service and enhance the look and style of your home.

Recommended Installation by a Professional Plumbing Contractor

Note: The use of petroleum base plumbers putty on our products will nullify the warranty. We recommend the use of clear silicone sealing materials. Recommended deck thru hole Ø 1.25".

1. Place the spout assembly SHANK (1) through holes of mounting surface. Secure into place with flange NUT (2). See Figure 1.
2. Connect hot/cold water supply to appropriate spout SHANK (1), utilizing one of the three following types of risers. **Supply risers not included.** See Figure 2.
 - a. 1/2" IPS flexible riser: discard rubber nosecone WASHER (3), friction WASHER (4) and coupling NUT (5).
 - b. 3/8" or 1/2" OD bullnose riser: utilize friction WASHER (4) and coupling NUT (5).
 - c. 1/2" copper riser: utilize rubber nosecone WASHER (3), friction WASHER (4) and coupling NUT (5). Attach hot/cold water supply hoses (not included) to appropriate faucet nipple, utilizing washer, nosecone washer, and slip joint nut..
3. Attach other end of supply tube/hose to existing wall valves.
4. Remove AERATOR (6) from spout, turn on water supply, and flush both valves until water is clear. Check for leaks and make any final adjustments required. Re-attach AERATOR (6) to the spout.

